



VIZIO

WHERE VISION MEETS VALUE

VR1

REMOTE CONTROL



Table of Contents

1.1 VIZIO Remote Control.....	3
1.1.1 Insertion of Batteries in the Remote Control.....	5
1.1.2 Remote Control Range.....	5
1.1.3 VIZIO Remote Control Precautions	5



1.1 VIZIO Remote Control

REMOTE LED – Blinks when the remote operates.

POWER – Press this button to turn the TV on from the Standby mode. Press it again to return to the Standby mode.

NUMBER BUTTON PAD – Use these buttons to select a channel or enter a password. The TV will switch to the channel entered automatically within a few seconds, or immediately if the OK button is pressed.

INPUT – This button allows the user to select the video input signal source.

- **(Dash)** – Use this button for the separation (-) of main and sub-channels when selecting a digital channel directly. For example, channel 28-2 would be selected by the following button sequence: 2, 8, (-), 2.

CH (+ or -) – These buttons change the channels up or down.

LAST – This button recalls the previously viewed channel.

MUTE – This button turns the sound on and off.


VOL (+ or -) – Press to increase (+) or decrease (-) the volume.

MENU – Use this button to access the On-Screen Display (OSD) menus.

INFO – This button displays the image and system information display.

GUIDE – This button displays program information. Note: this button is only functional for DTV.

EXIT – This button exits the On-Screen Display (OSD) menus.

 - These buttons navigate the On-Screen Display (OSD).

OK – Use this button to select your chosen option in On-Screen Display (OSD) menus or direct channel selection using the number buttons.



WIDE – This button cycles through the available screen formats. The options depend on the input being used and the model of the TV being controlled. Please refer to your specific TV User Manual for details.

SLEEP – This button allows the user to select the sleep options by adjusting the timer. The options depend on the input being used and the model of the TV being controlled. Please refer to your specific TV User Manual for details. The options depend on the input being used and the model of the TV being controlled. Please refer to your specific TV User Manual for details.

MTS – This button will select the MTS options of Stereo, SAP or Mono in TV mode and alternate audio channels, where available, in DTV mode.

CC – This button will select the Closed Caption mode. The options are OFF, CC1, CC2, CC3 or CC4.

TV – Press this button to select TV.

AV – Repeated pressing of this button will switch between AV1 (Composite, yellow RCA) and AV2 (S-Video) inputs.

COMPONENT – Press this button to select the Component (YPbPr) input source.

HDMI – Press this button to select HDMI input source.

ZOOM (- and +) – Use these buttons to increase or decrease the size of the picture. Note that in the zoom mode parts of the picture will not be visible because they extend beyond the edges of the screen.

FREEZE – Press this button to “Freeze-Frame” the current screen. Press this button again the continue playing.

RGB – This button selects a connected RGB Analog component such as a PC.

PIP – Use this button to activate the Picture-In-Picture mode.

PIP CH (- and +) – These buttons are used to select the channels within the PIP screen when DTV/TV is the PIP input selected.

AUDIO – Press this button to switch the audio from the main screen to the sub-screen while in PIP or POP mode.

PIP Input – Press the button to choose the PIP input. Note: The TV must be in PIP/POP mode for this button to be functional. For additional information regarding the PIP/POP options, see Picture-In-Picture (PIP) Mode in your specific TV User Manual.

PIP Size – Press this button to select the size of the PIP screen from one of the following: small, medium or large.

MODE – This button toggles thru the preset picture modes.

SWAP – Used to swap the video inputs from the main screen and the sub-screen while in PIP/POP mode.

NOTE: While this remote may be used with any model VIZIO TV, the functions outlined in this section may not be available, based on the specific model TV the remote is used with.



1.1.1 Insertion of Batteries in the Remote Control

Insert two AA batteries into the remote control. Make sure that you match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment. Re-attach the battery cover.

Precautionary Tips for Inserting the Batteries:

Only use the specified AA batteries.

Do not mix new and old batteries. This may result in cracking or leakage that may pose a fire risk or lead to personal injury.

Inserting the batteries incorrectly may also result in cracking or leakage that may pose a fire risk or lead to personal injury.

Dispose of the batteries in accordance with local laws and regulations.

Keep the batteries away from children and pets.



1.1.2 Remote Control Range

Point the remote control at the remote control sensor to transmit the commands.

Do not place any obstacles between the remote control and the receiver window.

The effective range of the remote control is approximately 26 feet (8 meters) from the front of the receiver window, about 13 feet (4 meters) when 30° to the left and right, 20° up and down.

1.1.3 VIZIO Remote Control Precautions

The remote control should be kept dry and away from heat sources. Avoid humidity.

If the TV responds erratically to the remote control or does not respond at all, check the batteries. If the batteries are low or exhausted, replace them with fresh batteries.

When not using the remote control for a long period of time, remove the batteries.

Do not take the batteries apart, heat them, or throw them into a fire.

Do not subject the remote control to undue physical stress, such as striking or dropping it.

Do not attempt to clean the remote control with a volatile solvent. Wipe it with a clean, damp cloth.





www.VIZIO.com

BRAVO, VIZIO, WHERE VISION MEETS VALUE AND THE V LOGO ARE TRADEMARKS OF VIZIO INC. PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE OR OBLIGATION. © 2008 VIZIO INC. ALL RIGHTS RESERVED.