

# VIZIO

XVT423SV  
XVT473SV  
XVT553SV

LED LCD **HDTV**

[www.VIZIO.com](http://www.VIZIO.com)



Dear VIZIO Customer,

Congratulations on your new VIZIO XVT423SV/XVT473SV/XVT553SV television purchase. To get the most out of your new VIZIO HDTV, read these instructions before making any adjustments, and retain them for future reference. We hope you will experience many years of enjoyment from your new VIZIO HDTV High Definition Television.

For assistance, call **877-MYVIZIO** (877-698-4946) or e-mail us at [www.VIZIO.com](http://www.VIZIO.com).

To purchase or inquire about accessories and installation services for your VIZIO HDTV, visit our website at [www.VIZIO.com](http://www.VIZIO.com) or call toll free at **888-849-4623**.

We recommend you register your VIZIO HDTV either at our website [www.VIZIO.com](http://www.VIZIO.com) or fill out and mail your registration card. For peace of mind and to protect your investment beyond the standard warranty, VIZIO offers on-site extended warranty service plans. These plans give additional coverage during the standard warranty period. Visit our website or call us to purchase a plan.

Write down the serial number located on the back of your HDTV for easy reference when obtaining warranty support:

|                 |                     |
|-----------------|---------------------|
| Serial #: _____ | Purchase Date _____ |
|-----------------|---------------------|

*HDMI logo and "High Definition Multimedia Interface" are registered trademarks of HDMI Licensing LLC.*

*Manufactured under license from Dolby Laboratories.*



*Dolby and the double-D symbol are trademarks of Dolby Laboratories.*



*TruSurround HD and TruVolume are trademarks of SRS Labs, Inc.*

*TruSurround HD and TruVolume technologies are incorporated under license from SRS Labs, Inc.*



This product qualifies for ENERGY STAR in the "factory default (Home Use)" setting and this is the setting in which power savings will be achieved. Changing the factory default picture setting or enabling other features will increase power consumption that could exceed the limits necessary to qualify for Energy Star rating.

**THE TRADEMARKS SHOWN HEREIN ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS; IMAGES USED ARE FOR ILLUSTRATION PURPOSES ONLY. VIZIO, THE V LOGO, WHERE VISION MEETS VALUE AND OTHER VIZIO TRADEMARKS ARE THE INTELLECTUAL PROPERTY OF VIZIO INC. PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE. © 2010 VIZIO INC. ALL RIGHTS RESERVED.**

## Important Safety Instructions

Your HDTV is designed and manufactured to operate within defined design limits. Misuse may result in electric shock or fire. To prevent your HDTV from being damaged, the following rules should be observed for the installation, use, and maintenance of your HDTV. Read the following safety instructions before operating your HDTV. Keep these instructions in a safe place for future reference.

- To reduce the risk of electric shock or component damage, switch off the power before connecting other components to your HDTV.
- Unplug the power cord before cleaning your HDTV. A damp cloth is sufficient for cleaning your HDTV. Do not use a liquid or a spray cleaner for cleaning your HDTV. Do not use abrasive cleaners.
- Always use the accessories recommended by the manufacturer to insure compatibility.
- When moving your HDTV from an area of low temperature to an area of high temperature, condensation may form in the housing. Wait before turning on your HDTV to avoid causing fire, electric shock, or component damage.
- Use only with the cart, stand, tripod, bracket, or table specified by manufacturer or sold with your HDTV. When a cart is used, use caution when moving the cart/HDTV combination to avoid injury from tip-over. Do not place your HDTV on an unstable cart, stand, or table. If your HDTV falls, it can injure a person and cause serious damage to your HDTV. Use only a cart or stand recommended by the manufacturer or sold with your HDTV.
- A distance of at least three feet should be maintained between your HDTV and any heat source, such as a radiator, heater, oven, amplifier etc. Do not install your HDTV close to smoke. Operating your HDTV close to smoke or moisture may cause fire or electric shock.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of your HDTV and to protect it from overheating, be sure these openings are not blocked or covered. Do not place your HDTV in a bookcase or cabinet unless proper ventilation is provided.
- Never push any object into the slots and openings on your HDTV cabinet. Do not place any objects on the top of your HDTV. Doing so could short circuit parts causing a fire or electric shock. Never spill liquids on your HDTV.
- Your HDTV should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- Do not apply pressure or throw objects at your HDTV. This may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.
- The power cord must be replaced when using different voltage than the voltage specified. For more information, contact your dealer.
- Your HDTV is equipped with a **three-pronged grounded plug (a plug with a third grounding pin)**. This plug will fit only into a grounded power outlet. This is a safety feature. If your outlet does not accommodate the three-pronged, have an electrician install the correct outlet, or use an adapter to ground your HDTV safely. **Do not defeat the safety purpose of the grounded plug.**
- When connected to a power outlet, power is always flowing into your HDTV. To totally disconnect power, unplug the power cord.



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of your HDTV that may be of sufficient magnitude to constitute a risk of electric shock to persons.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying your HDTV.



- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- The wall socket should be installed near your HDTV and easily accessible.
- Only power of the marked voltage can be used for your HDTV. Any other voltage than the specified voltage may cause fire or electric shock
- Do not touch the power cord during lightning. To avoid electric shock, avoid handling the power cord during electrical storms.
- Unplug your HDTV during a lightning storm or when it will not be used for long period of time. This will protect your HDTV from damage due to power surges.
- Do not attempt to repair or service your HDTV yourself. Opening or removing the back cover may expose you to high voltages, electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel.
- Keep your HDTV away from moisture. Do not expose your HDTV to rain or moisture. If water penetrates into your HDTV, unplug the power cord and contact your dealer. Continuous use in this case may result in fire or electric shock.
- Do not use your HDTV if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair your HDTV yourself.
- Avoid using dropped or damaged appliances. If your HDTV is dropped and the housing is damaged, the internal components may function abnormally. Unplug the power cord immediately and contact your dealer for repair. Continued use of your HDTV may cause fire or electric shock.
- Do not install your HDTV in an area with heavy dust or high humidity. Operating your HDTV in environments with heavy dust or high humidity may cause fire or electric shock.
- Follow instructions for moving your HDTV. Ensure that the power cord and any other cables are unplugged before moving your HDTV.
- When unplugging your HDTV, hold the power plug, not the cord. Pulling on the power cord may damage the wires inside the cord and cause fire or electric shock. When your HDTV will not be used for an extended period of time, unplug the power cord.
- To reduce risk of electric shock, do not touch the connector with wet hands.
- Insert batteries in accordance with instructions. Incorrect polarities may cause the batteries to leak which can damage the remote control or injure the operator.
- If any of the following occurs, contact the dealer:
  - The power cord fails or frays.
  - Liquid sprays or any object drops into your HDTV.
  - Your HDTV is exposed to rain or other moisture.
  - Your HDTV is dropped or damaged in any way.
  - The performance of your HDTV changes substantially.

## Television Antenna Connection Protection

### External Television Antenna Grounding

If an outside antenna/satellite dish or cable system is to be connected to the TV, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and static charges.


Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of the grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements of the grounding electrode.

### Lightning Protection

For added protection of the TV during a lightning storm or when it is left unattended or unused for long periods of time, unplug the TV from the wall outlet and disconnect the antenna or cable system.

### Power Lines

Do not locate the antenna near overhead light or power circuits, or where it could fall into such power lines or circuits.

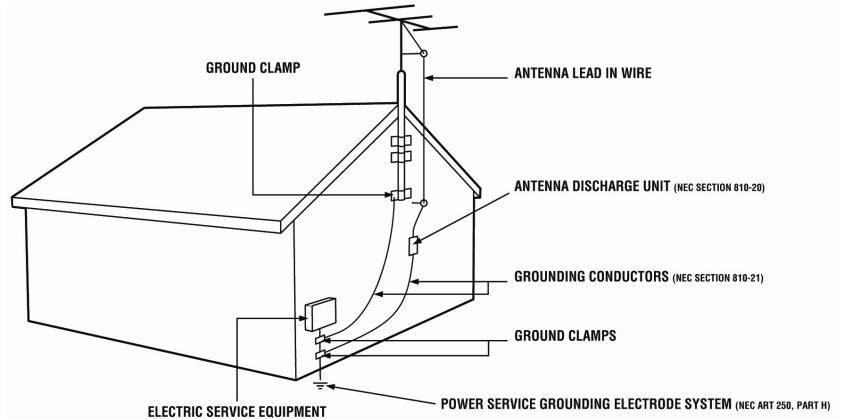

**Remember, the screen of the coaxial cable is intended to be connected to earth in the building installation.**

## Advisory of the DTV Transition

The nationwide switch to digital television broadcasting will be complete on June 12, 2009, but your local television stations may switch sooner. After the switch, analog-only television sets that receive TV programming through an antenna will need a converter box to continue to receive over-the-air TV. Watch your local stations to find out when they will turn off their analog signal and switch to digital-only broadcasting. Analog-only TVs should continue to work as before to receive low power, Class A or translator television stations and with cable and satellite TV services, gaming consoles, VCRs, DVD players, and similar products.

For additional information, contact the parties listed below, as appropriate:

FCC (US Federal Communications Commission)

<http://www.fcc.gov/>

Phone: 1-888-CALL-FCC (1-888-225-5322)

TTY: 1-888-TELL-FCC (1-888-835-5322)

Fax: 1-866-418-0232

E-mail: [fccinfo@fcc.gov](mailto:fccinfo@fcc.gov)

NTIA (National Telecommunications and Information Administration)

<http://www.ntia.doc.gov/>

1-888-DTV-2009

Listings of US Television Stations

<http://www.high-techproductions.com/usTVstations.htm>

**Note:** Your VIZIO HDTV is capable of receiving Digital Broadcasts, and no Digital Converter Box is required.

## Table of Contents

|  |           |
|--|-----------|
| Important Safety Instructions.....                                   | 2         |
| Television Antenna Connection Protection .....                       | 4         |
| Advisory of the DTV Transition.....                                  | 5         |
| <b>CHAPTER 1 SETTING UP YOUR HDTV .....</b>                          | <b>10</b> |
| Finding a Location for Your HDTV .....                               | 10        |
| Wall Mounting your HDTV .....  | 11        |
| <b>CHAPTER 2 BASIC CONTROLS AND CONNECTIONS.....</b>                 | <b>12</b> |
| Front Panel.....   | 12        |
| Jag Wheel Control.....   | 12        |
| Rear Panel Connections.....  | 13        |
| Side Panel Connections .....   | 14        |
| <b>CHAPTER 3 VIZIO REMOTE CONTROL .....</b>                          | <b>14</b> |
| Installing the Batteries .....                                       | 14        |
| Activating Your Bluetooth Remote .....                               | 14        |
| Remote Control Buttons .....   | 15        |
| Basic TV Functions .....   | 15        |
| A/V Functions.....   | 16        |
| VIA Functions.....   | 16        |
| Making it Your Universal Remote.....                                 | 17        |
| Remote Control Range.....  | 17        |
| VIZIO Remote Control Precautions.....                                | 17        |
| <b>CHAPTER 4 GETTING STARTED.....</b>                                | <b>18</b> |
| <b>CHAPTER 5 USING YOUR HDTV FOR THE FIRST TIME .....</b>            | <b>19</b> |
| Connecting to the Internet.....                                      | 19        |
| Select Input Source .....  | 19        |
| Watching a TV Program .....  | 19        |
| Viewing Digital TV Program Information .....                         | 20        |
| Exploring VIZIO Internet Apps (VIA) .....                            | 21        |
| <b>CHAPTER 6 CONNECTING EQUIPMENT .....</b>                          | <b>22</b> |
| Which Video Connection Should I Use? .....                           | 22        |
| Connecting Your Cable or Satellite Box.....                          | 23        |
| Using HDMI (Best).....   | 23        |
| HDMI Connections for Cable or Satellite Boxes with DVI .....         | 23        |
| Using Component Video (Better).....                                  | 24        |
| Using Composite Video (Good).....                                    | 24        |
| Using Coaxial (Antenna) (Good).....                                  | 24        |
| Connecting Your DVD Player.....                                      | 25        |
| Using HDMI (Best).....   | 25        |
| HDMI Connections for DVD Players with DVI .....                      | 25        |
| Using Component Video (Better).....                                  | 26        |
| Using Composite (AV) Video (Good).....                               | 26        |
| Connecting Coaxial (RF) .....  | 27        |
| Using Your Antenna or Digital Cable for Standard or Digital TV ..... | 27        |
| Connecting Your VCR or Video Camera.....                             | 27        |
| Connecting a Home Theater System .....                               | 28        |
| Using RCA.....   | 28        |
| Connecting the cables .....  | 28        |

|  |           |
|--|-----------|
| Turning TV speakers off.....                       | 28        |
| Using Optical (S/PDIF) .....                       | 28        |
| Connecting a Computer.....                         | 29        |
| RGB (VGA) .....                                    | 29        |
| Using HDMI.....                                    | 29        |
| Ethernet Connection.....                           | 30        |
| <b>CHAPTER 7 USING VIA .....</b>                   | <b>31</b> |
| Connecting to the Internet .....                   | 31        |
| Navigating the VIA Dock .....                      | 31        |
| Using VIZIO Internet Apps (VIA) .....              | 32        |
| Navigating Apps.....                               | 32        |
| Adding Apps.....                                   | 32        |
| Using Profiles.....                                | 33        |
| Updating your TV.....                              | 34        |
| <b>CHAPTER 8 ADJUSTING YOUR HDTV SETTINGS.....</b> | <b>35</b> |
| Using the On-screen Display (OSD) .....            | 35        |
| Input Menu.....                                    | 35        |
| Wide Menu .....                                    | 36        |
| Normal.....  | 36        |
| Panoramic.....                                     | 36        |
| Stretch Mode.....                                  | 36        |
| Zoom.....  | 36        |
| Zoom 1.....  | 36        |
| Zoom 2.....  | 36        |
| CC (Closed Caption) Menu .....                     | 37        |
| Analog Closed Caption .....                        | 37        |
| Digital Closed Caption .....                       | 37        |
| Digital CC Style.....                              | 37        |
| Sleep Timer Menu .....                             | 37        |
| TV Settings Menu.....                              | 37        |
| Input Source.....                                  | 37        |
| Picture.....                                       | 38        |
| Reset Picture Mode .....                           | 39        |
| Audio.....   | 40        |
| Advanced Audio.....                                | 40        |
| Tuner.....   | 41        |
| Name Input .....                                   | 42        |
| Device Setup.....                                  | 43        |
| Parental Controls .....                            | 43        |
| Menu Language.....                                 | 45        |
| Time & Local Settings.....                         | 45        |
| PIP Menu.....                                      | 46        |
| PIP Mode .....                                     | 46        |
| Source.....  | 46        |
| Position .....                                     | 46        |
| Size .....   | 46        |
| Audio.....   | 46        |
| Network Menu .....                                 | 47        |
| Wired Connection .....                             | 47        |
| Manual Setup.....                                  | 47        |
| Wireless Connection .....                          | 47        |
| Bluetooth Menu.....                                | 48        |
| Help Menu .....                                    | 49        |
| System Info .....                                  | 49        |



|  |           |
|--|-----------|
| Reset TV Settings .....                                | 49        |
| Clear Memory (Factory Default) .....                   | 49        |
| Guided Setup .....                                     | 49        |
| <b>CHAPTER 9 MAINTENANCE AND TROUBLESHOOTING .....</b> | <b>50</b> |
| Cleaning the TV and Remote Control .....               | 50        |
| Troubleshooting Guide .....                            | 50        |
| TV/Display Troubleshooting .....                       | 50        |
| Audio Troubleshooting .....                            | 53        |
| Bluetooth Troubleshooting .....                        | 53        |
| VIZIO Internet Apps Troubleshooting .....              | 53        |
| Remote Control Troubleshooting .....                   | 54        |
| Internet Connection Troubleshooting .....              | 54        |
| Media Viewer Troubleshooting .....                     | 55        |
| Telephone & Technical Support .....                    | 55        |
| Compliance .....                                       | 56        |
| FCC Class B Radio Interference Statement .....         | 56        |
| <b>CHAPTER 10 SPECIFICATIONS .....</b>                 | <b>57</b> |
| XVT423SV Specifications .....                          | 57        |
| XVT473SV Specifications .....                          | 58        |
| XVT553SV Specifications .....                          | 59        |
| Preset PC Resolutions .....                            | 61        |
| Resolution through RGB Input .....                     | 61        |
| <b>WARRANTY .....</b>                                  | <b>62</b> |
| <b>INDEX .....</b>                                     | <b>63</b> |

## Opening the Package

Your HDTV and its accompanying accessories are carefully packed in a cardboard carton that has been designed to protect it from transportation damage. After you have opened the carton, check that your HDTV is in good condition and that all of the contents are included.

The screen can easily be scratched or broken, so handle your HDTV gently and never place your HDTV with the glass facing downwards on a surface without protective padding.

**IMPORTANT:** Save the carton and packing material for future shipping.

## Package Contents

- VIZIO XVT423SV, XVT473SV, or XVT553SV
- VIZIO remote control VUR10
- AA batteries for the remote control (2)
  
- Power cord
- VIZIO cloth
- Safety strap
- This user manual
- Quick Setup Guide
- Registration Card



## HDTV Accessories and Services

**Additional certified accessories for your HDTV are sold separately, including:**

- Wall mounts
- High Definition cables
- Extra or replacement remote controls
- Sound Bars
- Blu-ray DVD Players

VIZIO also offers installation services and extended warranty services for your HDTV.

To purchase or inquire about additional accessories and services for your VIZIO HDTV, visit our website at [www.VIZIO.com](http://www.VIZIO.com) or call us toll free at **877-MYVIZIO** (877-698-4946).

**Caution:** Do not apply pressure or throw objects at your HDTV (including game controllers). This may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

## Chapter 1 Setting Up Your HDTV

### Finding a Location for Your HDTV

The power consumption of your HDTV is about 147W AVG (XVT423SV), 189W AVG (XVT473SV) or 225W AVG (XVT553SV).

- Use the included power cord.
- When an extension cord is required, use one with the correct power rating. The 3-pronged cord must be grounded and the grounding feature (3<sup>rd</sup> prong) must not be compromised.
- To take full advantage of your TV, you will need an Internet connection. Set up the Internet connection using the initial *Setup App* or the Network Menu in the *HDTV Settings App*. Your HDTV has 802.11n dual-band wireless built-in (which is also compatible with 802.11b and 802.11g wireless networks), so you can connect your TV to the Internet through your wireless home network. Or you can connect to the Internet by plugging in an Ethernet cable from your Internet connection to the Ethernet port on your HDTV. A wired connection may provide a more consistent connection depending on the conditions in your home environment. See *Network Menu* on page 47 for detailed information on setting up your Internet connection.
- Install your HDTV on a flat surface to avoid tipping.
- For proper ventilation, you must allow space between the back of your HDTV and the wall.
- Avoid installing your HDTV in places with high humidity, dust, or smoke so you do not shorten the service life of the electronic components.
- Install your HDTV in a level, landscape orientation, with the VIZIO logo at the bottom to prevent poor ventilation and excessive component damage.
- If you want to mount your HDTV on the wall, see below for additional information.
- Read this user manual carefully before installing your HDTV.

VIZIO offers professional installation services including home networking. Contact VIZIO for more information on these services at **877-MYVIZIO** (877-698-4946) or [www.VIZIO.com](http://www.VIZIO.com).

## Wall Mounting your HDTV

Your HDTV can be mounted on the wall for viewing. If you choose to mount your HDTV on the wall, follow the instructions below.

1. Write down the serial number located on the back of your HDTV in the space provided on page 1 to have it handy if you need to call for support.
2. Remove the stand base and neck:
  - a. Disconnect the cables from your HDTV.
  - b. Place your HDTV face down on a soft, flat surface to prevent damage to the screen.
  - c. Remove the four screws holding the stand neck, and then remove the neck and base.

**Note:** To remove the base from the neck, unscrew thumbscrew on bottom.

3. Mount your HDTV on the wall:
  - a. Attach your HDTV to a wall mount (sold separately) using the mounting holes in the back panel of your HDTV.
  - b. Read the instructions that came with your specific wall mount to properly hang your HDTV.



| Wall Mounting Specifications - XVT423SV |                                    |
|---|------------------------------------|
| Screw Size                              | M6                                 |
| Screw Length                            | 16.0 mm                            |
| Screw Pitch                             | 1.0 mm                             |
| Hole Pattern                            | VESA standard 200 x 200 mm spacing |

| Wall Mounting Specifications – XVT473SV |                                    |
|---|------------------------------------|
| Screw Size                              | M6                                 |
| Screw Length                            | 16.0 mm                            |
| Screw Pitch                             | 1.0 mm                             |
| Hole Pattern                            | VESA standard 200 x 200 mm spacing |

| Wall Mounting Specifications – XVT553SV |                                    |
|---|------------------------------------|
| Screw Size                              | M8                                 |
| Screw Length                            | 16.0 mm                            |
| Screw Pitch                             | 1.25 mm                            |
| Hole Pattern                            | VESA standard 200 x 400 mm spacing |

## Chapter 2 Basic Controls and Connections

### Front Panel

1. **Remote Control Sensor**—Point the remote control directly at this window on the lower left corner of your HDTV for the best response to the remote signal.
2. **POWER 'VIZIO' LIGHT**—The VIZIO name lights white when powered on and orange when powered off.




### Jag Wheel Control

The Jag wheel on the side of your HDTV performs all of the same functions you might see as buttons on other TVs, including volume, power, input source, and channel change. All of these functions have been combined into a single wheel on your XVT423SV/XVT473SV/XVT553SV.

- Press the Jag wheel once to turn your HDTV on.
- Press and hold the Jag wheel for three seconds to turn your HDTV off.
- When watching TV, scroll the Jag wheel up and down to turn the volume up and down.
- To open the Quick Menu, press the Jag wheel for two seconds, scroll the wheel up and down to highlight an option, and then press in the wheel again to confirm your selection. If you do not press anything, the menu will automatically close after 10 seconds.




- **Volume**—Press to increase or decrease the speaker volume.
- **Channel**—Press to open a channel list. Choose the channel with the wheel and then press the wheel to go to that channel.
- **Input Source**—Press to cycle through the various devices connected to your TV (called Inputs). The inputs cycle in the following sequence: TV, AV, Comp, HDMI-1, HDMI-2, HDMI-3, HDMI-4, HDMI SIDE, and RGB. After you have stepped through the entire sequence, you will return to the beginning.
- **Exit**—Press to close the Quick Menu.
- **Power Off**—Press to turn your HDTV off.

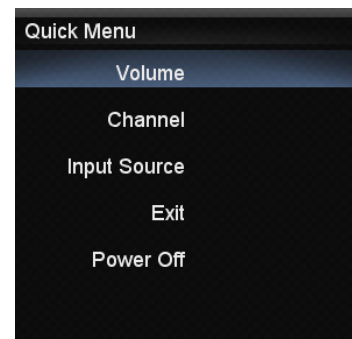

**Note:** The Jag wheel does not operate in the OSD menu. Please use your remote control to change your HDTV settings.


## Rear Panel Connections

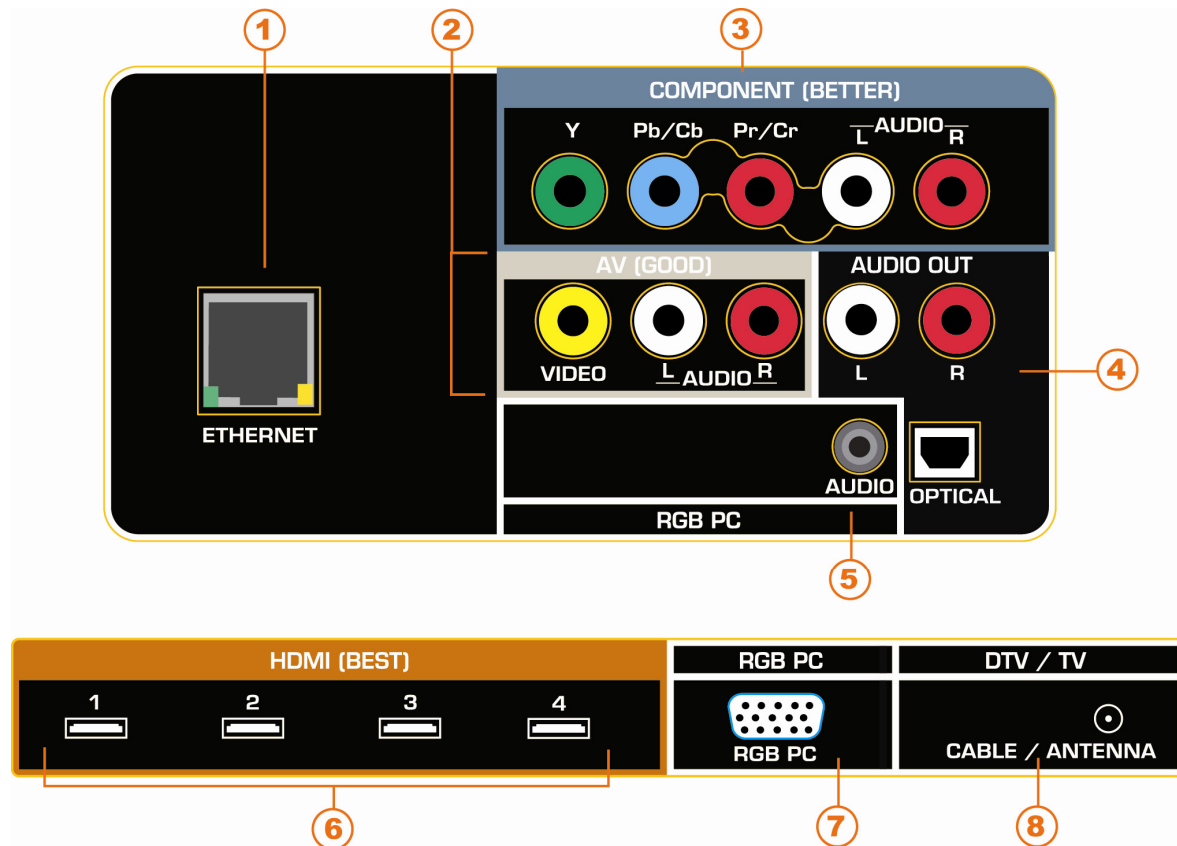

1. **ETHERNET**—Connect an Ethernet cable to access the Internet. Set up the Internet connection using the initial *Setup App* or the Network Menu in the *HDTV Settings App*. Your HDTV also has 802.11n wireless, so you can connect your TV to the Internet through you wireless home network. See *Network Menu* on page 47 for detailed information on setting up your Internet connection.
  2. **AV**—Connect Composite video devices, such as a VCR or game console. Use the white and red connectors to connect the external audio from the same source.
  3. **COMPONENT (Y Pb/Cb Pr/Cr with L/R Audio)**—Connect Component video devices such as a DVD Player or Set Top Box here.
  4. **AUDIO OUT:**
    - a. **OPTICAL**—Connect the audio from the HDTV to an external device equipped with an Optical input, such as a Vizio Sound Bar, Home Theater System, external amplifier, or stereo.
    - b. **ANALOG L/R**—Connect the audio from the HDTV to an external device, such as a Home Theater System, external amplifier, or stereo. Speakers cannot be connected directly here.
  5. **RGB PC AUDIO**—Connect a 1/8" mini plug stereo connector from the computer to the TV if you want the sound to come from the HDTV speakers.
  6. **HDMI 1, 2, 3, and 4**—Connect digital video devices such as a DVD player or Set-Top Box through this all digital connector. There is an additional HDMI connector on the side.
- Note:** Only HDMI 1 is ARC (Audio Return Channel) enabled. Refer to manual for the ARC connected device for additional information.
7. **RGB PC VIDEO**—Connect the video from a computer here.
  8. **DTV/TV**—Connect to an antenna or digital cable source. For digital TV stations in your area visit [www.antennaweb.org](http://www.antennaweb.org). For Cable and Satellite Set Top Boxes, we recommend that you use a HDMI or Component cable connection for high definition image quality.

## Side Panel Connections

1. **USB 1, 2, and 3:**
  - Reserved for future functions.
  - Service port for use by a professional service technician.
2. **HDMI SIDE**—Connect digital video devices such as a DVD player or Set-Top Box through this all digital connector. There are additional HDMI connectors on the back.

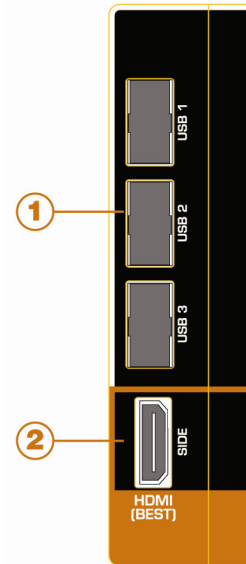

## Chapter 3 VIZIO Remote Control

Your new VIZIO HDTV comes with an IR / Bluetooth-enabled universal remote that lets you interact with Internet content delivered to your HDTV. You can also use it to program other A/V devices connected to your TV, such as DVD or Blu-ray player, Cable/Satellite set-top box, DVR, home theater, and more.

### Installing the Batteries

1. Remove the battery cover.
2. Insert two AA batteries into the remote control. Make sure that you match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment
3. Replace the battery cover.

#### Precautionary Tips for Inserting the Batteries:

- Only use quality AA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage that may cause a fire or lead to personal injury.
- Inserting the batteries incorrectly may also result in cracking or leakage that may cause a fire or lead to personal injury.
- Dispose of batteries according to local hazardous waste regulations.
- Keep the batteries away from children and pets.



### Activating Your Bluetooth Remote

You will activate your Bluetooth remote control in the *Setup App*. Follow the instructions on the screen to complete the activation.

You can also activate your remote control using the *HDTV Settings App*. See *Bluetooth Menu* on page 48 for more information on activating your remote control.

## Remote Control Buttons

### Basic TV Functions

**INPUT**—Press to cycle through the various devices connected to your TV (called Inputs). You can name your inputs when you set them up during the *HDTV Settings App*. The inputs cycle in the following sequence: **TV**, **AV** (Composite), **COMP** (Component), **HDMI-1**, **HDMI-2**, **HDMI-3**, **HDMI-4**, **HDMI side**, and **RGB** (VGA). Once you have stepped through the entire sequence, you will return to the beginning.

**Device Power** (⏻ next to INPUT button)—Press to turn the device connected to the active input (i.e. HDMI, COMP) ON and OFF. The device must first be set up during the *Setup App* or using *Device Setup* in the *HDTV Settings App*.

**Power** (⏻ top right corner)—Press to turn the TV on from the standby mode. Press it again to return to standby mode.

**LIST**—Press to display a list of available channels. If a DVR has been programmed to work with this remote, this button will display the list of recorded programs.

**INFO**—Press to display program information. If a device has been programmed to work with this remote, this button will act as the INFO button for that device.

**EXIT**—Press to exit from open menus.

**MENU**—Press to launch the *VIZIO Internet Apps (VIA) Dock* on the bottom of the TV, including the *HDTV Settings App*, used to make adjustments to your TV. This button also opens the menu for the device connected to the active input (i.e. HDMI, COMP).

⬆️⬆️⬆️⬆️ Press to navigate open menus, adjust other TV settings such as brightness and contrast, or turn menu options on and off.

**OK**—Press to select an option in the menu.

**BACK**—Press to go back to the previous page in open menus.

**GUIDE**—Press to display detailed information when viewing a digital TV program.

**YELLOW**—Press to perform the same function as the “A” button on your Cable/Satellite box.

**BLUE**—Press to perform the same function as the “B” button on your Cable/Satellite box.

**RED**—Press to perform the same function as the “C” button on your Cable/Satellite box.

**GREEN**—Press to perform the same function as the “D” button on your Cable/Satellite box.

**VOL ▲/▼**—Press to turn the volume up or down.

**VIA**—Press to launch the *VIZIO Internet Apps (VIA) Dock* on the bottom of the TV, including the *HDTV Settings App*, used to make adjustments to your TV. This button also opens the menu for the device connected to the active input (i.e. HDMI, COMP).

**MUTE**—Press to turn the sound on and off.

**LAST**—Press to recall the previously viewed channel.

**CH ▲/▼**—Press to change the channels up or down.

**Number Button Pad**—Press to select a channel or enter a password.





**PIP**—Press to activate the picture-in-picture feature. The screen will display the sub-screen in the corner over the main screen. Press it again to display the POP (Picture Outside Picture) option.

**—(DASH)**—Press to insert a dash between the main and sub-channels. For example, digital channel 28-2 would be selected by the button sequence 2, 8, DASH, 2.

### A/V Functions

Use these buttons on your remote control to control your pre-programmed DVR, DVD Player or Cable/Satellite Box.

**Fast Reverse** (◀◀)—Press to reverse playback.

**Pause** (||)—Press to pause playback.

**Play** (▶)—Press to start playback.

**Fast Forward** (▶▶)—Press to skip to the next chapter.


(●)—Press to begin recording.

**Stop** (■)—Press to stop playback/recording.



### VIA Functions

Use these buttons on your remote control to control the VIZIO Internet Apps (VIA) functions on your HDTV. See *Using VIA* on page 31 for more information about the VIA functions on your HDTV.

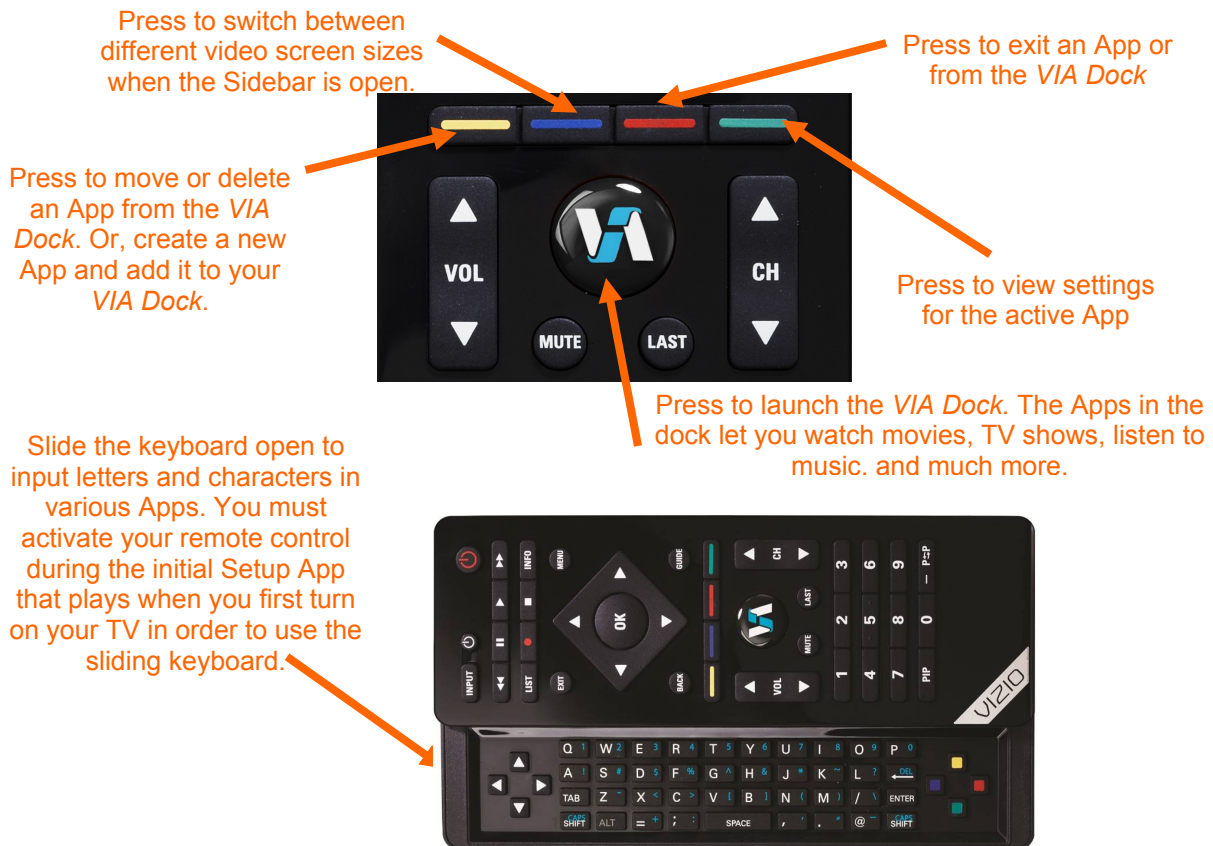

## Making it Your Universal Remote

The Setup App that runs when you first turn on your TV will help you set up your various devices that are connected to your HDTV, so that you can use your VIZIO remote control for all of your devices.

You can also set up your devices by accessing the *HDTV Settings App*. See *Device Setup* on page 43 for more information on setting up your remote.

## Remote Control Range

### When in IR mode (factory default):

- Point the remote control directly at the sensor for the best response to the remote signal.
- Do not place any obstacles between the remote control and the remote control sensor.
- The effective range of the remote control is approximately 30 feet (10 meters) from the front of the remote control sensor, 30° to the left and right, 20° up and down.



### When in Bluetooth mode:

- Your remote control also has Bluetooth and when paired with your HDTV, allows you to point the remote control anywhere to control the TV.
- The effective range of the remote control is approximately 30 feet (10 meters) from the front of the remote control sensor.

## VIZIO Remote Control Precautions

- The remote control should be kept dry and away from heat sources. Avoid humidity.
- If the TV responds erratically to the remote control or does not respond at all, check the batteries. If the batteries are low or exhausted, replace them with fresh batteries.
- When not using the remote control for a long period of time, remove the batteries.
- Do not take the batteries apart, heat them, or throw them into a fire.
- Do not subject the remote control to undue physical stress, such as striking or dropping it.
- Do not attempt to clean the remote control with a volatile solvent. Wipe it with a clean, damp cloth.

## Chapter 4 Getting Started

Your VIA-enabled HDTV has a built-in *Setup App* that plays when you turn on your TV for the first time. Follow the on-screen directions to easily setup your new HDTV.

1. Insert batteries into the remote control.
2. Connect the power cord to the power cord connector on your HDTV, and then plug the power cord into an AC wall socket.
3. Gather the devices you want to connect to your HDTV. Don't connect them yet. We will help you do that in the *Setup App*.
4. Turn on your TV. The *Setup App* will automatically play and guide you thru the initial setup of your HDTV. Use the arrow and **OK** buttons to navigate through the *Setup App*. During the setup process you will:
  - Activate your new remote control for Bluetooth
  - Connect to the Internet
  - Add your TV channels (unless you have a Cable/Satellite set-top box)
  - Connect your devices and set up your remote to control them



## Chapter 5 Using your HDTV for the first time

### Connecting to the Internet


Set up the Internet connection using the initial *Setup App* or the *Network Menu* in the *HDTV Settings App*. Your HDTV has 802.11n dual-band wireless, so you can connect your TV to the Internet through your wireless home network. Or you can also connect to the Internet by plugging in an Ethernet cable from your Internet connection into the Ethernet port on your HDTV. A wired connection may provide a more consistent connection depending on the conditions in your home environment. See *Network Menu* on page 47 for detailed information on setting up your Internet connection.

### Select Input Source

Select the input source for your HDTV by pressing **INPUT** on the remote control or the side of your TV. Pressing this button will cycle you through the following options: TV, AV, Comp, HDMI-1, HDMI-2, HDMI-3, HDMI-4, HDMI SIDE, and RGB.

Turn on your device and you will see a picture on your HDTV. If there is no picture, make sure you have selected the correct input on your HDTV.

**Note:** If the selected device is RF connected, your HDTV must be in **TV** mode and on either channel 3 or channel 4 matching the channel which has been selected on the back of the VCR, Cable Box, External TV Tuner or Satellite Receiver. Refer to Owner or User's Manual of such equipment for details.

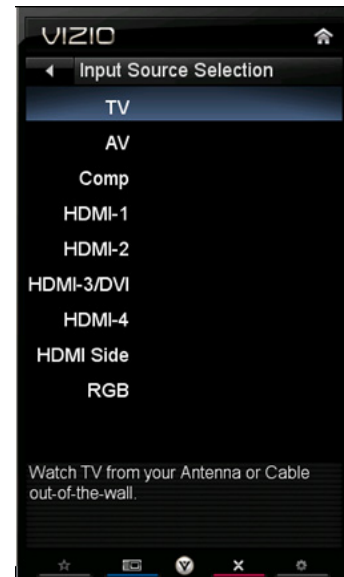

### Watching a TV Program

Before you start watching TV, make sure that any Cable, Satellite or off-air antenna connections are secure. Also, verify that the power cord is plugged into a correctly grounded electrical outlet or surge protector.

1. Press the power button on the remote control. The VIZIO logo on the front will light up white.
2. Select the input to which your device is connected that provides TV programming (e.g. TV, HDMI, COMP).

**Note:** You should be able to see a picture. If you do not, make sure that all of your HDTV connections are secure and you have selected the correct video input source. Each press of **INPUT** on the remote control will cycle through the available inputs. Press the button until the input associated with the device you want to view is shown.


3. When using the TV input, press the channel buttons on the remote control or press the Jag wheel on the TV to launch the Quick Menu to change the channel. The channel buttons will not work if you are watching a program using HDMI, Component, or AV inputs.

**Note:** If your HDTV is in **TV** mode, pressing **CH+** and **CH-** will not work until a channel scan has been run. See *Auto Channel Search* on page 41.

## Viewing Digital TV Program Information

When the channel is changed an information header is shown over the picture for a few seconds. Press **GUIDE** to display more information about the program and schedule. Press **INFO** repeatedly to display additional information for that channel.

|  |           |        |           |           |         |
|--|-----------|--------|-----------|-----------|---------|
| Time Warp: Mouse Trap  |           |        | Ch 50-123 | KCAL DTV  | CABLE   |
| 11:00 AM - 12:00 AM  | TV-PG (V) | CC-OFF | ENGLISH   | DOLBY 5.1 | 720p HD |
| In this hour-long special, the Time Warp team runs off to join the circus with trap-testing Rev. Tommy Gunn and with high-flying Cirque du Soleil, explore their inner stuntmen, and put everything but wood in a chipper. |           |        |           |           |         |

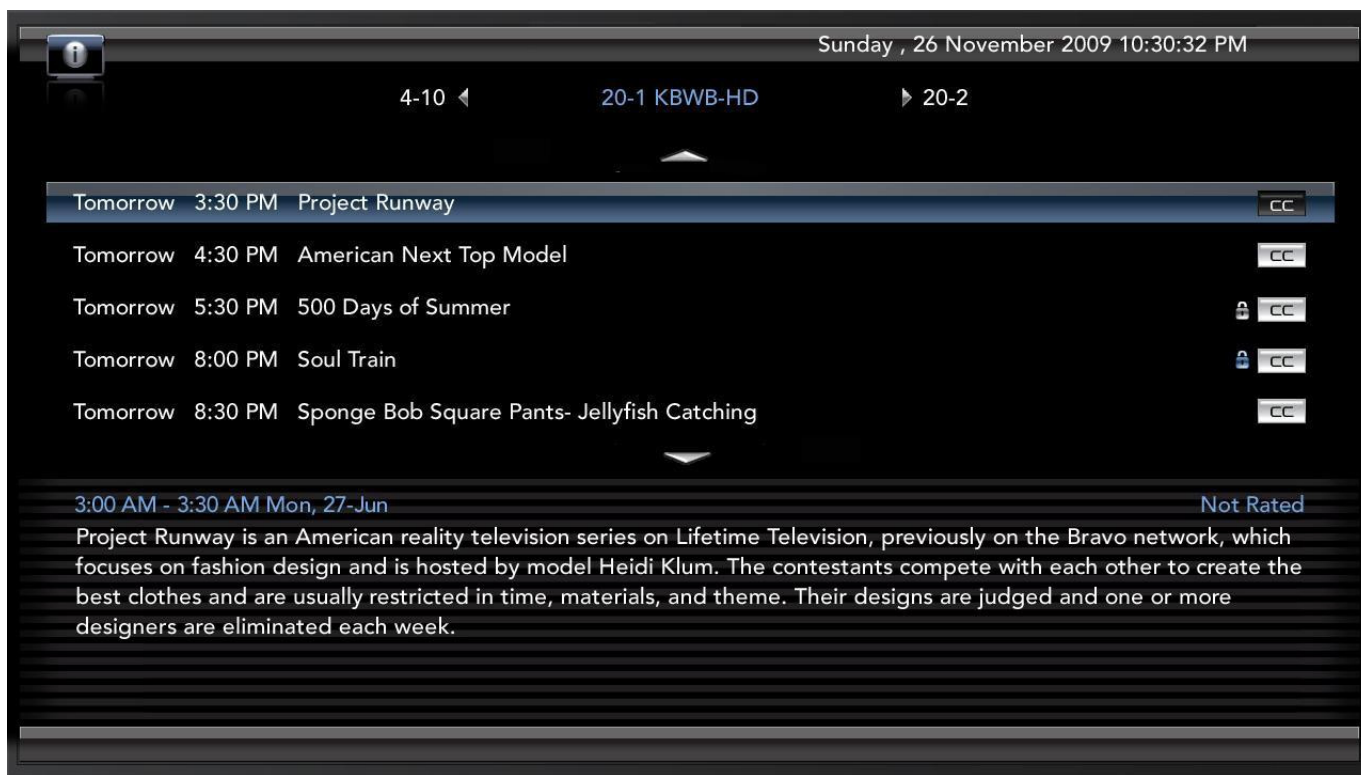

## Exploring VIZIO Internet Apps (VIA)




### VIA Sidebar

Select an App and press **OK** to launch the Sidebar. The Sidebar contents vary by App.

Press the VIA button to bring up the dock.

**VIA Dock**  
 Press ◀ or ▶ to scroll through all of the Apps in the VIA Dock. Press **OK** to open an App.

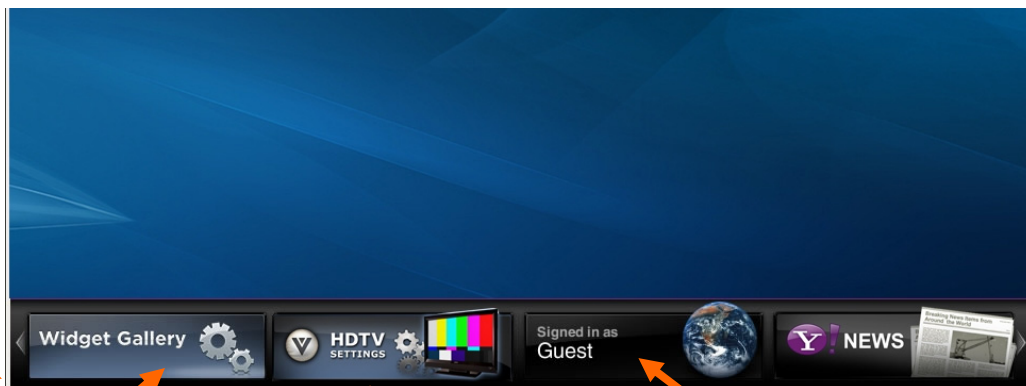

### Widget Gallery

Select this to discover more Apps and download them to the TV. This gallery is constantly being updated so check back often!

### HDTV Settings App

Adjust TV functions like brightness, contrast, Parental Controls, and Network settings.

### Profile App




 

Create a unique name, picture and set of Apps in the VIA Dock. Set up a profile for each member of your household.



## Chapter 6 Connecting Equipment

### Which Video Connection Should I Use?

You have six options for connecting your video equipment box to your HDTV from a basic connection to the most advanced for digital displays. Based on your Home Theater configuration, you can decide which option is the right one for you.

| Connection Quality (type)                | Connector   | Description  |
|--|---|--|
| Best (digital)                           |    | <b>HDMI</b> delivers the best image quality of any of the cable types available and it's all done over one cable. You get a great picture and cut down on your cable clutter. HDMI provides digital quality and amazing sound so if your TV has HDMI, this is the connection type you should be using.   |
| Best (digital)<br>-----<br>Good (analog) |    | Connect your <b>antenna</b> or <b>coaxial</b> cable to watch TV programming. This cable usually comes from your Cable box or right out of the wall.  |
| Best (analog)                            |   | The <b>RGB (VGA)</b> port allows you to connect your computer so you can use the TV as your monitor.   |
| Better (analog)                          |  | <b>Component</b> consists of three cables for transmitting video and two cables for transmitting audio: one red and one white. Component video provides a sharper image than Composite video and should be used instead of Composite when possible. However, because it is still an analog connection, it won't provide the highest quality video and audio that HDMI can produce. |
| Good (analog)                            |  | <b>Composite</b> consists of one yellow cable for transmitting video and two cables for transmitting audio: one red and one white. It is capable of transmitting stereo sound and standard definition video (480i). While it provides a good image, it has lower image quality than HDMI or Component. So try to use one of those connections first.                               |

**Note:** To maintain the display quality, use a VIZIO certified HDMI cable. This cable is available in 6, 8, and 12 foot lengths. Visit [www.vizio.com](http://www.vizio.com) or call 1-888-VIZIOCE (1-888-849-4623) for details.

## Connecting Your Cable or Satellite Box

### Using HDMI (Best)




Cable and Satellite Boxes that have a HDMI digital interface should be connected using HDMI for optimal results. To maintain image quality, use a VIZIO certified HDMI cable. This cable is available in 6, 15, and 30 foot lengths. Visit [www.VIZIO.com](http://www.VIZIO.com) or call **877-MYVIZIO** (877-698-4946) for details.

1. Turn off your HDTV and Cable/Satellite box.
2. Connect an HDMI cable to the **HDMI** output of your Cable/Satellite box and the other end to the **HDMI 1, 2, 3, 4, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your Cable/Satellite box.
4. Select **HDMI-1, HDMI-2, HDMI-3, HDMI-4, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

#### Note:

- The HDMI input on your HDTV supports High-bandwidth Digital Content Protection (HDCP). HDCP encrypts the transmission between the video source and the digital display for added security and protection.
- Refer to your Cable/Satellite Set Top Box user manual for more information about the video output requirements of the product or consult your Cable or Satellite operator.

### HDMI Connections for Cable or Satellite Boxes with DVI



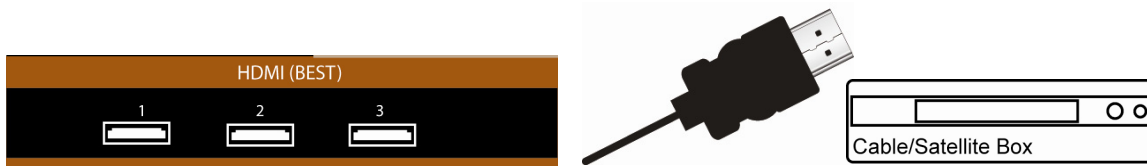


1. Turn off your HDTV and Cable/Satellite box.
2. Using a HDMI-DVI cable, connect the DVI end to your Cable/Satellite box and the HDMI end to the **HDMI 1, 2, 3, 4, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your Cable/Satellite box.
4. Select **HDMI-1, HDMI-2, HDMI-3, HDMI-4, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

**Note:** There are no dedicated audio ports for HDMI so there may or may not be audio from the TV with this connection.






### Using Component Video (Better)

 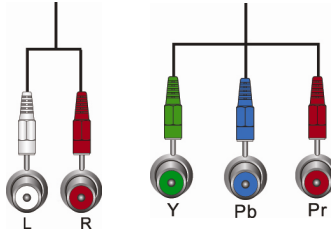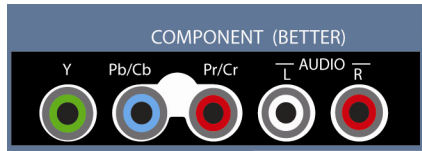


1. Turn off your HDTV and Cable/Satellite box.
2. Connect the Component cables (green, blue, and red) from your Cable/Satellite box to the **COMPONENT** jacks on your HDTV.
3. Connect the audio cables (white and red) from your Set Top Box to the **COMPONENT L** and **R AUDIO** jacks on your HDTV.
4. Turn on your HDTV and Cable/Satellite box.
5. Select **Comp** using the **INPUT** button on the remote control or side of the TV.

### Using Composite Video (Good)

 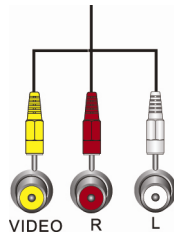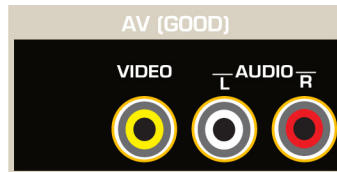

1. Turn off your HDTV and Set Top Box.
2. Connect the video cable (yellow) from your Set Top Box to the **AV** jack (yellow) on your HDTV.
3. Connect the audio cables (white and red) on your Set Top Box to the **AV L** and **R AUDIO** jacks on your HDTV.
4. Turn on your HDTV and Set Top Box.
5. Select **AV** using the **INPUT** button on the remote control or side of the TV.

### Using Coaxial (Antenna) (Good)

 

COAXIAL

1. Turn off the power to your HDTV.
2. Connect the coaxial (RF) connector from your antenna or digital cable to the **DTV/TV CABLE/ANTENNA** connector on your HDTV.
3. Turn on the power to your HDTV.
4. Select **TV** using the **INPUT** button on the remote control or side of the TV.
5. Search for new channels. See *Auto Channel Search* on page 41 for more information on scanning for channels.

## Connecting Your DVD Player

### Using HDMI (Best)



DVD players that have a HDMI digital interface should be connected using HDMI for optimal results. To maintain image quality, use a VIZIO certified HDMI cable. This cable is available in 6, 15, and 30 foot lengths. Visit [www.VIZIO.com](http://www.VIZIO.com) or call **877-MYVIZIO** (877-698-4946) for details.

1. Turn off your HDTV and DVD player.
2. Connect a HDMI cable to the HDMI output of your DVD player and the other end to the **HDMI 1, 2, 3, 4, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your DVD player.
4. Select **HDMI-1, HDMI-2, HDMI-3, HDMI-4, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

**Note:**

- The HDMI input on your HDTV supports High-bandwidth Digital Content Protection (HDCP). HDCP encrypts the transmission between the video source and the digital display for added security and protection.
- Refer to your DVD player user manual for more information about the video output requirements.

 


### HDMI Connections for DVD Players with DVI



1. Turn off your HDTV and DVD player.
2. Using a HDMI-DVI cable, connect the DVI end to your DVD player and the HDMI end to the **HDMI 1, 2, 3, 4, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your DVD player.
4. Select **HDMI-1, HDMI-2, HDMI-3, HDMI-4, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.




**Note:** There are no dedicated audio ports for HDMI so there may or may not be audio from the TV with this connection.

### Using Component Video (Better)

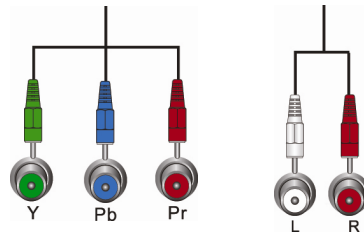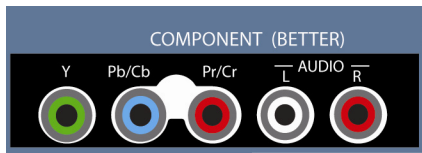

1. Turn off the power to your HDTV and DVD player.
2. Connect the Component cable (green, blue, and red) from your DVD player to the **COMPONENT** jacks on your HDTV.
3. Connect the audio cables (white and red) from your DVD player to the **COMPONENT L** and **R AUDIO** jacks on your HDTV.
4. Turn on the power to your HDTV and DVD player.
5. Select **COMP** using the **INPUT** button on the remote control or side of the TV.

### Using Composite (AV) Video (Good)

 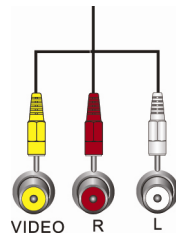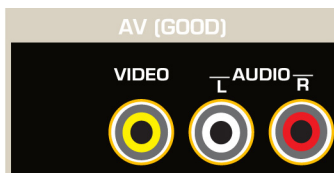


1. Turn off the power to your HDTV and DVD player.
2. Connect the Video cable (yellow) from your DVD player to the **AV** jack on your HDTV.
3. Connect the audio cables (white and red) on your DVD player to the **AV L** and **R AUDIO** jacks on your HDTV.
4. Turn on the power to your HDTV and DVD Player.
5. Select **AV** using the **INPUT** button on the remote control or side of the TV.

## Connecting Coaxial (RF)
 
### Using Your Antenna or Digital Cable for Standard or Digital TV





COAXIAL



1. Turn off the power to your HDTV.
2. Connect the coaxial (RF) connector from your antenna or cable to the **DTV/TV CABLE/ANTENNA** connector on your HDTV.
3. Turn on the power to your HDTV.
4. Select **TV** using the **INPUT** button on the remote control or side of the TV.
5. Search for new channels. See *Auto Channel Search* on page 41 for more information on scanning for channels.

## Connecting Your VCR or Video Camera

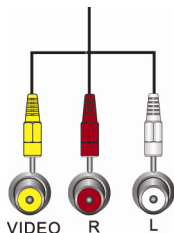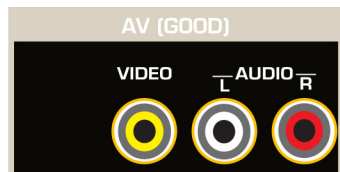


**Note:** Refer to your VCR or Video Camera user manual for more information about the video output requirements of the product.

1. Turn off the power to your HDTV and VCR or video camera.
2. Connect the yellow AV cable from your VCR or video camera to the **AV** jack on your HDTV.
3. Connect the audio cables on your VCR or video camera to the corresponding **L** and **R AUDIO** jacks on your HDTV.
4. Turn on the power to your HDTV and VCR or video camera.
5. Select **AV** using the **INPUT** button on the remote control or side of the TV.

## Connecting a Home Theater System

### Using RCA

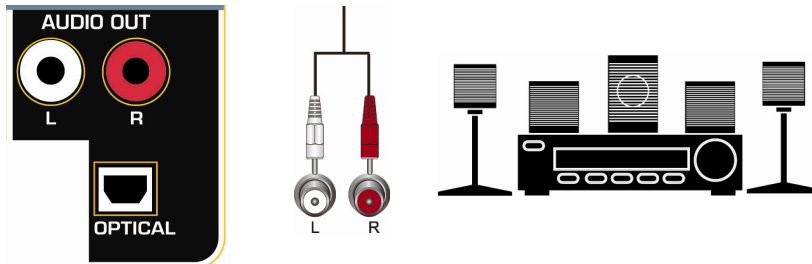

#### Connecting the cables


1. Turn off the power to the HDTV and Receiver/Amp.
2. Using an audio cable (white and red connectors), connect the cable to the audio input connectors on the Receiver/Amp and connect the other end to the **AUDIO OUT** audio connectors on the back of the HDTV.
3. Turn on the power to the HDTV and Receiver/Amp.

#### Turning TV speakers off

1. Press **MENU** to open the OSD.
2. Navigate to *TV Settings* if it is not highlighted.
3. Press **▼** to choose *Audio*, and then press **OK** to select.
4. Press **▼** to choose *TV Speakers*, and then press **OK** to select.
5. Press **▲** to choose **OFF**, and then press **OK** to select.

#### Notes:

- Refer to your Receiver/Amp user manual to select the corresponding audio input.
- The audio output is not amplified and cannot be connected directly to external speakers.

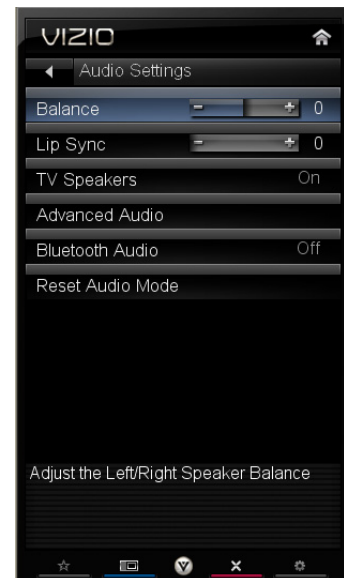

### Using Optical (S/PDIF)






If your sound system has a S/PDIF (optical) digital audio input you can connect it from your sound system to the **OPTICAL** digital audio out on your HDTV. This is active when receiving audio with the programs being viewed no matter what input is being used.

1. Connect one end of the optical cable to optical connectors on the Home Theater and the other end to the **OPTICAL** jack on your HDTV.
2. Turn on the power to your HDTV and home theater.
3. Change the input on your Home Theater to optical. See your Home Theater user manual for more information.

## Connecting a Computer



### RGB (VGA)

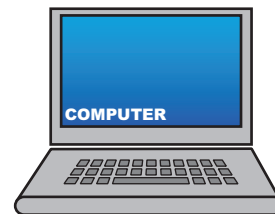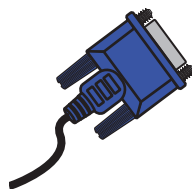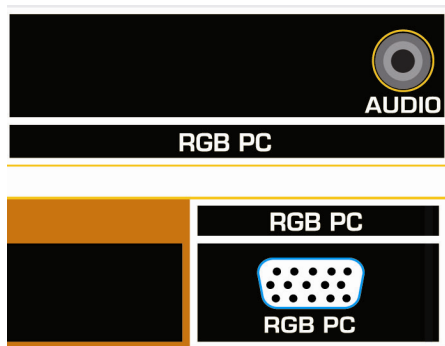

1. Set computer to a resolution supported by your HDTV (see *Preset PC Resolutions* on page 61). If your computer supports it, we recommend 1920x1080.
2. Turn off the power to your HDTV and computer.
3. Connect the RGB (VGA) cable from your computer to the **RGB PC** jack on of your HDTV.
4. Connect the 1/8-inch audio cable from your computer to the **RGB PC Audio** jack on your HDTV. This step is optional and only needed if you want to transmit audio from the computer through the TV.
5. Turn on the power to your HDTV and computer.
6. Select **RGB (VGA)** using the **INPUT** button on the remote control or side of the TV.


**Note:** Refer to your PC computer user manual for more information about the video output requirements.

### Using HDMI

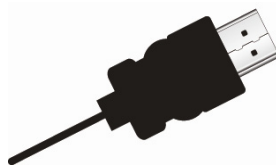 

1. Turn off your HDTV and computer.
2. Connect a HDMI cable to the HDMI output of your computer and the other end to the **HDMI 1, 2, 3, 4, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your computer.
4. Select **HDMI-1, HDMI-2, HDMI-3, HDMI-4, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

## Ethernet Connection

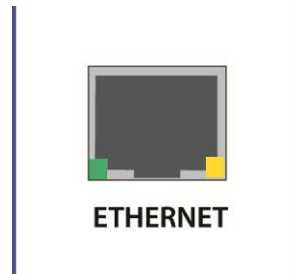

The Ethernet function on your HDTV is used to access the Internet. Your HDTV also has 802.11n single-band wireless, so you can connect your TV through your wireless home network. A wired connection can sometimes deliver a more consistent connection depending on the conditions in your home environment. See *Network Menu* on page 47 for detailed information on setting up your Internet connection.

1. Connect one end of an Ethernet cable (not supplied) to the Ethernet jack on your TV.
2. Connect the other end of the Ethernet cable to your home network (usually your router). Your home network must have broadband Internet access such as cable or DSL.
  - a. A small number of users may need to manually adjust the network settings. See *Network Menu* on page 47 for detailed information on setting up your Internet connection.
  - b. If you need additional help setting up your network, please refer to the user manual for your router or contact the manufacturer of either your router or your Internet service provider if they provided the router for you.

## Chapter 7 Using VIA

### Connecting to the Internet

VIA delivers popular online content right to your HDTV! When you press the **VIA** button on your remote, the *Apps Dock* appears along the bottom of your screen with a selection of different Apps that let you watch movies, TV shows, listen to music, or get weather and news information all on demand.

A high-speed Internet connection is required to receive product updates and to access your favorite online content. You have the option to connect your TV to the Internet with either wired networking using an Ethernet cable or with wireless networking if you have a wireless Internet connection. See *Network Menu* on page 47 for detailed information on setting up your Internet connection.

### Navigating the VIA Dock



#### VIA Sidebar

Select an App and press **OK** to launch the Sidebar. The Sidebar contents vary by App.

**VIA Dock**  
Press ◀ or ▶ to scroll through all of the Apps in the *VIA Dock*. Press **OK** to open an App.



#### Widget Gallery

Select this to discover more Apps and download them to the TV. This gallery is constantly being updated so check back often!

**HDTV Settings App**  
Adjust TV functions like brightness, contrast, Parental Controls, and Network settings.

#### Profile App

Create a unique name, picture and set of Apps in the *VIA Dock*. Set up a profile for each member of your household.



## Using VIZIO Internet Apps (VIA)

VIA puts the best of the web right on your TV screen, giving you the convenience of on-demand movies, TV shows, social networking, music, photos, news, weather and more at the push of the **VIA** button.

### Navigating Apps

Use these buttons on your remote control to navigate around the VIZIO Internet Apps (VIA) functions on your HDTV:

- **YELLOW**—Press to move or delete an App from the *VIA Dock*. Also, if this button is available in the App's sidebar, press to bookmark the current screen of the App. The next time you scroll the *VIA dock*, press ▲ or ▼ while the App is highlighted in the dock and you will see your bookmark appear with the latest information from the App.
- **BLUE**—Press to switch to another screen size for the video playing on the TV while the *HDTV Settings App* or any other App is open on the left side of the TV. As you press the blue button you will see the image change.
- **RED**—Press to exit from the active App or from the *VIA Dock*.
- **GREEN**—Press to view settings for the current App running on the screen.



### Adding Apps


VIA comes with some Apps pre-loaded but there are many more Apps you can download and add to your TV. Use the *Widget Gallery* to browse and discover new Apps that are available. This gallery is constantly being updated so check back often!



1. Press the **VIA** button.
2. Press ◀ or ▶ to select *Widget Gallery*, and then press **OK**.
3. Press ▲ or ▼ to select to browse one of the categories, and then press **OK** to select.
4. Press ▲ or ▼ to choose an App. Apps with a green checkmark are the Apps currently on your *VIA Dock*.
5. Press **OK** to select the App. A progress bar will appear and your new App will be added to your *VIA Dock* when downloading has finished.



## Deleting Apps

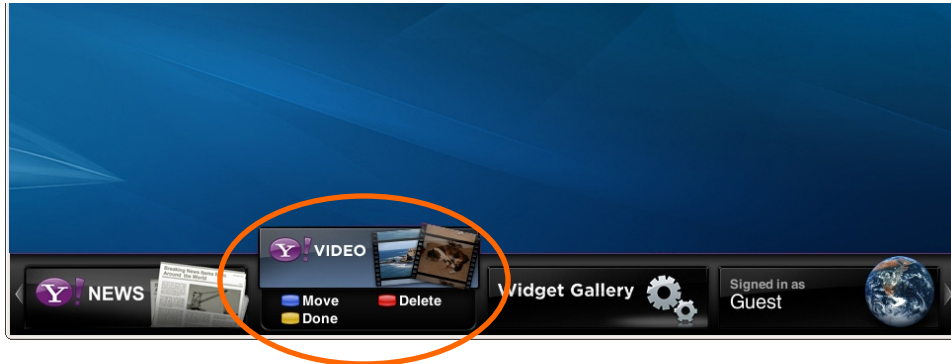

1. Press the **VIA** button.
2. Press ◀ or ▶ to select the App you want or delete, and then press the **Yellow** button.
3. Press the **Red** button to delete the App.
4. A message will appear asking if you want to permanently delete it. Press the **Red** button to delete the App.
5. Once the App has been deleted, press the **Yellow** button to exit.

**Note:** The *Widget Gallery*, *HDTV Settings App*, and *Profile App* cannot be deleted.

## Moving Apps


1. Press the **VIA** button.
2. Press ◀ or ▶ to select the App you wish to move and then press the **Yellow** button.
3. Press the **Blue** button.
4. Press ◀ or ▶ to move the App to the desired location on the *VIA Dock*.
5. Press the **Yellow** button to drop the App in place.

## Using Profiles

The *Profile App* allows you to set up a user profile that you can customize to have your own personal set of Apps in the *VIA Dock*. Each profile will have a unique name and avatar/picture so each member of your household can create and have their own profile!

### Creating a New Profile

1. Press the **VIA** button.
2. Press ▶ to select the **Profile App**, and then press **OK**.
3. Press ▼ to select **Administrative Controls**, and then press **OK**.
4. Press ▼ to select **Create Profile**, and then press **OK**.
5. Complete the required fields to create a profile. You can:
  - a. Create a name
  - b. Select an avatar (picture)
  - c. Create a PIN (password)
  - d. Set who can access the profile
6. Press ▼ to select **Done**. Your new profile has been created.

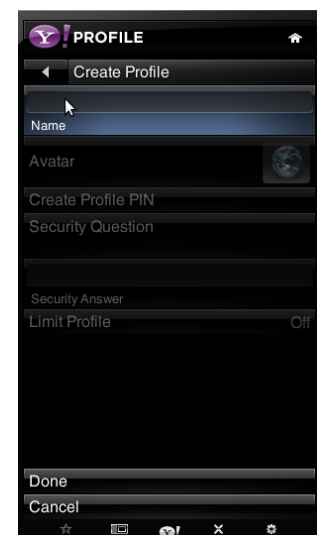

### Switching Profiles

1. Press the **VIA** button.
2. Press ◀ or ▶ to select the **Profile App**, and then press **OK**.
3. Press ▼ to select **Switch Profile**, and then press **OK**.
4. Press ▼ to select the profile you want to switch to, then press **OK**. The Profile loads and the *VIA Dock* appears with the set of Apps associated with that Profile.

### Editing your Profile

1. Press the **VIA** button.
2. Press ◀ or ▶ to select the **Profile App**, and then press **OK**.
3. Press ▼ to select **Switch Profile**, and then press **OK**.
4. Select the profile you want to edit, and then press **OK**. The Profile loads and the *VIA Dock* appears.
5. Press ◀ or ▶ to select the **Profile App**, and then press **OK**.
6. Press ▼ to select **Profile Settings**, and then press **OK**.
7. Modify the required fields to change the profile using your remote.
8. Press ▼ to select **Done**.

### Removing a Profile

1. Press the **VIA** button.
2. Press ◀ or ▶ to select the **Profile App**, and then press **OK**.
3. Press ▼ to select **Administrative Controls**, and then press **OK**.
4. Press ▼ to select **Remove Profile**, and then press **OK**.
5. Press ▼ to select the Profile you wish to remove, and then press **OK**.
6. A message will appear asking if you want to delete the profile. Press ▼ to select **OK**, and then press **OK**. The Profile will be deleted.

## Updating your TV

Your HDTV has the ability to download and automatically install product updates. All you need is an Internet connection – wired or wireless. We will perform product updates whenever your TV is turned off.

## Chapter 8 Adjusting Your HDTV Settings

### Using the On-screen Display (OSD)

The remote control can control all the function settings. The *OSD* allows you to adjust contrast, brightness and other settings. The TV will save changes made to the settings, even if the TV is turned off.

The OSD consists of several menu options. The main menu options may vary depending on your selected input source.


**Note:** Some of the main menu options may have additional submenus, for example, the TV Rating submenu for Parental Controls.

The *HDTV Settings App* allows you to adjust contrast, brightness and other settings. The TV will save changes made to the settings, even if the TV is turned off.

The *HDTV Settings App* consists of several menu options. The main menu options may vary depending on your selected input source.

**Note:** Some of the main menu options may have additional submenus, for example, the TV Rating submenu for Parental Controls.

1. Press the **VIA** button.
2. Press ◀ or ▶ on the remote control to select the **HDTV Settings App**, and then press **OK**. The *Main Menu* will be shown on the screen.
3. Press ◀, ▶, ▲, or ▼ on the remote control to select one of the menu options:
  - Input
  - Wide
  - CC
  - Sleep Timer
  - TV Settings
  - PIP
  - Network
  - Bluetooth
  - Help
4. Press **OK** to select the option or feature you want to adjust.
5. Once the menu option is displayed, press ▲ or ▼ on the remote control to select one of the items to adjust.
6. Press **OK** to select it, and then press ◀, ▶, ▲, or ▼ to adjust the selection.
7. Press **BACK** once to return to the previous screen. To return to your program once adjustments have been completed, you can do one of the following:
  - a. Press **EXIT** on the remote control.
  - b. Press the **RED** button on the remote control.
  - c. Highlight and select the **RED X** in any menu.

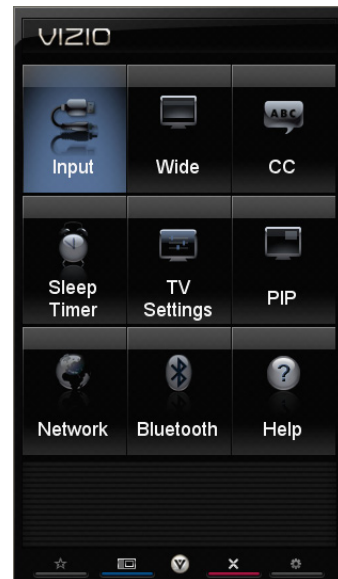

### Input Menu


Select the Input Source for your HDTV. Choose from **TV**, **AV** (Composite), **Comp** (Component), **HDMI-1**, **HDMI-2**, **HDMI-3**, **HDMI-4**, **HDMI Side**, and **RGB** (VGA).

## Wide Menu

Select how the picture displays on the screen. As you select an option, you will see the screen adjusting to the different sizes. The options vary depending on the selected input and the TV program:


### Normal

The original aspect ratio is preserved. This is recommended for HDMI and RGB (computer) viewing so you can see the whole picture without the image overstretching beyond the viewing area. If you experience “noise” along the border switch to Zoom 1. For 720p, 1080i, 1080p only.

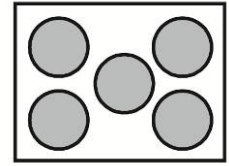


### Panoramic

When watching a standard broadcast or full frame movie in this mode, the 4:3 aspect ratio image is stretched horizontally on the left and right sides to fill the TV screen. The center of the image is not stretched.

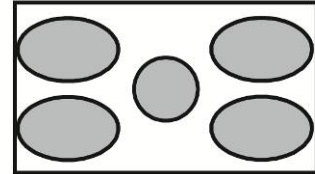

### Stretch Mode

When watching a standard broadcast with black bars on the sides, the image will stretch to fill the TV screen. People will appear wider than they really are. If you are watching a widescreen (1.85:1 or 2.35:1 source) program or movie, there will still be black bars at the top and bottom.

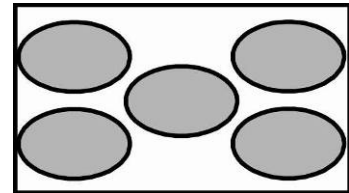


### Zoom

Zooms in by 14% to crop the top and bottom bars for 2.35:1 film resolutions for 16:9 broadcast formats.

### Zoom 1

When watching a standard broadcast or full-frame movie in this mode, the image is stretched proportionately to fill the TV screen. When watching a widescreen (1.78:1 source) program or movie, the display image fills the TV screen. If you are watching a widescreen (1.85:1 or 2.35:1 source) program or movie, there will still be black bars at the top and bottom.

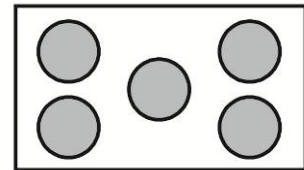

### Zoom 2

Zooms in by 14% to crop the top and bottom bars for 2.35:1 film resolutions. For 480i/p, 4:3 only.

**Note:** When in PIP/POP the screen is fixed in Zoom1 mode.

## CC (Closed Caption) Menu

Adjust closed caption options.

### Analog Closed Caption

The CC feature is available when watching regular analog TV. Select from **Off**, **CC1**, **CC2**, **CC3**, and **CC4**. Closed Caption for regular TV is usually **CC1** or **CC2**.


### Digital Closed Caption

The CC feature is available when watching digital TV. Select from **Off**, **CC1**, **CC2**, **CC3**, **CC4**, or **CS1**, **CS2**, **CS3**, **CS4**, **CS5**, or **CS6**.

### Digital CC Style

The Digital CC Style feature is available when watching digital TV.

- **Caption Style:** Select either **As Broadcaster** or **Custom**. If Custom is selected you can customize the way Closed Caption is displayed. The options available are:
  - **Text Size:** Make CC text larger or smaller.
  - **Color:** Choose a text color for CC display
  - **Opacity:** Make text more or less transparent.
  - **BG Color:** Choose a background color for CC text.
  - **BG Opacity:** Make the background for CC text more or less transparent.
  - **Window Color:** Choose a text frame color for CC text.
  - **Window Opacity:** Make the text frame for CC text more or less transparent.

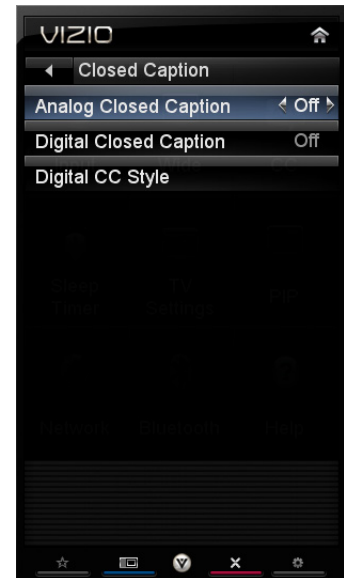


## Sleep Timer Menu

Select the timer to turn off the TV in **30**, **60**, **90**, **120** or **180** minutes. Or you can choose to turn the timer **Off**.

## TV Settings Menu

### Input Source

Select the Input Source for your HDTV. Choose from **TV**, **AV** (Composite), **Comp** (Component), **HDMI-1**, **HDMI-2**, **HDMI-3**, **HDMI-4**, **HDMI Side**, and **RGB** (VGA).

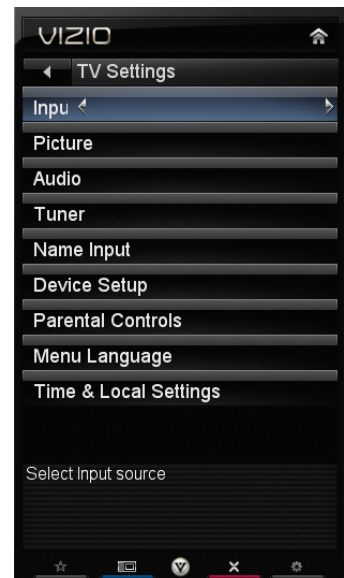

## Picture

### Picture Mode

Choose from **Standard**, **Movie**, **Game**, **Vivid**, **Football**, **Golf**, **Basketball**, **Baseball**, and **Custom**. Each input (i.e. HDMI, COMP, etc) remembers the custom setting you created.

### Backlight

The backlight level adjusts the lamp current and this affects the overall brilliance of the picture but does not affect the Brightness (black level) or Contrast (white level) of the picture.

### Brightness

The brightness adjusts the black levels in the picture. If the brightness is too low you will not be able to see the detail in darker parts of the picture and if the brightness is too high the picture will look washed out.

### Contrast

The contrast adjusts the white levels in the picture. If the contrast is too low the picture will look washed out and if the contrast is too high you will not be able to see any detail in the bright parts of a picture.

### Color

Color adjusts the amount of color in the picture.

### Tint

The tint adjusts the hue of the picture. The easiest way to set tint is to look at flesh tones and adjust for a realistic appearance. In most cases, the default middle position is correct. If people's faces look too orange try reducing the level of color first.

### Sharpness

The sharpness adjustment adjusts the sharpness of the edges of elements in the picture. It does not produce detail that otherwise does not exist. This adjustment is helpful when viewing (Standard Definition) sources.

### Size & Position

**Note:** The Size & Position option can only be selected when your HDTV is in **Comp** or **HDMI** mode.

- **Horiz. Position:** Adjust the horizontal position of the picture.
- **Vertical Position:** Adjust the vertical position of the picture.
- **Horizontal Size:** Adjust the horizontal size of the picture.
- **Vertical Size:** Adjust the vertical size of the picture.

### Color Temperature

Color Temperature is the “warmness” or “coolness” of the white areas of the picture.

- **Color Temperature** Choose from **Cool**, **Computer**, **Normal**, or **Custom**. **Cool** produces a blue-hued image. **Computer** sets the white point at the established setting for a PC display (9300K). **Normal** is the setting for television broadcasting. **Custom** allows you to set a preset calibrated for a white point to suit individual preferences:
  - Red Gain
  - Green Gain
  - Blue Gain
  - Red Offset
  - Green Offset
  - Blue Offset
  - **Reset Color Temperature:** Select to reset color temperature settings to factory default.





## Advanced Picture

To select the options in the Advanced Picture sub-menu, press **OK**. A new menu will be displayed showing the advanced functions available for fine tuning of the picture.

- **Smooth Motion Effect**

The Smooth Motion™ Effect option activates Motion Estimation/Motion Compensation (ME/MC), which suppresses motion judder, or “stuttering” of the image when the camera pans across a scene, or there is horizontal motion in the scene. Choose from **Off**, **Low**, **Middle**, or **High**.

- **Real Cinema Mode**

The Real Cinema Mode option allows selection of the type of compensation used for the Smooth Motion™ Effect option. Choose from **Off**, **Precision** and **Smooth**.

- **Noise Reduction**

This feature diminishes picture artifacts caused by the digitizing of image motion content that may be present in the picture. Choose from **Off**, **Low**, **Medium**, or **High**.

- **Color Enhancement**

This feature increases the picture reproduction performance of the picture by reducing oversaturation of certain colors and improving flesh tones. Choose from **Off**, **Normal**, **Rich Color**, **Grn/Flesh**, and **Grn/Blue**.

- **Adaptive Luma**

Large areas of brightness in the picture will result in a higher Average Picture Level (APL) and the overall picture will look too light. This feature will lower the APL to counteract this effect. Choose from **Off**, **Low**, **Medium**, **Strong**, or **Extend**.

- **Film Mode**


Choose from **Off** or **Auto**. When set to **Off** it will stay at 60 fps. When set to **Auto**, the TV will detect the cadence (for example at 24 frames/second for film, or normal video at 60 fps).

- **Smart Dimming**

Select from **On** or **Off** to improve the contrast ratio through intelligent control of the LED backlight.

- **Ambient Light Sensor**

Choose **Off**, **Low**, **Medium**, or **High**. When set to **Low**, **Medium**, or **High** your HDTV will automatically adjust to light changes in the room.

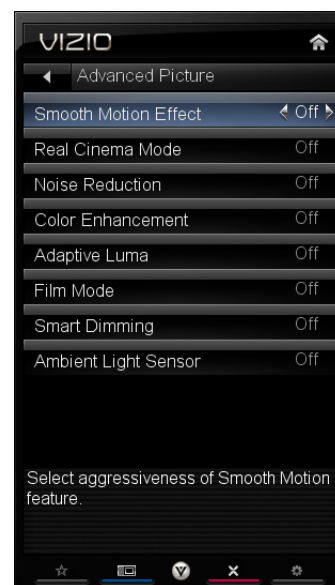

## Reset Picture Mode

Return all Picture settings to factory default. A screen will come up to confirm your selection or to cancel it. Press **◀** or **▶** to make the selection, and then press **OK** to accept it.

**Note:** Only settings under the Picture will be reset.



## Audio

Adjust audio options including balance, equalizer, and advanced audio settings.

### Audio Mode

Choose from Flat, Rock, Pop, Classic or Jazz.

**Note:** When SRS TruSurround HD is On, **Audio Mode** selections are not available.

### Balance

Adjust the sound to the left or the right.

### Lip Sync

Lip Sync is designed to adjust the audio of the program being viewed so that it matches the movement of the lips of someone talking on the screen.

### TV Speakers

Turn the internal speakers On or Off. You may want to turn the internal speakers off when listening to the audio through your Home Theater System.

### Advanced Audio

To select the options in the Advanced Audio sub-menu, press ►. A new menu will be displayed showing the advanced functions available for fine tuning of the audio.

#### SRS TruSurround HD

When watching TV or a movie, TruSurround HD™ creates an immersive surround sound experience from only two speakers and provides rich bass, clear dialog and high frequency detail.

**Note:** When SRS TruSurround HD is **On**, Equalizer adjustments are not available.

#### SRS TruVolume

When the programming switches to a commercial or when changing from channel to channel, volume fluctuations occur. When turned **On**, SRS TruVolume™ provides the listener with a comfortable and consistent volume level. VIZIO recommends turning TruVolume off when listening to music content.

#### Digital Audio Out


This option allows selection of the type of processing for the SPDIF (Optical connector) when used with a home theater system. Select to choose from **Dolby Digital**, **PCM**, or **Off**.

#### Analog Audio Out

This option sets the volume control properties when using the RCA (white and red) connectors as audio line out to connect a home theater system. Choose from **Fixed** or **Variable**. When set to **Variable**, volume from the external speakers will change when you change the volume setting on the TV. When set to **Fixed**, the volume can only be changed by the settings on the external stereo system.

#### Audio Control

Select which device the VIZIO remote control adjusts. Choose from **TV** or **External**. When set to **TV**, the VIZIO remote will control the audio of the TV speakers. When set to **External**, the VIZIO remote will control the audio of your selected device.

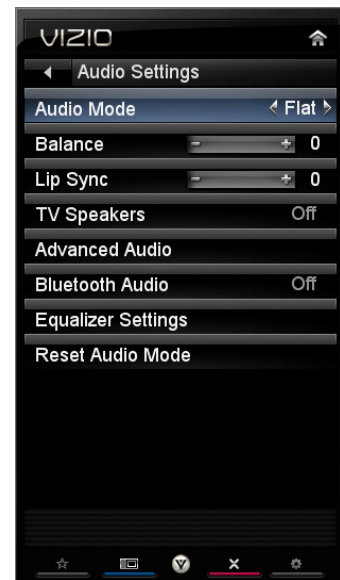

## Bluetooth Audio

Turn Bluetooth audio **On** or **Off**. Bluetooth Audio enables or disables the output of sound to your Bluetooth receiver, such as Bluetooth headphones.

## Equalizer Settings

To select the options in the Equalizer Settings sub-menu, press **OK**. A new menu will be displayed showing the available equalizer functions. Press **◀** or **▶** to select *Basic* or *Advanced*.

- **EQ Mode (Basic)**  
Adjust Bass and Treble.
- **EQ Mode (Advanced)**  
Adjust boost or attenuation of different frequencies.  
Starting from lowest to the highest, they are 100 Hz, 300Hz, 1 kHz, 3 kHz and 10 kHz.

1. Press **▼** then **◀** or **▶** to select the frequency to be adjusted. Press **OK**.
2. Press **▲** or **▼** to adjust the selected frequency to your preference. Values above 0 will boost the frequency and values below 0 will attenuate the frequency.

**Note:** The Equalizer adjustment will only be available when SRS TSHD is set to **Off**.



## Tuner

When you first turned on your HDTV you scanned for channels using the *Setup App*. If you did not do this or if your setup has changed, you can do this from the Tuner menu.


**Note:** The tuner option can only be selected when your HDTV is in TV input mode.

### Tuner Mode

Select **Cable** or **Antenna** depending upon which source you have attached to the DTV / TV Input.

### Auto Channel Search

Automatically search for TV channels that are available in your area. Be sure to first select the correct tuner mode above. The TV will search for analog and digital channels. When the search is done, press **EXIT** to begin watching your programs.

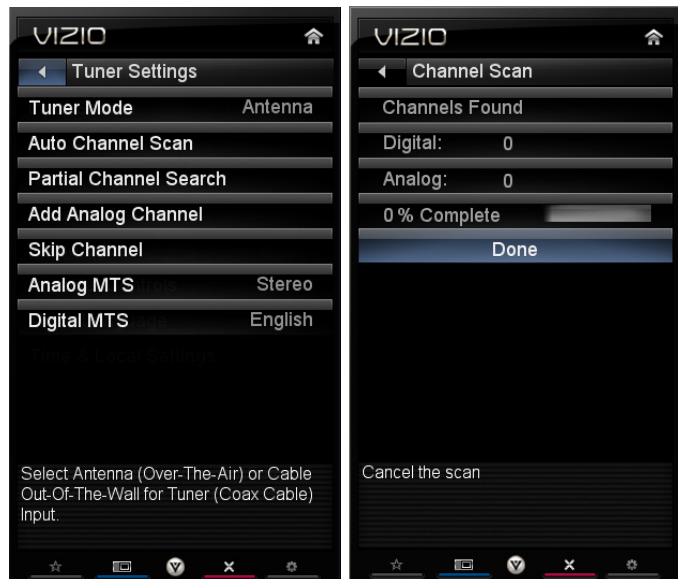

### Partial Channel Search

If you believe channels are missing from the auto search, you can do a partial channel search to look for channels in a certain channel range again. Select to scan for Analog, Digital, or both Analog/Digital channels, and then select **From Channel, To Channel** and then select **Start**. For a listing of digital TV stations in your area, visit [www.antennaweb.org](http://www.antennaweb.org).

### Add Analog Channel

Manually add missing channels. Enter the channel number, and then select **Add Channel** to add that channel to your list of available channels.

### Skip Channel

After the TV has stored all of the available digital channels in memory you will find that some channels are too weak to watch comfortably or they may be channels you do not want to see. Press **OK** to select the channel to be skipped when using **▲** or **▼**. An **X** will appear in channels you have selected to skip. You will still be able to select this channel using the number buttons on the remote control.

### Analog MTS

This feature allows you to select the different languages the broadcaster is transmitting the audio with the program you are watching. This signal is usually Spanish. Choose from **Mono**, **Stereo**, or **SAP**.

### Digital MTS

This feature allows you to select the different languages the broadcaster is transmitting the audio with the program you are watching. This signal is usually Spanish. Choose from **English**, **French**, or **Spanish**.




### Name Input

This feature makes it easier for you to recognize the devices you have connected to your HDTV when you press **INPUT**. For example, if you have a Blu-Ray DVD player connected to the HDMI-1 input, you can have the input label read *HDMI-1 BluRay* instead of just *HDMI-1*. You can select from nine preset labels.

#### To use one of the nine preset labels:

1. Select *Input Source*, and then press **OK** to show the list of inputs.
2. Press **▼** to select the input label you want to change, and then press **OK**.
3. Press **▼** to select *Input Labels*, and then press **OK** to show the list of nine preset labels.
4. Press **▼** to select the new input label name, and then press **OK**.
5. If you wish to create a custom name, press **▼** to select *Show Keyboard*, and then press **OK**. A keyboard will open, allowing you to enter a custom name, up to 10 characters.

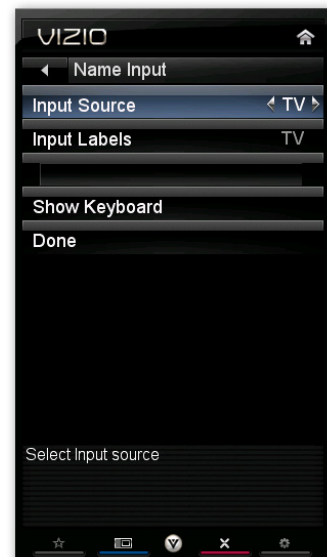

## Device Setup

This feature allows you to add devices to your HDTV and control them with your VIZIO remote control. This feature was also available during the initial *Setup App*. Note: The feature is not available in TV mode. Once the input source is changed from TV to the selected device input, the remote will control that device. **Note:** this option is not available when the *Input Source* is set to **TV**.

### Input Source

Select the input source your device is connected to on your HDTV. Choose from **TV**, **AV** (Composite), **Comp** (Component), **HDMI-1**, **HDMI-2**, **HDMI-3**, **HDMI-4**, **HDMI Side**, and **RGB** (VGA).

### Pick Device Type

Select the type of device that is connected to your HDTV. Choose from **VCR**, **DVD Player**, **Blu-Ray Player**, **Satellite Receiver**, **Cable Box**, or **DVR**.



### Pick Device Brand

Select the brand name of the device that is connected to your HDTV. The brand names will vary based on the device type selected above.

### Confirm Remote Connection

Automatically program the VIZIO remote control to allow it to control your device.

1. Turn the device on.
2. Point the VIZIO remote directly at the device.
3. Press **OK** to select **Confirm Remote Connection**. The TV will attempt to communicate with the device.
4. Point the VIZIO remote at the device and the press the **Input power** button. The device should turn off. If it does, select **It worked** and press **OK**. If it does not power off, select **Try the Next Code**. Repeat until you find a code that works.

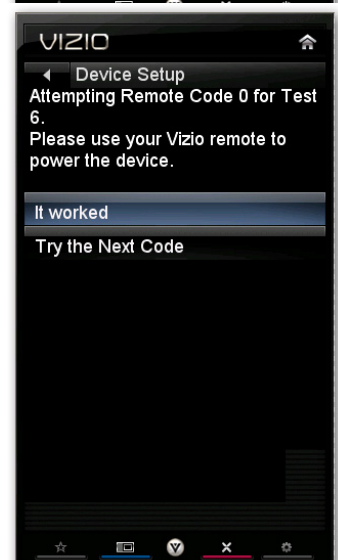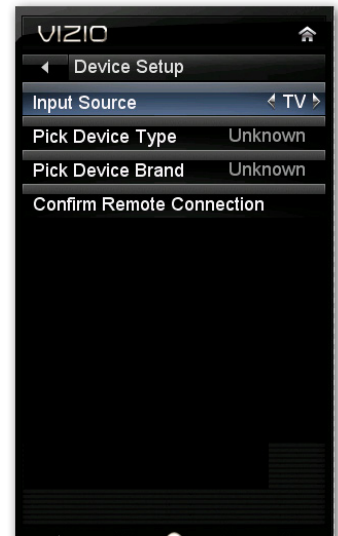

## Parental Controls

If you want to restrict certain channel and program viewing, you can do this by turning on the Parental Control. Selected programs, movies, and channels can then be made available only after an authorized password has been entered and accepted by the TV.

**Note:** The Parental Controls are divided into LOCK and UNLOCK menus. To activate or lock parental controls, use the LOCK menu. To deactivate or unlock parental controls, use the UNLOCK menu.

## Navigating Lock and Unlock Menus

To access or navigate the LOCK menu, you must use the **Jag Wheel Control** on the side of the TV. Turn the wheel forward or backward to highlight a menu option, then press the wheel to select. **The remote control buttons do not control the LOCK menu.**

To access or navigate the UNLOCK menu, you can use the **Arrow** and **OK** buttons on the remote. Enter your PIN when prompted.

## Lock and Unlock Menu Functions

### Rating Enable

Select **ON** or **OFF**. If set to **OFF**, you will not be able to set the US TV, US Movie, Canadian English, or Canadian French Ratings.

### Channel Locks

Block individual channels from being displayed.




### USA-TV

**Note:** When Rating Enable is **OFF**, the USA-TV Rating adjustments are not available.

- TV-Y – All children
- TV-Y7 – Older children
- TV-G – General audience
- TV-PG – Guidance suggested
- TV-14 – Strongly cautioned
- TV-MA – Mature audience

You can also customize the TV ratings for the following content:

- A – All sub-ratings
- FV – Fantasy violence
- D – Sexual dialog
- L – Adult language
- S – Sexual situations
- V – Violence

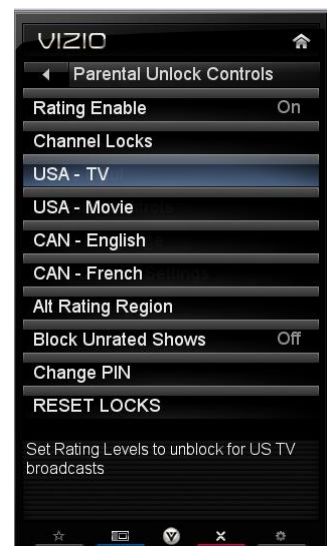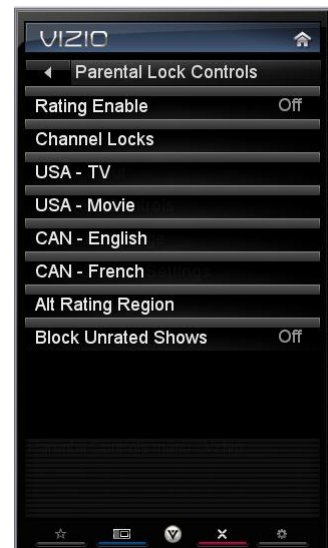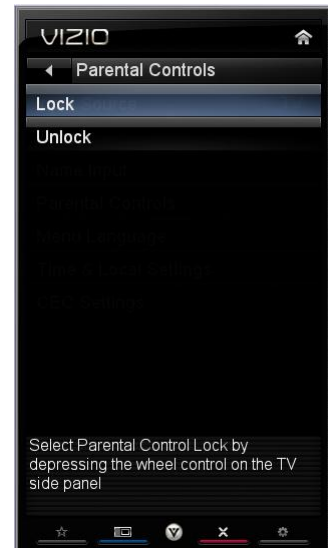

### **USA-Movie**

**Note:** When Rating Enable is **OFF**, USA-Movie Rating adjustments are not available.

**G** – General audience

**PG** – Parental guidance suggested

**PG-13** – Recommended for children 13 years of age or older

**R** – Mature audience

**NC-17** – No one under 17 years of age

**X** – No one under 17 years of age

### **CAN-English**

**Note:** When Rating Enable is **OFF**, Canadian English Rating adjustments are not available.

**C** – Children

**C8+** – Children 8 years or older

**G** – General Programming, suitable for all audiences

**PG** – Parental guidance

**14+** – Viewers 14 years or older

**18+** – Adult programming

### **CAN-French**

**Note:** When Rating Enable is **OFF**, Canadian French Rating adjustments are not available.

**G** – General audience

**8 ans+** – General – not recommended for young children

**13 ans+** – Not suitable for children under 13 years of age

**16 ans+** – Not suitable for under 16 years of age

**18 ans+** – Adults only

### **Alt Rating Region**

This setting is not used. It is reserved for future rating systems.

### **Block Unrated TV**

Block programming that does not have a rating.

### **Change PIN (UNLOCK Menu Only)**

Enter a new, 4-digit password using the number buttons on the remote control. Enter it a second time to confirm you entered it correctly.

**Note:** Make sure you write down and store the new password in a secure place. The *Reset Locks* feature does NOT reset the password.

### **RESET LOCKS (UNLOCK Menu Only)**

Return all Parental Control lock settings to factory default. A screen will come up to confirm your selection or to cancel it. Press ◀ or ▶ to make the selection, and then press **OK** to accept it.

### **Menu Language**

Select to change the language of the menu. The default is **English**. You can also select **French** or **Spanish**.

## PIP Menu

Your TV features PIP mode so you can watch two pictures at the same time. One picture is displayed as the full screen (main screen) and the other picture is displayed in a small window (sub screen).

**Note:** PIP is only available when the *Rating Enable* option in *Parental Controls* is set to **Off**.

### PIP Mode

Select from **Off**, **PIP** (Picture-inside-picture) or **POP** (Picture-outside-picture). In **PIP** mode a smaller sub-screen is displayed on top of the main screen. In **POP** mode the main screen and sub-screen are of equal size and are positioned side-by-side.

### Source

Select the input source for the sub-screen. The input sources available will vary according to which input is used for the main screen.

| MAIN \ SUB     | SUB |                |           |   |                |
|----------------|-----|----------------|-----------|---|----------------|
|                | TV  | AV (Composite) | Component | HDMI-1<br>HDMI-2<br>HDMI-3<br>HDMI-4<br>HDMI SIDE | RGB (Computer) |
| TV             |     |                | ✓         | ✓   | ✓              |
| AV (Composite) |     |                | ✓         | ✓   | ✓              |
| Component      | ✓   | ✓              |           | ✓   |                |
| HDMI-1         | ✓   | ✓              | ✓         |   | ✓              |
| HDMI-2         | ✓   | ✓              | ✓         |   | ✓              |
| HDMI-3         | ✓   | ✓              | ✓         |   | ✓              |
| HDMI-4         | ✓   | ✓              | ✓         |   | ✓              |
| HDMI Side      | ✓   | ✓              | ✓         |   | ✓              |
| RGB (Computer) | ✓   | ✓              |           | ✓   |                |

“✓” – Indicates which inputs are available for PIP and POP modes.

### Position

Select where you want the PIP screen positioned over the main screen. Choose from **Top Left**, **Top Right**, **Bottom Left**, and **Bottom Right**.

### Size

Set the size of the PIP window. Choose from **Small**, **Medium** or **Large**.

### Audio

Select which source will play the audio. Choose from the **Main** screen or the **PIP** (sub) screen.



## Network Menu

When you first turned on your HDTV you set up your network connection using the *Setup App*. If you did not do this or if your setup has changed, you can do this from the Network menu.

The Ethernet function on your HDTV is used to access the Internet. Your HDTV also has 802.11n wireless, so you can connect your TV to the Internet through your wireless home network. A wired connection may deliver a more consistent connection depending on the conditions in your home environment. When you enter the *Network Menu* you will see your current connection method.

### Wired Connection

View that your wired connection is set to *Connected*. This is not an option that you can adjust. It is for information only.

### Manual Setup

Select to view and/or manually change your network settings.


#### Change Settings

Select to manually change your network settings such as the **IP Address**, the **Subnet Mask**, the **Default Gateway**, the **Preferred DNS Server**, and the **Alternate DNS Server**.

**Warning:** unless you are an advanced user and are comfortable with wired and wireless networks, do not adjust these settings.

#### Test Connection

Select this option to test your network connection.


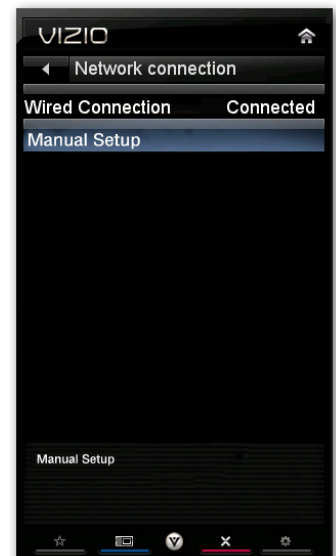


### Wireless Connection

#### Wireless Access Points

If there is no wired connection, the wireless menu will be displayed and you will see a list of available wireless networks. You will also see that your Wired Connection is set to *Disconnected*.

1. Press **▼** to select your wireless network, and then press **OK**. If you do not see your wireless network in the list, select **More Access Points** and then press **OK**.
2. If the network is password protected, enter the secure access code you created when setting up your wireless router. Slide the remote control open and begin typing in the code. You can also select **Show Keyboard** and use the on-screen keyboard instead of the remote control. When you are finished entering the code, select **Connect**.

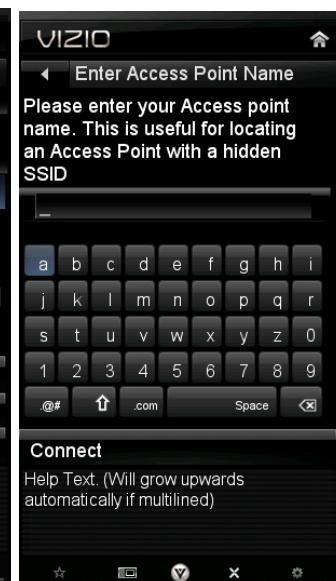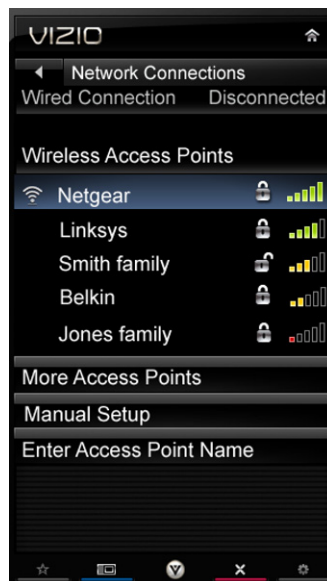

**Note:** If you have forgotten your secure access code, please refer to the user manual for your wireless router or contract the manufacturer or either your router or your Internet Service Provider if they provided the router for you.



### More Access Points

Select this option to show more wireless networks in the list.

Select this option to refresh the list of available wireless networks.

### Manual Setup

**Warning:** unless you are an advanced user and are comfortable with wired and wireless networks, do not adjust these settings.

- **Change Settings:** Use this option to manually enter the advanced settings of your network, such as the **IP Address**, the **Subnet Mask**, the **Default Gateway**, the **Preferred DNS Server**, and the **Alternate DNS Server**.
- **Test Connection:** Select this option to test your network connection.

### Enter Access Point Name

Select this option to connect to hidden networks. Slide the remote control open and begin typing in the name of the network (SSID).

**Note:** If you are not sure of the name of your hidden wireless network, or need additional help setting up your wireless network, please refer to the user manual for your wireless router or contract the manufacturer or either your router or your Internet Service Provider if they provided the router for you.

### Bluetooth Menu

The menu allows you to pair (activate) your VIZIO remote control and other Bluetooth devices to work with your HDTV. Future automatic product updates may add support for other Bluetooth devices. When you enter the menu you will see a list of currently paired devices.


#### Unpair Devices

Select to unpair Bluetooth devices other than the VIZIO remote control. The VIZIO remote that came with your HDTV cannot be unpaired.

#### Pair Devices

Select to pair the VIZIO remote or to search for other Bluetooth devices.

1. Turn on your Bluetooth device and set it to pairing mode. See the user manual that came with your device for more information.
2. Select **Start Searching for Devices** with your remote.
3. When the search is complete, the device will appear in the list of currently paired devices.
4. Press **BACK** to return to the previous menu.

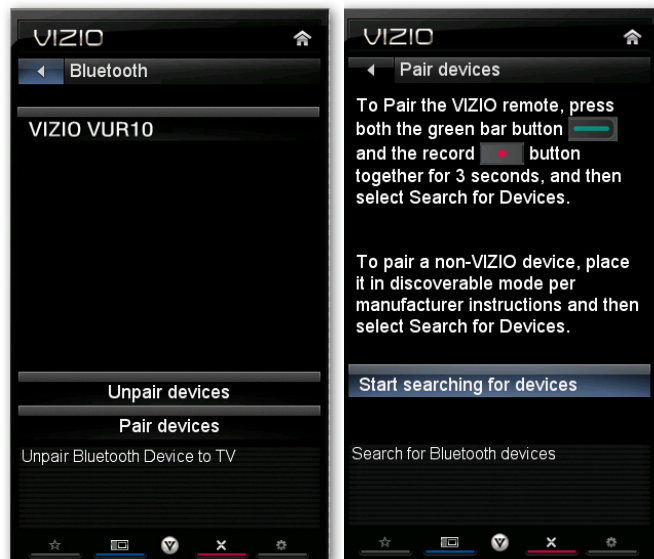

## Help Menu

### System Info

Display the technical information including model name, version and revision of firmware, source type, and resolution.

### Reset TV Settings

Return all Picture and Audio settings to factory default. A screen will come up to confirm your selection or to cancel it. Press Left or Right Navigation buttons to make the selection, and then press **OK** to accept it.

**Note:** This does **NOT** reset the Parental Control Password.

### Clear Memory (Factory Default)


Use this function to reset the TV to the default factory settings. The screen will display a message to confirm that you want to reset the values to factory settings. Press ◀ or ▶ to make the selection, and then press **OK** to accept it.

**Note:** This does **NOT** reset the Parental Control Password.

### Guided Setup

Use this function to return to the Initial Setup menu. Use this function if you want to have a guided setup when you move your TV. Refer to Chapter 3 for more information.

**Note:** Previously scanned channels will be removed.

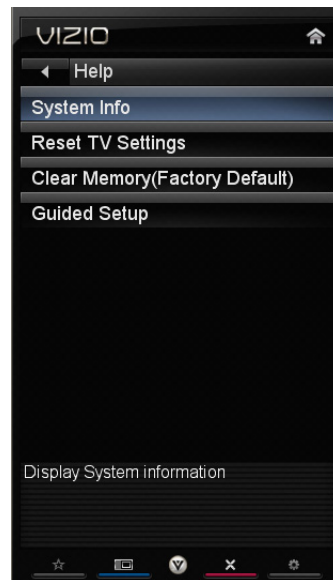

## Chapter 9 Maintenance and Troubleshooting

### Cleaning the TV and Remote Control

1. Remove the power adapter cable from the TV.
2. Use a soft cloth moistened with diluted neutral cleaner to clean the TV and remote control. VIZIO recommends using an HDTV cleaning solution which can be purchased at any major retailer.
3. Wring liquid out of the cloth before cleaning to prevent water from penetrating into the housing.
4. Wipe the TV and remote control with a dry cloth after cleaning.

#### Important:

- Do not use volatile solvents (such as toluene, rosin and alcohol). Such chemicals may damage the housing, screen glass, and remote control, and cause labeling to peel.
- The screen glass is very fragile. Do not scrape it with any sharp object.
- Do not press or tap the screen to avoid cracking.

### Troubleshooting Guide

If the TV fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure. If the display still fails to perform as expected, contact the VIZIO for assistance by calling **877-MYVIZIO** (877-698-4946) or e-mail us at [techsupport@VIZIO.com](mailto:techsupport@VIZIO.com).

#### TV/Display Troubleshooting

| Issue  | Solution  |
|--|---|
| <b>"No Signal" is shown on display</b>                               | <ul style="list-style-type: none"> <li>• Press <b>INPUT</b> to select the correct input source for the device you are attempting to use.</li> <li>• Insure that the desired device is powered ON.</li> <li>• Check the connections of external devices that may be connected to your HDTV</li> <li>• Check video/device cable integrity. Try another cable (HDMI, Component, AV/Composite, Coax etc.)</li> </ul>  |
| <b>"No RGB Signal. Power will be turned off" is shown on display</b> | <ul style="list-style-type: none"> <li>• When using the RGB Input to connect to a computer, please insure that a supported PC desktop resolution is first selected.</li> <li>• If no computer is connected, press <b>INPUT</b> to select a different input source.</li> <li>• Note: If no computer is connected, and the input is not changed, the television will power off.</li> </ul>  |
| <b>No power (VIZIO logo is off)</b>                                  | <ul style="list-style-type: none"> <li>• Make sure your AC power cable is securely connected to the back of the television and wall outlet.</li> <li>• Plug another electrical device into the outlet to insure the outlet is working correctly.</li> <li>• Try another electrical outlet elsewhere in your home. Preferably on a different circuit.</li> <li>• Try another AC power cable. Any standard 3 prong, grounded, UL approved computer power cable can provide power to your television.</li> </ul> |

| Issue  | Solution  |
|--|---|
| <p><b>Power is ON but there is no image on the screen / Black screen</b></p> | <ul style="list-style-type: none"> <li>• Make sure the power is ON (VIZIO Logo glows white).</li> <li>• Make sure all cables attached to your HDTV are connected to the correct output of your external device.</li> <li>• Insure that the external device is powered ON</li> <li>• Adjust brightness, contrast or backlight.</li> <li>• Press <b>INPUT</b> to select the correct input source.</li> <li>• Note: Your HDTV will display the television station or program selected by the cable box, VCR, external tuner, or satellite receiver. Use the remote control that came with that component to change programs or channels</li> <li>• Perform a power cycle by: Removing the AC power cable from the back of your television for 30 seconds. Reinsert the power cable and power on the television</li> </ul>  |
| <p><b>Wrong or abnormal colors/patterns</b></p>                              | <ul style="list-style-type: none"> <li>• Check color and tint settings in the <i>Picture Menu</i>.</li> <li>• Reset Picture settings to default in the <i>Picture Menu</i>.</li> <li>• Check the video settings and compatibility of external devices</li> <li>• Check the video cables of external devices to make sure they are securely connected at both ends.</li> <li>• Try another device on the same input.</li> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna to an alternate location in the room or close to a window.</li> <li>• Perform a power cycle by: Removing the AC power cable from the back of your television for 30 seconds. Reinsert the power cable and power on the television.</li> </ul>  |
| <p><b>Side Control button does not work</b></p>                              | <ul style="list-style-type: none"> <li>• Perform a power cycle by: Removing the AC power cable from the back of your television for 30 seconds. Reinsert the power cable and power on the television</li> </ul>   |
| <p><b>Poor image quality</b></p>   | <ul style="list-style-type: none"> <li>• Standard Definition images will always be noticeably inferior to HD Quality content. Press <b>INFO</b> to see what the current resolution of the image is. 720p, 1080i, and 1080p are all HD quality resolutions.</li> <li>• Check the video settings of your external device.</li> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna to an alternate location in the room or close to a window.</li> <li>• Reset Picture settings to default in the <i>Picture Menu</i>.</li> <li>• Check video/device cable integrity. Try another cable (HDMI, Component, AV/Composite, Coax etc.)</li> <li>• Perform a power cycle by: Removing the AC power cable from the back of your television for 30 seconds. Reinsert the power cable and power on the television.</li> </ul> |
| <p><b>Distorted image or unusual sound</b></p>                               | <ul style="list-style-type: none"> <li>• Check video/device cable integrity. Try another cable (HDMI, Component, AV/Composite, Coax etc.)</li> <li>• Try the external device on another input.</li> <li>• Perform a power cycle by: Removing the AC power cable from the back of your television for 30 seconds. Reinsert the power cable and power on the television.</li> <li>• Interference from electrical appliances, cars, motorcycles, or fluorescent lights may affect television performance. If possible, move your HDTV to an alternate location within your home.</li> </ul>  |

| Issue  | Solution  |
|--|---|
| <p><b>Display image does not cover the entire screen/ Black bars on the top or side of the image</b></p> | <ul style="list-style-type: none"> <li>• Go to the <b>Wide</b> menu in <i>HDTV Settings</i> to view the available aspect modes</li> <li>• Check the video settings of your external device.</li> <li>• If using the RGB input (Computer), a supported PC desktop resolution must be used.</li> <li>• If using the RGB input (Computer), Go to the Picture menu and select Auto Adjust to fit the PC desktop to your HDTV..</li> <li>• Note: Depending on the resolution of the content being viewed, some modes may not be available.</li> </ul>  |
| <p><b>The TV has pixels (dots) that are always dark or colored</b></p>                                   | <ul style="list-style-type: none"> <li>• Check video/device cable integrity. Try another cable (HDMI, Component, AV/Composite, Coax etc.)</li> <li>• Check other Inputs and external devices.</li> <li>• Remove all external devices to see if issue remains.</li> <li>• Perform a power cycle by: Removing the AC power cable from the back of your television for 30 minutes to 1 hour. Reinsert the power cable and power on the television</li> </ul>   |
| <p><b>Image “noise/fuzz”</b></p>   | <ul style="list-style-type: none"> <li>• When your HDTV’s capabilities exceed a digital broadcast signal, the signal is up-converted (increased) to match your TV’s display capabilities. Up-converting can cause image “noise” or “fuzz”.</li> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.</li> <li>• Check the video settings of your external device.</li> <li>• Check video/device cable integrity. Try another cable (HDMI, Component, AV/Composite, Coax etc.)</li> <li>• Try the device on another input.</li> <li>• Perform a power cycle by: Removing the AC power cable from the back of your television for 30 seconds. Reinsert the power cable and power on the television.</li> </ul> |
| <p><b>Aspect mode differs on each input</b></p>  | <ul style="list-style-type: none"> <li>• Your HDTV retains the viewing mode from the last time you used a particular input (AV, Component, HDMI and TV).</li> </ul>   |
| <p><b>Tips for High-Definition Users</b></p>   | <ul style="list-style-type: none"> <li>• Your HDTV is an ideal platform for viewing High Definition Content.</li> <li>• Best image quality will be achieved by using an HDMI cable and input. The next best is Component, followed by Composite. Note: Composite (AV and S-Video inputs) cannot carry an HD quality image signal.</li> <li>• Due to variances in broadcast practices, it is possible some image distortions can occur.</li> </ul>   |
| <p><b>Tips for Letterbox Content</b></p>   | <ul style="list-style-type: none"> <li>• Some Letterboxed (or “Widescreen”) versions of DVD movies are formatted for standard 4:3 Televisions. Your HDTV has the ability to expand this content so the entire screen is filled at the expense of image accuracy. To use this function, select <b>Wide</b> from the <i>HDTV Settings App</i>.</li> </ul>   |

### Audio Troubleshooting

| Issue  | Solution   |
|--|--|
| <b>No audio</b>                                | <ul style="list-style-type: none"> <li>• Press <b>Volume +</b> (Up) on the remote control or side of the TV.</li> <li>• Press <b>MUTE</b> on the remote control to make sure that MUTE is not ON.</li> <li>• Check the <b>MTS Audio</b> settings in the <i>Tuner</i> menu to insure they are set to <b>Stereo/English</b>. ( TV input only )</li> <li>• Verify that the TV Speakers are <b>On</b> in the <i>Audio</i> menu.</li> <li>• Check the video/device cable integrity. Try another cable (HDMI, Component, AV/Composite, Coax etc.)</li> <li>• Change audio settings of the external device.</li> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to your HDTV and move the antenna to an alternate location in the room or close to a window.</li> </ul> |
| <b>Audio volume differs on each input</b>      | <ul style="list-style-type: none"> <li>• Your HDTV will retain the last used volume level for each input.</li> </ul>   |
| <b>Low audio volume (TV internal speakers)</b> | <ul style="list-style-type: none"> <li>• Press the Volume up on the remote control.</li> <li>• Increase the volume of the external device using that device's remote.</li> </ul>   |
| <b>Distorted/popping audio</b>                 | <ul style="list-style-type: none"> <li>• Check video/device cable integrity. Try another cable (HDMI, Component, AV/Composite, Coax etc.)</li> <li>• Insure audio cables are tightly inserted into inputs.</li> <li>• Try another device.</li> <li>• Use another device input.</li> </ul>  |

### Bluetooth Troubleshooting

| Issue  | Solution   |
|--|--|
| <b>Unable to pair the VIZIO Universal Remote Control to the TV</b> | <ul style="list-style-type: none"> <li>• Insure that new batteries are inserted correctly into the remote.</li> <li>• Clear any previously saved pairing information in the remote using the following steps: Open your Slider to expose your VUR10's keyboard. Press and hold the <b>Q</b>, <b>P</b>, and <b>SPACE</b> keys for approximately 10 seconds. Release all keys and remove the batteries from the remote. Once removed, wait 3 seconds before reinserting the batteries. Attempt the pairing procedure again.</li> </ul> |
| <b>Unable to pair another Bluetooth device to the TV</b>           | <ul style="list-style-type: none"> <li>• At the time of this publication, the pairing of other Bluetooth devices is not supported by your television. Please check <a href="http://www.vizio.com">www.vizio.com</a> for the latest product updates as this may change.</li> </ul>  |

### VIZIO Internet Apps Troubleshooting

| Issue   | Solution   |
|---|--|
| <b>The installed apps are not working correctly</b> | <ul style="list-style-type: none"> <li>• If you are experiencing an issue with the functionality or features of an App, please contact the App publisher directly. Press the green button while in the Apps Sidebar view to see help information from the publisher.</li> <li>• Note: VIZIO is not responsible for customer service related to content and/or services provided by the third parties who create the Apps. Any questions or requests for service relating to the content or services should be made directly to the specific App service providers</li> </ul> |

### Remote Control Troubleshooting

| Issue  | Solution   |
|--|--|
| <b>The remote control will not work</b>              | <ul style="list-style-type: none"> <li>Point the remote control directly at the remote sensor on your TV (IR mode only).</li> <li>Remove any obstacles between the remote control and the remote sensor (IR mode only).</li> <li>Replace dead batteries with new ones.</li> <li>Your remote's keyboard will not work unless it has been Bluetooth paired to your VIZIO television. Please Bluetooth pair your remote to improve response and performance.</li> </ul> |
| <b>The remote control will not adjust TV Volume.</b> | <ul style="list-style-type: none"> <li>Check the <b>Advanced Audio</b> menu located in the <i>HDTV Settings App</i>. Audio control must be set to <b>TV</b>.</li> </ul>  |
| <b>Channel Up and Down buttons will not work.</b>    | <ul style="list-style-type: none"> <li>In the <i>HDTV Settings App</i>, select <b>Tuner</b>, then <b>Auto Channel Scan</b>. This must be performed before attempting to change channels.</li> </ul>  |

### Internet Connection Troubleshooting

| Issue                                     | Solution   |
|---|--|
| <b>I forgot my secure access code.</b>    | <ul style="list-style-type: none"> <li>Refer to the user manual for your wireless router or contact the manufacturer of either your router or your Internet Service Provider if they provided the router for you.</li> </ul>   |
| <b>Wireless Connection Issues</b>         | <ul style="list-style-type: none"> <li>Refer to the user manual for your wireless router or contact the manufacturer of either your router or your Internet Service Provider if they provided the router for you.</li> <li>Make sure the Internet connection is setup correctly. See <i>Network Menu</i> on page 47 for detailed information.</li> <li>Test the Internet connection to make sure it is working. See <i>Network Menu</i> on page 47 for detailed information.</li> <li>Disable MAC address filtering in your wireless router.</li> <li>Update your wireless router or device with the latest software available from the manufacturer's website.</li> <li>Use the correct password and or passphrase to connect to a secured network.</li> <li>Check the network connectivity with other devices (such as a laptop or desktop computer). If these devices also cannot connect, please reference your wireless device's User Manual for further configuration assistance.</li> <li>Try a wired (Ethernet) cable directly from your broadband modem's output connection. A wired connection may deliver a more consistent connection depending on the conditions in your home environment.</li> </ul> |
| <b>Ethernet (Wired) Connection Issues</b> | <ul style="list-style-type: none"> <li>Insure that the Ethernet cable is securely inserted into your access point and the back of the television.</li> <li>Make sure the Internet connection is setup correctly. See <i>Network Menu</i> on page 47 for detailed information.</li> <li>Test the Internet connection to make sure it is working. See <i>Network Menu</i> on page 47 for detailed information.</li> <li>Check network connectivity with other devices (such as computer).</li> <li>Once an active Ethernet cable is plugged into your HDTV, you will see both green and amber link lights.</li> <li>If you require further assistance, please contact your Internet Service Provider.</li> </ul>   |

## Media Viewer Troubleshooting

| Issue                                       | Solution   |
|---|--|
| USB device is not recognized.               | <ul style="list-style-type: none"> <li>• Make sure the device is correctly inserted.</li> <li>• Make sure the device is FAT or FAT32</li> <li>• Make sure it contains the supported files.</li> </ul>  |
| Image or sound is interrupted or distorted. | <ul style="list-style-type: none"> <li>• Make sure the device is correctly inserted.</li> <li>• Make sure that the file complies with the supported format, bit rate and/or profile. Also check the file for damage.</li> <li>• Some files that comply with the supported format may not play back or display properly.</li> </ul> |

## Telephone & Technical Support

Products are often returned due to a technical problem rather than a defective product that may result in unnecessary shipping charges billed to you. Our trained support personnel can often resolve the problem over the phone. For more information on warranty service or repair, after the warranty period, contact our Support Department at the number below.

Customer support and quality service are integral parts of VIZIO's commitment to service excellence. For technical assistance contact our VIZIO Technical Support Department via email or phone.

Email: [techsupport@VIZIO.com](mailto:techsupport@VIZIO.com)

(877) 698-4946 Fax: (949) 585-9563

Hours of operation: Monday - Friday: 6 am to 9 pm

Saturday – Sunday: 8 am to 4 pm

Have your VIZIO model number, serial number, and date of purchase available before you call.

**VIZIO**

Address:

39 Tesla

Irvine, CA 92618, USA

Telephone: (888) 849-4623 (949) 428-2525 Fax: (949) 585-9514

Web: [www.VIZIO.com](http://www.VIZIO.com)



## Compliance

Caution: Always use a power cable that is properly grounded. Use the AC cords listed below for each area.

**USA:** UL  
**Germany:** VDE  
**Japan:** Electric Appliance Control Act

**Canada:** CSA  
**UK:** BASE/BS

## FCC Class B Radio Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC AC/DC power adapter, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

## Chapter 10 Specifications

Product specifications may change without notice or obligation.

### XVT423SV Specifications

|                               |  |  |
|-------------------------------|--|--|
| Panel                         | 42.02" Diagonal, 16:9 Aspect Ratio   |  |
| Resolution                    | 1920 x 1080 pixels   |  |
| Pixel (Dot) Pitch             | 0.4845mm (H) x 0.4845mm (V)  |  |
| Display Compatibility         | 1080P (FHDTV)  |  |
| Colors                        | 1.06 billion @ 10 bit  |  |
| Brightness<br>cd/m2 (typical) | 500nits  |  |
| Contrast                      | Dynamic Contrast Ratio: 10,000,000:1   |  |
| Response Time<br>(msec) TYP   | 5ms (Grey to Grey)   |  |
| Viewing Angle                 | 178° (horizontal/vertical)   |  |
| Inputs                        | 5 x HDMI with HDCP (1 on side)<br>1 x RF (F connector for internal tuner)<br>1x Composite Video and Stereo Audio<br>1x Component YPbPr plus Stereo Audio<br>1x Computer RGB plus Stereo Audio<br>1x Ethernet<br>3x USB (side)  |  |
| Outputs                       | 1x 5.1 S/PDIF Optical Digital Audio, 1x Stereo Audio   |  |
| Features                      | 1080P FHDTV, MEMC, 120Hz + Scanning B/L Panel, HDMI v1.4 (ARC), 3D Comb Filter, Digital Audio Amplifier, Dolby Digital for ATSC/QAM, Signal Compatibility: 480I(SDTV), 480P(EDTV), 720P(HDTV), 1080I(HDTV), 1080P(FHDTV), Channel Skip/Add, VIDEO/INPUT Naming Capability, Closed Caption, Parental Control/V-CHIP 2.0, Programmable Timer, PIP/POP, SRS TSHD, SRS TruVolume, Zero Bright Pixel Guarantee, Smart Dimming Technology, HD Game Port, Noise Reduction, 10-bit video processing, MTS Stereo Decoder, Dolby Digital for ATSC/QAM, VESA Mount Compatabile, Broadband Internet and Services Connectivity, Local dimming |  |
| Special Features              | <ul style="list-style-type: none"> <li>MEMC, 120Hz TruLED panel</li> <li>HDMI 1.4 (ARC), Insta Port</li> <li>HDMI CEC</li> </ul>   | <ul style="list-style-type: none"> <li>Jag Wheel Key</li> <li>Light Sensor</li> <li>Local Dimming</li> </ul> |
| Speakers                      | 2xBuilt-in, 15W Speakers   |  |
| Panel Life                    | 30,000 hours to half the original brightness   |  |
| <b>Power</b>                  |  |  |
| Input                         | IEC Connector for direct power line connection   |  |
| Voltage Range                 | 100~240 Vac at 50/60 Hz  |  |
| Power Consumption             | 94W (AVG), <1W (Standby)   |  |

### XVT423SV Specifications

|                |  |
|----------------|--|
| Non-Operating  | Temperature: -20°C~50°C, Relative Humidity: 10~70%, Altitude: 0~40,000 ft  |
| Dimensions     | 40.55" W x 27.87" H x 10.63" D with stand; 40.55"W x 26.18" H x 2.95"D without stand<br>1030 x 708 x 270 mm with stand; 1030 x 665 x 75 mm without stand |
| Net Weight     | 41.67 lbs with stand; 37.7 lbs without stand<br>18.9 kg with stand; 17.1 kg without stand  |
| Gross Weight   | 49.82 lbs; 22.6 kg   |
| Certifications | CSA, CSA-US, FCC Class B, BQB  |
| Compliances    | Energy Star 4.0. ATSC Spec A/65, EIA/CEA-766-A   |

### XVT473V Specifications

|                               |   |
|-------------------------------|---|
| Panel                         | 46.96" Diagonal, 16:9 Aspect Ratio  |
| Resolution                    | 1920 x 1080 pixels  |
| Pixel (Dot) Pitch             | 0.5415mm (H) x 0.5415mm (V)   |
| Display Compatibility         | 1080P (FHDTV)   |
| Colors                        | 1.06 billion @ 10 bit   |
| Brightness<br>cd/m2 (typical) | 500nits   |
| Contrast                      | Dynamic Contrast Ratio: 10,000,000:1  |
| Response Time<br>(msec) TYP   | 5ms (Grey to Grey)  |
| Viewing Angle                 | 178° (horizontal/vertical)  |
| Inputs                        | 5 x HDMI with HDCP (1 on side)<br>1 x RF (F connector for internal tuner)<br>1x Composite Video and Stereo Audio<br>1x Component YPbPr plus Stereo Audio<br>1x Computer RGB plus Stereo Audio<br>1x Ethernet<br>3x USB (side)   |
| Outputs                       | 1x 5.1 S/PDIF Optical Digital Audio, 1x Stereo Audio  |
| Features                      | 1080P FHDTV, MEMC, 120Hz + Scanning B/L Panel, HDMI v1.4 (ARC), 3D Comb Filter, Digital Audio Amplifier, Dolby Digital for ATSC/QAM, Signal Compatibility: 480I(SDTV), 480P(EDTV), 720P(HDTV), 1080I(HDTV), 1080P(FHDTV), Channel Skip/Add, VIDEO/INPUT Naming Capability, Closed Caption, Parental Control/V-CHIP 2.0, Programmable Timer, PIP/POP, SRS TSHD, SRS TruVolume, Zero Bright Pixel Guarantee, Smart Dimming Technology, HD Game Port, Noise Reduction, 10-bit video processing, MTS Stereo Decoder, Dolby Digital for ATSC/QAM, VESA Mount Compatible, Broadband Internet and Services Connectivity, Local dimming |
| Special Features              | <ul style="list-style-type: none"> <li>• MEMC, 120Hz panel TruLED panel</li> <li>• HDMI 1.4 (ARC), Insta Port</li> <li>• HDMI CEC</li> </ul>  |
|                               | <ul style="list-style-type: none"> <li>• Jag Wheel Key</li> <li>• Light Sensor</li> <li>• Local Dimming</li> </ul>  |
| Speakers                      | 2xBuilt-in, 10W Speakers  |
| Panel Life                    | 30,000 hours to half the original brightness  |

**XVT473V Specifications**

| <b>Power</b>                    |  |
|---------------------------------|--|
| Input                           | IEC Connector for direct power line connection   |
| Voltage Range                   | 100~240 Vac at 50/60 Hz  |
| Power Consumption               | 104W (AVG), <1W standby  |
| <b>Environmental Conditions</b> |  |
| Operating                       | Temperature: 5°C~35°C, Relative Humidity: 20~80%, Altitude: 0~14,000 ft  |
| Non-Operating                   | Temperature: -20°C~50°C, Relative Humidity: 10~70%, Altitude: 0~40,000 ft  |
| Dimensions                      | 45.22" W x 30.63" H x 10.62" D with stand; 45.22"W x 28.89"H x 2.95"D without stand<br>1148.7 x 778 x 269.81 mm with stand; 1148.7 x 733.85 x 75mm without stand |
| Net Weight                      | 55.18 lbs with stand; 51.7 lbs without stand<br>25.03 kg with stand; 23.45 kg without stand  |
| Gross Weight                    | 61.4 lbs; 27.85 kg   |
| Certifications                  | CSA, CSA-US, FCC Class B, BQB  |
| Compliances                     | Energy Star 4.0. ATSC Spec A/65, EIA/CEA-766-A   |

**XVT553V Specifications**

|   |   |
|---|---|
| Panel                                     | 54.64" Diagonal, 16:9 Aspect Ratio  |
| Resolution                                | 1920 x 1080 pixels  |
| Pixel (Dot) Pitch                         | 0.630mm (H) x 0.630mm (V)   |
| Display Compatibility                     | 1080P (FHDTV)   |
| Colors                                    | 1.06 billion @ 10 bit   |
| Brightness<br>cd/m <sup>2</sup> (typical) | 500nits   |
| Contrast                                  | Dynamic Contrast Ratio: 10,000,000:1  |
| Response Time<br>(msec) TYP               | 5ms (Grey to Grey)  |
| Viewing Angle                             | 178° (horizontal/vertical)  |
| Inputs                                    | 5 x HDMI with HDCP (1 on side)<br>1 x RF (F connector for internal tuner)<br>1x Composite Video and Stereo Audio<br>1x Component YPbPr plus Stereo Audio<br>1x Computer RGB plus Stereo Audio<br>1x Ethernet<br>3x USB (side) |
| Outputs                                   | 1x 5.1 S/PDIF Optical Digital Audio, 1x Stereo Audio  |

| <b>XVT553V Specifications</b>   |   |
|---------------------------------|---|
| Features                        | 1080P FHDTV, MEMC, 120Hz + Scanning B/L Panel, HDMI v1.4 (ARC), 3D Comb Filter, Digital Audio Amplifier, Dolby Digital for ATSC/QAM, Signal Compatibility: 480I(SDTV), 480P(EDTV), 720P(HDTV), 1080I(HDTV), 1080P(FHDTV), Channel Skip/Add, VIDEO/INPUT Naming Capability, Closed Caption, Parental Control/V-CHIP 2.0, Programmable Timer, PIP/POP, SRS TSHD, SRS TruVolume, Zero Bright Pixel Guarantee, Smart Dimming Technology, HD Game Port, Noise Reduction, 10-bit video processing, MTS Stereo Decoder, Dolby Digital for ATSC/QAM, VESA Mount Compatabile, Broadband Internet and Services Connectivity |
| Special Features                | <ul style="list-style-type: none"> <li>• MEMC, 120Hz panel TruLED panel</li> <li>• HDMI 1.4 (ARC), Insta Port</li> <li>• HDMI CEC</li> </ul> <ul style="list-style-type: none"> <li>• Jag Wheel Key</li> <li>• Light Sensor</li> <li>• Local Dimming</li> </ul>   |
| Speakers                        | 2xBuilt-in, 10W Speakers  |
| Panel Life                      | 30,000 hours to half the original brightness  |
| <b>Power</b>                    |   |
| Input                           | IEC Connector for direct power line connection  |
| Voltage Range                   | 100~240 Vac at 50/60 Hz   |
| Power Consumption               | 125W (AVG), <1W standby   |
| <b>Environmental Conditions</b> |   |
| Operating                       | Temperature: 5°C~35°C, Relative Humidity: 20~80%, Altitude: 0~14,000 ft   |
| Non-Operating                   | Temperature: -20°C~50°C, Relative Humidity: 10~70%, Altitude: 0~40,000 ft   |
| Dimensions                      | 52.18"W x 32.12"H x 12.99" D with stand; 52.18"W x 33.28"H x 2.99"D without stand<br>1325.5 x 890.7 x 330 mm with stand; 1325.5 x 845.3 x 75 mm without stand   |
| Net Weight                      | 76.06 lbs with stand; 68.12 lbs without stand<br>34.5kg with stand; 30.9 kg without stand   |
| Gross Weight                    | 96.12 lbs; 43.6 kg  |
| Certifications                  | CSA, CSA-US, FCC Class B, BQB   |
| Compliances                     | Energy Star 4.0. ATSC Spec A/65, EIA/CEA-766-A  |

## Preset PC Resolutions

If connecting to a PC through the RGB PC input, set the TV timing mode to VESA 1920x1080 at 60Hz for best picture quality (refer to the graphic card's user guide for questions on how to set this timing mode). See the table below for the factory preset resolutions.

| Mode No. | Resolution   | Refresh Rate (Hz) | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Horizontal Sync Polarity (TTL) | Vertical Sync Polarity (TTL) | Pixel Rate (MHz) | Remark  |
|----------|--------------|-------------------|----------------------------|-------------------------|--------------------------------|------------------------------|------------------|---------|
| 1        | 640 x 480    | 60                | 31.469                     | 59.941                  | N                              | N                            | 25.175           | Windows |
| 2        | 640 x 480    | 75                | 37.500                     | 75.000                  | N                              | N                            | 31.500           | Windows |
| 3        | 800 x 600    | 60                | 37.879                     | 60.317                  | P                              | P                            | 40.000           | Windows |
| 4        | 800 x 600    | 72                | 48.077                     | 72.188                  | P                              | P                            | 50.000           | Windows |
| 5        | 800 x 600    | 75                | 46.875                     | 75.000                  | P                              | P                            | 49.500           | Windows |
| 6        | 1024 x 768   | 60                | 48.363                     | 60.004                  | N                              | N                            | 65.000           | Windows |
| 7        | 1024 x 768   | 70                | 56.476                     | 70.069                  | N                              | N                            | 75.000           | Windows |
| 8        | 1024 x 768   | 75                | 60.023                     | 75.029                  | P                              | P                            | 78.750           | Windows |
| 9        | 720 x 400    | 70                | 31.469                     | 70.087                  | N                              | P                            | 28.322           | DOS     |
| 10       | □1920 x 1080 | 60                | 66.587                     | 59.934                  | P                              | N                            | 138.50           | Windows |

**Note:** P: positive, N: negative, □: Primary mode

## Resolution through RGB Input

If your PC supports VESA Reduce Blanking timing via the VGA card drive program (usually offered by the VGA Card Manufacturer), your TV set is equipped to have the 1920x1080 resolution display through this connection using the following timing 138.5MHz. The following parameters are often the values required by the software or programs to set up the display:

| Parameters        | Horizontal Values (Pixels) | Vertical Values (Lines) |
|-------------------|----------------------------|-------------------------|
| Address           | 1920                       | 1080                    |
| Front Porch       | 48                         | 3                       |
| Sync Width        | 32                         | 5                       |
| Back Porch        | 80                         | 23                      |
| Total             | 2080                       | 1111                    |
| Frequency         | 66.587 KHz                 | 59.934 Hz               |
| Sync Polarity     | P                          | N                       |
| Pixel Rate (MHz)  | 138.5                      |                         |
| Refresh Rate (Hz) | 60                         |                         |

## Warranty

### ONE-YEAR LIMITED WARRANTY ON PARTS AND LABOR

*(Covers units purchased as new in United States and Puerto Rico Only)*

VIZIO provides a warranty to the original purchaser of its products against defects in materials and workmanship for a period of one year of non-commercial usage and ninety (90) days of commercial use. If a VIZIO product is defective within the warranty period, VIZIO will either repair or replace the unit at its sole option and discretion.

To obtain warranty service, contact VIZIO Technical Support via email: [TechSupport@VIZIO.com](mailto:TechSupport@VIZIO.com) or via phone at 877 MY VIZIO (877.698.4946) from 6:00AM to 9:00PM Monday through Friday and 8:00AM to 4:00PM Saturday and Sunday, Pacific Time, or visit [www.VIZIO.com](http://www.VIZIO.com). Proof of purchase in the form of a purchase receipt or copy thereof is required.

### Parts and Labor

There will be no charge for parts or labor during the warranty period. Replacement parts and units may be new or recertified at VIZIO's option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty or for ninety (90) days from warranty service or replacement, whichever is later.

### Types of Service

Units 30" or larger will usually be serviced in-home. In-home service requires complete and easy access to the unit and does not include de-installation or re-installation of the product. However, in some cases, it may be necessary to send the unit to a VIZIO service center. VIZIO will cover the transportation charges to and from the same customer location.

Units less than 30" must be sent to a VIZIO service center. VIZIO is not responsible for transportation costs to the service center, but VIZIO will cover return shipping to the customer. **PRE-AUTHORIZATION IS REQUIRED BEFORE SENDING ANY UNIT IN FOR SERVICE.**

Any returns to VIZIO's service centers must utilize either the original carton box and shipping material or a replacement box and material provided by VIZIO. VIZIO technical support will provide instructions for packing and shipping the unit to the VIZIO service center.

### Limitations and Exclusions

VIZIO's one-year limited warranty only covers defects in materials and workmanship. Items not covered include but are not limited to cosmetic damage, normal wear and tear, misuse, signal issues, power surges, and damages from shipping, acts of God, any sort of customer misuse, installation, customer modifications, adjustments, and set-up issues. Units with unreadable or removed serial numbers, "image burn-in", and routine maintenance are not covered. This warranty does not cover products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THESE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. VIZIO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE DISPLAY. VIZIO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE. CHECK [www.VIZIO.com](http://www.VIZIO.com) FOR THE MOST CURRENT VERSION.

### Personal Data

If your VIZIO product is capable of storing personal data and other information, **ALL CONTENTS AND INFORMATION WILL BE DELETED IN THE COURSE OF SOME IN-HOME AND ALL SHIP-IN WARRANTY SERVICE.** If this occurs, your product will be restored to you configured **as originally purchased.** You will be **responsible for restoring all applicable data and passwords.** Recovery and reinstallation of user data is not covered under this Limited Warranty. **In order to protect your personal information, VIZIO recommends that you always clear all personal information from the unit before it is serviced, regardless of the servicer.**

### ZERO BRIGHT PIXEL DEFECT GUARANTEE

This policy covers "zero bright pixel" defects for the duration of the limited "ONE YEAR WARRANTY" on select new product purchases. To determine if this guarantee applies to your product, refer to the "DETAILS" tab of the model's product information page ([www.VIZIO.com](http://www.VIZIO.com)) or look for the "zero bright pixel" guarantee on the box.

# Index

|  |        |                                |        |
|--|--------|--------------------------------|--------|
| 16:9.....                                  | 36     | Controls                       |        |
| 4:3.....                                   | 36     | Front Panel.....               | 12     |
| Accessories.....                           | 9      | Jag Wheel.....                 | 12     |
| Adjustments                                |        | Daylight Savings setting.....  | 45     |
| Advanced.....                              | 35     | Device Setup.....              | 17     |
| Advanced Adjustments.....                  | 35     | Device Setup.....              | 43     |
| Ambient Light Sensor.....                  | 39     | DTV Transition.....            | 5      |
| Antenna.....                               | 22     | DVD Player                     |        |
| Apps                                       |        | Connecting.....                | 25     |
| Adding.....                                | 32     | DVI                            |        |
| Moving.....                                | 33     | Cable Box.....                 | 23     |
| Navigating.....                            | 32     | Satellite Box.....             | 23     |
| Using.....                                 | 32     | EPG.....                       | 20     |
| Aspect Ratio.....                          | 36     | Equalizer Settings.....        | 41     |
| Audio Menu                                 |        | Ethernet (wired) Settings..... | 47     |
| Advanced Audio.....                        | 40     | Ethernet Connection.....       | 30     |
| Analog Audio Out adjustments.....          | 40     | Firmware Updates.....          | 34     |
| Audio Control.....                         | 40     | Getting Started.....           | 18     |
| Audio Mode.....                            | 40     | Grounding.....                 | 4      |
| Balance.....                               | 40     | GUIDE Button.....              | 20     |
| Digital Audio Out.....                     | 40     | HDMI.....                      | 22     |
| Equalizer adjustments.....                 | 41     | HDTV Location.....             | 10     |
| Lip Sync.....                              | 40     | Help Menu                      |        |
| SRS TruVolume.....                         | 40     | Reset All Settings.....        | 49     |
| SRS TSHD (surround sound) adjustments..... | 40     | Setup Wizard.....              | 49     |
| TV Speakers.....                           | 40, 41 | System Info.....               | 49     |
| AV connector.....                          | 22     | Help Menu.....                 | 49     |
| Blackbars.....                             | 36     | Home Network Connection.....   | 30     |
| Blocking Channels.....                     | 44     | INFO Button.....               | 21, 31 |
| Bluetooth.....                             | 48     | Input Source                   |        |
| Bluetooth Remote Control.....              | 14     | Choosing.....                  | 19     |
| Brightness.....                            | 38     | Input Source.....              | 37     |
| Cable Box                                  |        | Inputs                         |        |
| Connecting.....                            | 23     | Antenna.....                   | 4      |
| CC Closed Caption.....                     | 37     | Connectors.....                | 22     |
| Cleaning.....                              | 50     | Internet                       |        |
| Color.....                                 | 38     | Connecting.....                | 19, 31 |
| Component Connector.....                   | 22     | Connecting for VIA.....        | 19, 31 |
| Composite Connector.....                   | 22     | Jag Wheel.....                 | 12     |
| Computer                                   |        | Maintenance of TV.....         | 50     |
| Connecting.....                            | 29     | Menu Language.....             | 45     |
| Preset Resolutions.....                    | 61     | Name Input.....                | 42     |
| Resolution through RGB.....                | 61     | Navigating VIA.....            | 16     |
| Connecting                                 |        | Network.....                   | 47     |
| Bluetooth.....                             | 48     | Network Menu                   |        |
| Computer.....                              | 29     | Bluetooth.....                 | 48     |
| Ethernet.....                              | 30     | Ethernet (wireless).....       | 47     |
| Ethernet.....                              | 13     | Wireless.....                  | 47     |
| RGB.....                                   | 29     | OSD.....                       | 35     |
| VGA.....                                   | 29     | CC Menu.....                   | 37     |
| Connecting Equipment                       |        | Help Menu.....                 | 49     |
| Cable.....                                 | 23     | PIP Menu.....                  | 46     |
| DVD.....                                   | 25     | Sleep Timer Menu.....          | 37     |
| Satellite Box.....                         | 23     | Wide Menu.....                 | 36     |
| Sound system.....                          | 28     | Parental Controls              |        |
| VCR.....                                   | 27     | Block Unrated TV.....          | 45     |
| Video Camera.....                          | 27     | Canadian English Rating.....   | 44     |
| Contents.....                              | 9      | Canadian French Rating.....    | 45     |
| Contrast.....                              | 38     | Change the Password.....       | 45     |



|                            |        |                                  |        |
|----------------------------|--------|----------------------------------|--------|
| Channel Block .....        | 44     | Connecting .....                 | 23     |
| Rating Enable .....        | 43     | Search for channels .....        | 41     |
| Reset Locks .....          | 45     | Setting Up .....                 | 10     |
| USA Movie Rating .....     | 44     | Settings Menu                    |        |
| USA TV Rating .....        | 44     | Audio .....                      | 40, 42 |
| Parental Controls .....    | 43     | Menu Language .....              | 45     |
| Password .....             | 45     | Parental Controls Menu .....     | 43     |
| Picture                    |        | Setup Wizard .....               | 18     |
| Reset Picture Mode .....   | 39     | Sharpness .....                  | 38     |
| Picture Menu .....         | 38     | Sidebar .....                    | 21, 31 |
| Adaptive Luma .....        | 39     | Skip Channel .....               | 42     |
| Advanced Video .....       | 39     | Software Updates .....           | 34     |
| Ambient Light Sensor ..... | 39     | Specifications .....             | 57     |
| Backlight .....            | 38     | System Information .....         | 49     |
| Brightness .....           | 38     | Technical Support .....          | 55     |
| Color .....                | 38     | Time Zone setting .....          | 45     |
| Color Enhancement .....    | 39     | Tint .....                       | 38     |
| Color Temperature .....    | 38     | Troubleshooting .....            | 50     |
| Contrast .....             | 38     | Tuner Menu                       |        |
| Film Mode .....            | 39     | Add Analog Channel .....         | 42     |
| Noise Reduction .....      | 39     | Analog MTS .....                 | 42     |
| Picture Mode .....         | 38     | Auto Search .....                | 41     |
| Real Cinema .....          | 39     | Digital MTS .....                | 42     |
| Sharpness .....            | 38     | Partial Channel Search .....     | 42     |
| Size & Position .....      | 38     | Skip Channel .....               | 42     |
| Smooth Motion .....        | 39     | Tuner Mode .....                 | 41     |
| Tint .....                 | 38     | TV Menu .....                    | 35     |
| PIP .....                  | 46     | TV Settings App .....            | 21, 31 |
| Audio .....                | 46     | Input Menu .....                 | 35     |
| Mode .....                 | 46     | Network Menu .....               | 47     |
| Position .....             | 46     | TV Settings Menu .....           | 37     |
| Size .....                 | 46     | TV Settings Menu                 |        |
| Source .....               | 46     | Device Setup .....               | 43     |
| Postal Code setting .....  | 45     | Time & Local Settings .....      | 45     |
| Profile App .....          | 21, 31 | Tuner Menu .....                 | 41     |
| Profiles                   |        | Updates .....                    | 34     |
| Creating .....             | 33     | VCR                              |        |
| Editing .....              | 34     | Connecting .....                 | 27     |
| Removing .....             | 34     | VIA                              |        |
| Switching .....            | 34     | Apps .....                       | 32     |
| Using .....                | 33     | Connecting to the Internet ..... | 19, 31 |
| Remote Control .....       | 14     | Exploring .....                  | 21, 31 |
| A/V Functions .....        | 16     | Remote Control .....             | 32     |
| Batteries .....            | 14     | Sidebar .....                    | 21, 31 |
| Bluetooth Activation ..... | 14     | Using .....                      | 31     |
| Device Setup .....         | 17     | VIA Dock .....                   | 21, 31 |
| Front .....                | 15     | VIA Dock .....                   | 21, 31 |
| Precautions .....          | 17     | Video Camera                     |        |
| TV Functions .....         | 15     | Connecting .....                 | 27     |
| Universal .....            | 17     | Wall mounting .....              | 11     |
| VIA buttons .....          | 32     | Warranty .....                   | 62     |
| VIA Functions .....        | 16     | Watching TV                      |        |
| Reset                      |        | Getting your Programs .....      | 19     |
| All TV Settings .....      | 49     | Program Information .....        | 20     |
| Factory Default .....      | 49     | Wide .....                       | 36     |
| Picture Settings .....     | 39     | Widget Gallery .....             | 32     |
| RGB .....                  | 22     | Widget Gallery .....             | 21, 31 |
| Safety Instructions .....  | 2      | Wireless Settings .....          | 47     |
| Satellite Box              |        | Wizard .....                     | 49     |

# VIZIO

TRADEMARKS SHOWN ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. IMAGES USED ARE FOR ILLUSTRATION PURPOSES ONLY. VIZIO, THE V LOGO, WHERE VISION MEETS VALUE AND OTHER VIZIO TRADEMARKS ARE THE INTELLECTUAL PROPERTY OF VIZIO INC. PRODUCT FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE. © 2010 VIZIO INC. ALL RIGHTS RESERVED.

[www.vizio.com](http://www.vizio.com)

