

## Instructions for updating M220MV firmware

## Applies to Vizio TV Model M220MV ONLY

- 1. After downloading the firmware, format a USB flash Memory stick with FAT32 format. (Mandatory, otherwise, it cannot upgrade the firmware)
- 2. Copy the m220mvfwsu.img file to the USB Flash memory.
- 3. Rename the file to fwsu.img in the USB Flash memory before program.
- 4. Remove the Power Adapter from the back of the TV.
- 5. Insert the USB Flash memory into the USB connector, located near the RF connector.
- 6. Plug the Power Cable to the TV.
- 7. Use the remote control to turn ON the TV.
- 8. At the bottom of the TV, it should display the red or blue bar from left to right that indicates the software is upgrading the firmware.
- 9. The upgraded firmware is done after the front VIZIO logo is OFF and there is only the Power LED is ON.
- 10. Disconnect the power Adapter again, and remove the USB flash memory.
- 11. Plug the power cable back, and turn ON the TV.
- 12. Make sure that you can see the Info will display the firmware Version 1.49
- 13. Continue to setup and scan the channel as a new TV.
- 14. Re-power the TV after setup.

End of procedure.