



Before You Begin

- Verify all of the contents of your accessory package
- Review safety guidelines in Owner's Manual
- Place your High Definition TV so that the rear connectors are accessible
- Install AA batteries into the VIZIO Remote Control
- Write down your VF550XVT 1A Serial Number (located on the back)


Contents:

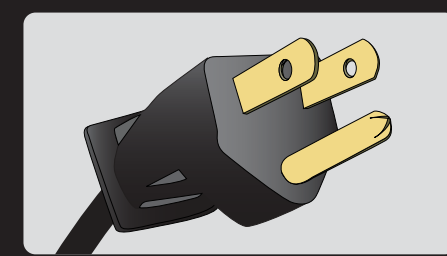


Power Cord

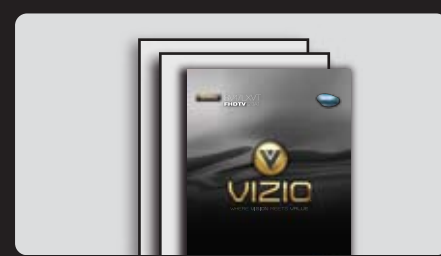

VIZIO HDTV User Manual, VIP Brochure and Registration Card.

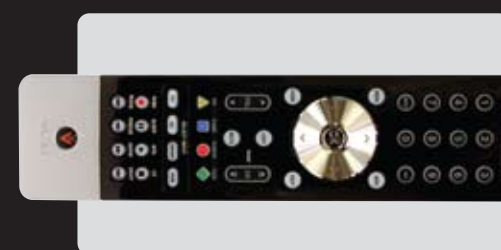

Remote Control
Includes 2 AA Batteries

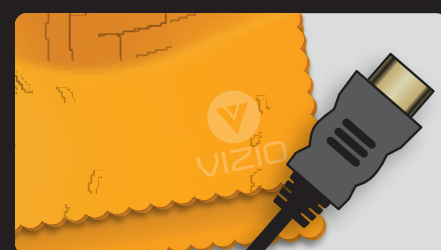


Screen Cloth & HDMI Cable

The Best Connection

For the best quality picture, we recommend using HDMI, DTV, RGB or Component inputs when possible. These are the only inputs capable of high definition (HD). Using these inputs does not guarantee high definition unless a high definition source is connected. However, not all equipment is capable of these connections. TV, AV and S-Video are not capable of HD signals.

Both DTV and TV share the same port. The television will automatically register which input type is connected.

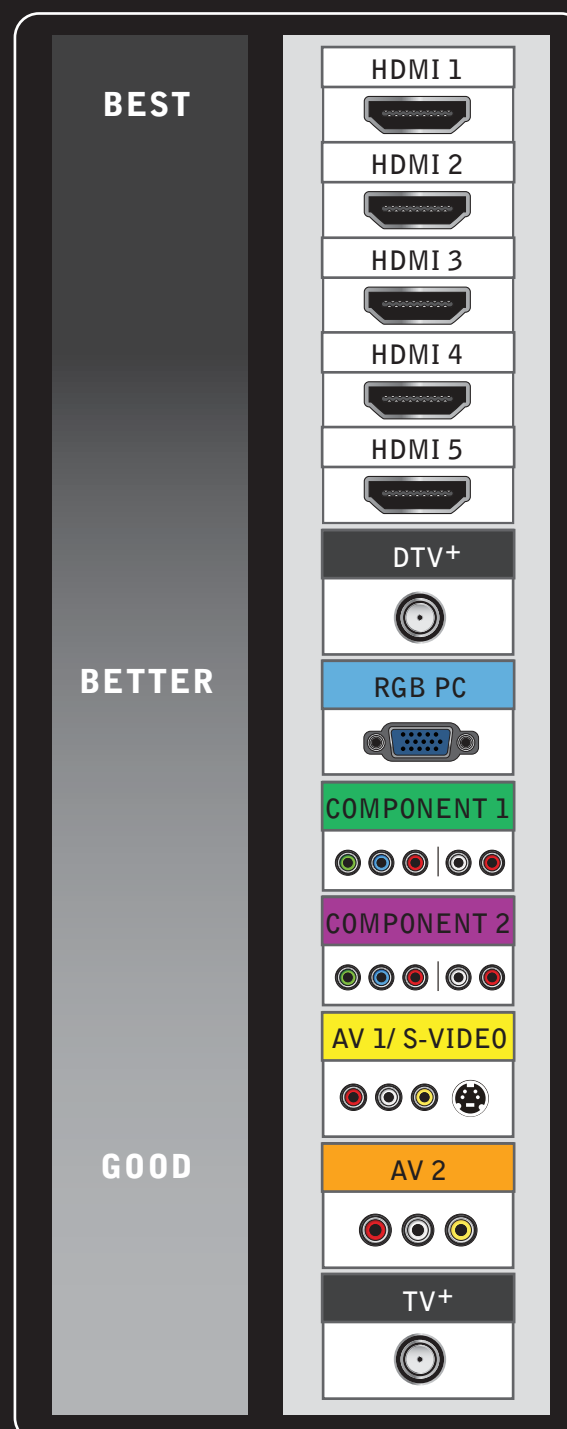

Four Easy Steps Simply follow our color-coded Step Charts and you're done.

- 1) Choose items to connect to your VIZIO HDTV**
- 2) Choose equipment connection methods**
- 3) Select cables and make connections**
- 4) Use your VIZIO HDTV**

- Determine which type of Signal Source and any Additional Equipment you wish to connect to your VIZIO HDTV.
- The colored dots under each Signal Source and Additional Equipment indicate which type of connections you may use to connect to your VIZIO HDTV.

- Using the colored dots from Step One, follow the row across to Step Two to match up the colored dots to the same colored connection method.
- Choose **ONLY** one method for each piece of equipment.

- Once you have determined the connection methods from Step Two, follow the row to Step Three to determine what kind of cables you need and what the connections look like on your equipment.
- Following the color-coded system, use the appropriate cables and connect your Signal Source and Additional Equipment to the color-coded inputs on your VIZIO HDTV. (Refer to **Connection Map** at bottom of page.)
- Once connected, turn on your VIZIO HDTV and all your equipment.

- Follow the programming instructions on the other side of this guide.
- If you are using the DTV/TV input, turn over this guide and follow Procedure 1.
- If you are using an input other than DTV/TV, turn over this guide and follow Procedure 2.

Signal Sources					Additional Equipment								
Cable	Antenna	Cable Box	Digital Cable Box	Satellite Box	Computer	Digital Camera	DVD	DVR	Game System	Sound System	VCR	Video Camera	
			○	○			○	○	○				
			○	○			○	○	○				
			○	○			○	○	○				
			○	○			○	○	○				
●	●	●					●					●	
					●								
			●	●			●	●	●				
			●	●			●	●	●				
		●				●	●	●	●			●	●
		●				●	●	●	●			●	●
													○

Connection Methods


HDMI 1 TYPE: Digital High Definition QUALITY: Best Digital
HDMI 2 TYPE: Digital High Definition QUALITY: Best Digital
HDMI 3 TYPE: Digital High Definition QUALITY: Best Digital
HDMI 4 TYPE: Digital High Definition QUALITY: Best Digital
HDMI 5 TYPE: Digital High Definition QUALITY: Best Digital
DTV / TV TYPE: Cable/Antenna QUALITY: Best Digital/Good Analog
RGB PC TYPE: RGB Analog QUALITY: Best Analog
COMPONENT 1 TYPE: Component Analog QUALITY: Better Analog
COMPONENT 2 TYPE: Component Analog QUALITY: Better Analog
AV1/S-VIDEO TYPE: Analog QUALITY: Good Analog
AV2 TYPE: Analog QUALITY: Good Analog
OPTICAL TYPE: Digital Audio Out QUALITY: Best Digital
AUDIO OUT TYPE: Analog Audio Out QUALITY: Good Analog

My Equipment Has / My VIZIO HDTV Has / Cable Needed


My Equipment Has	My VIZIO HDTV Has	Cable Needed
HDMI	HDMI	HDMI*
HDMI OR DVI	HDMI	HDMI* or HDMI* to DVI & RCA Audio
HDMI	HDMI	HDMI*
HDMI	HDMI	HDMI*
HDMI	HDMI	HDMI*
		Coaxial (RF) Cable*
Optional Audio	Optional Audio	VGA Cable & stereo mini-jack
		Component & Stereo RCA Cable*
		Component & Stereo RCA Cable*
		A/V RCA Cable & S-Video Cable*
		A/V RCA Cable*
		Optical Audio Cable
		Stereo RCA Cable

*Please see "For Your Information" on reverse side

Connection Reference

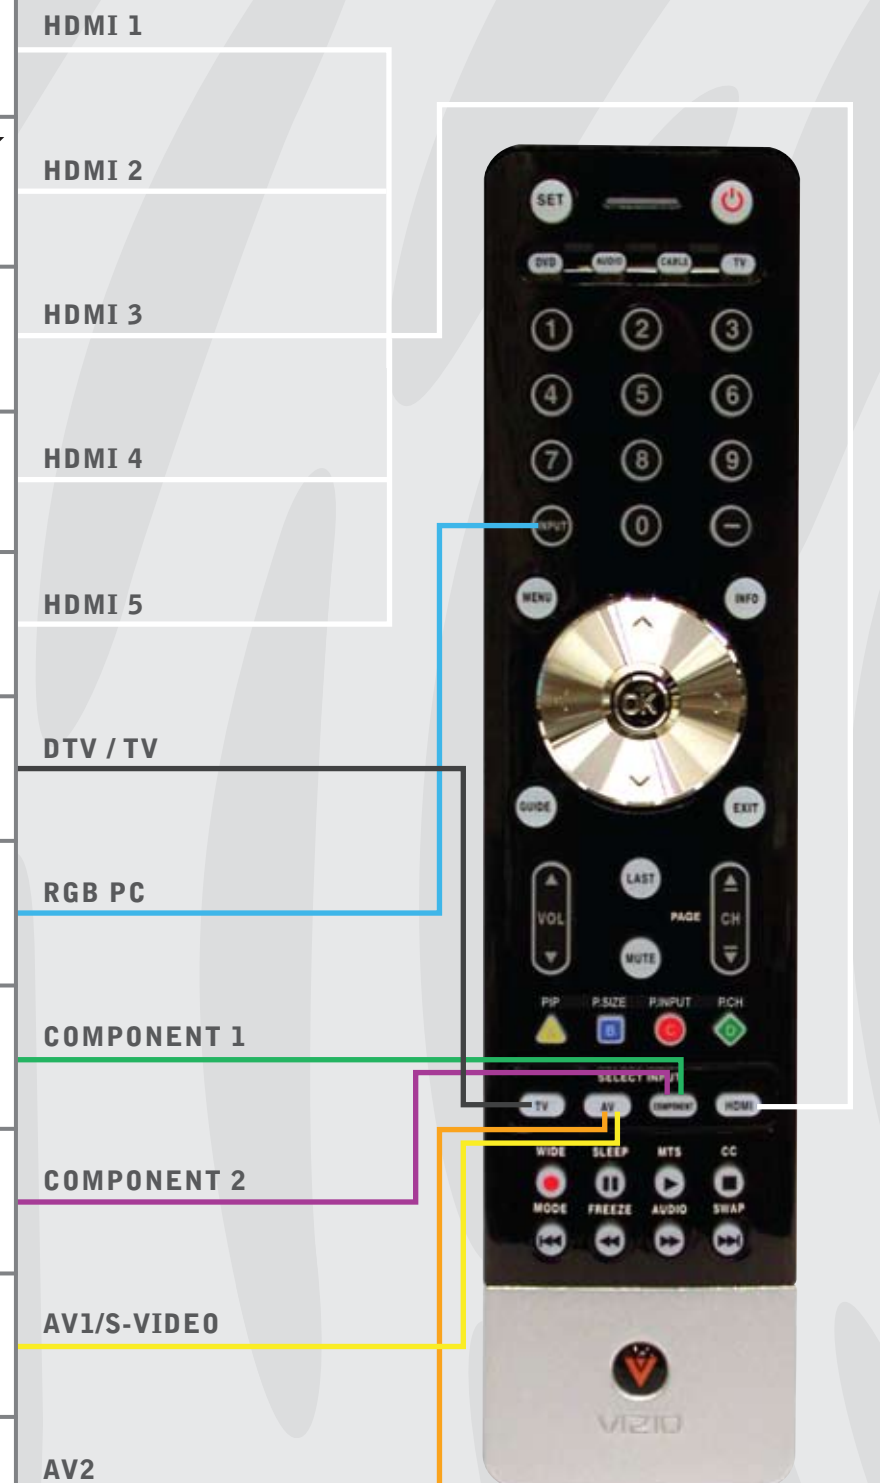

SIDE OF TV

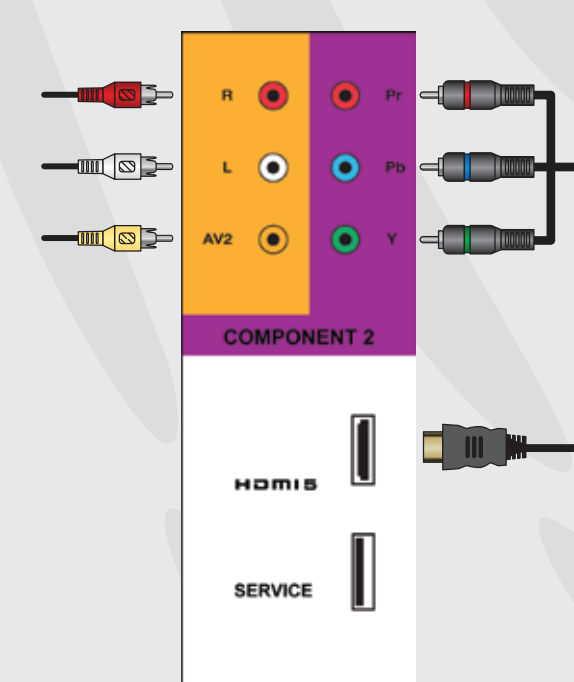

3 WAYS TO GET HDTV

- 1) Off-Air antenna (using the DTV antenna input). To see if you are able to receive HD signals off-air and for help choosing the right antenna, visit www.antennaweb.org.
- 2) Cable - Subscribe to HD programming through your local cable company (HD cable box required).
- 3) Satellite - Subscribe to HD programming through Direct TV or Dish Network (HD satellite receiver required).


In need of a particular cable to make the connection you want?

VIZIO-certified cables are available at www.VIZIO.com (view back for more details).

For additional help with connecting components to your VIZIO TV, visit <http://ceaconnectionsguide.com> for an interactive guide

For more information, see your Owner's Manual, Chapter 2, CONNECTING EQUIPMENT.

BACK OF TV

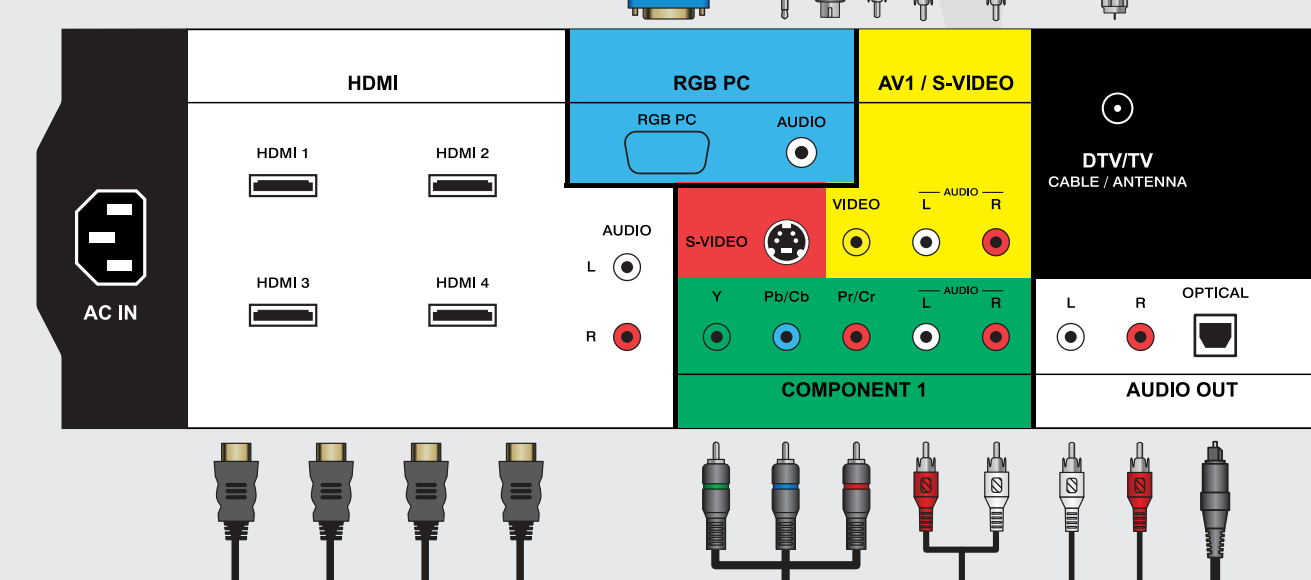


VIZIO provides installation services, cables & wall mounts (see details for Optional Components on back). Visit www.VIZIO.com or call 1-888-849-4623 to order today.

Programming your TV to Receive and Display Channels: All you need is your Remote Control.

1 Receiving Channels through DTV/TV Input using Antenna or Regular Cable Service (No Box) Signals.

STEP 1.1

- A** Connect your signal source (cable from antenna or cable from the wall for Cable Service without box) directly to the DTV/TV RF (commonly named COAXIAL) connector.

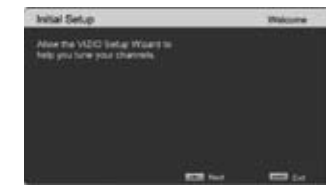

STEP 1.2


- A** Turn on the TV. The Initial Setup menu screen should appear. If this screen does not appear, see User's Manual, Chapter 3 for TV Tuner Setup. Please choose Home Mode for energy savings.
- B** Press **OK** key to initialize the process.
- C** Select Language: English, Español or Français. Press **OK** button to go to next screen.
- D** Press **▲** or **▼** once to select Cable or Antenna.
- E** Press **OK** to continue to next screen.
- F** Press **OK** key on remote control to scan for channels. Scanning for available channels could take several minutes.
- G** Once scanning is finished, programming is complete. Press the **EXIT** key to quit.



2 Displaying Channels from different Signal Sources (External TV Tuner, VCR, Cable Box or Satellite Receiver) through different Inputs.

STEP 2.1

- A** Select the desired input connection: RF (DTV/TV)*, Composite (Yellow, Red and White)*, Component YPbPr (Green, Blue and Red plus Red and White)*, HDMI* or S-Video (AV) plus Red and White

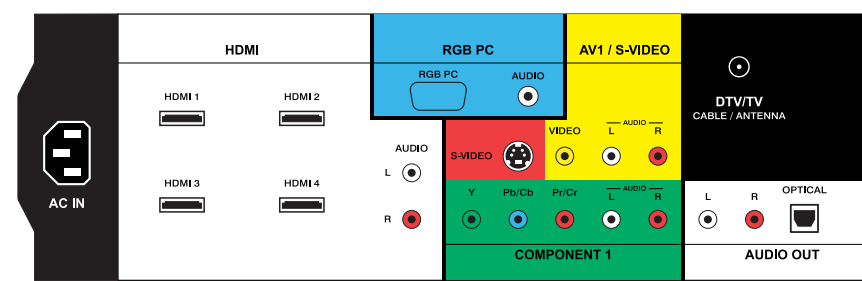

STEP 2.2

- A** Turn on the TV. The Initial Setup menu screen should appear. Press **MENU** on remote control to initialize the process. If the screen does not appear, please skip to Step D.
- B** Select Language: English, Español or Français.
- C** Press **EXIT** key to quit the Initial Setup menu.
- D** If you have an HD service, use the HDMI (best) or Component connection.



- E** Turn on your Cable Box, VCR, External TV Tuner or Satellite Receiver and you will see a picture on your TV. If there is no picture, please make sure you have selected the correct input on the TV.

- F** If the selected input is RF connection, please select either channel 3 or channel 4 matching the channel which has been selected on the back of the VCR, Cable Box, External TV Tuner or Satellite Receiver. Please refer to the User's Manual of the respective equipment for details.

NOTE: The TV will be displaying any television station or program selected by the Cable Box, VCR, External Tuner or Satellite Receiver. The TV will not be able to change programs or channels. This is controlled by the equipment sending the signal. If the service being used includes a box with two different outputs for two different (distant) rooms, then scanning channels should help to find the signal. The channel to be selected varies from one provider to another. It may be necessary to call your Cable or Satellite company so they can provide you with the specific channel to use with high-definition TV sets. Some examples of these channels are: 105, 106, 115 and 116.

3 Fine Tuning your TV for Optimal Performance.

After completing either Procedure 1 or Procedure 2, please follow the steps below to optimize your TV set display:

1. Press the **MENU** key to bring up the Menu display. Press the **OK** to set the mode to standard.
2. With picture option highlighted, press the **OK** button to select. Press **▼** to scroll to the Advanced Video option.
3. Press **OK** to select it. Press **▼** to scroll to the Color Temperature option.
4. Press **OK** to select it. Press either **◀** or **▶** to change the Color Temperature option to Normal.
5. Press the **EXIT** button to exit the on screen display menu.



NOTE: If you followed Procedure 1, take the following steps to ensure that the correct program times are shown when pressing the Guide key:

- Press the **MENU** key, then press **▼** to highlight the TV option and press **▶** to select. In the next screen, press **▼** to highlight Time Zone and press either **◀** or **▶** to select the proper time zone. Press the **EXIT** button to exit the on screen menu.



*For Your Information:

- A** Coaxial connection (RF connector) is recognized as the threaded connector, commonly called cable, screw on or coaxial connector which carries the image (picture) and sound (audio) through a single cable.
- B** Composite connection (RCA connectors) are recognized by the three (yellow, red and white) standardized color coded connectors. Yellow carries the image (picture) plus; Red (right channel) and white (left channel) carry the sound (audio) portion of the signal.
- C** Component connection (RCA connectors) are recognized by the three (green, blue and red) standardized color coded connectors for image (picture) plus the two (red and white) standardized color coded connectors for the sound (audio) portion of the signal.
- D** HDMI (High-Definition Multimedia Interface) connection (HDMI connector) is recognized by the standardized elongated D-Shaped connector which carries both the image (picture) and the sound (audio) through a single cable.
- E** S-Video (Separate Video) connection (4-pin Mini-DIN connector) is recognized by the small connectors with four pins in it. This connection carries only the image (picture) signal. The audio is supplied by using the two (red and white) standardized color coded RCA connectors associated with the S-Video input.


Programming Your Cable or Satellite Box Remote

Consult your Cable or Satellite Owner's Manual to determine if you need a 3, 4 or 5-digit code. If your Cable or Satellite Box requires:

- 3-digits, please use "627" (This code usually works with DISHNetwork.)
- 4-digits, please use "1758", "0178" or "0128"
- 5-digits, please use "11758", "10178" or "10128" (These codes usually work with DIRECTV.)

Your new TV is now ready

to automatically reproduce the best picture quality from the input signal. Enjoy your VIZIO HDTV.

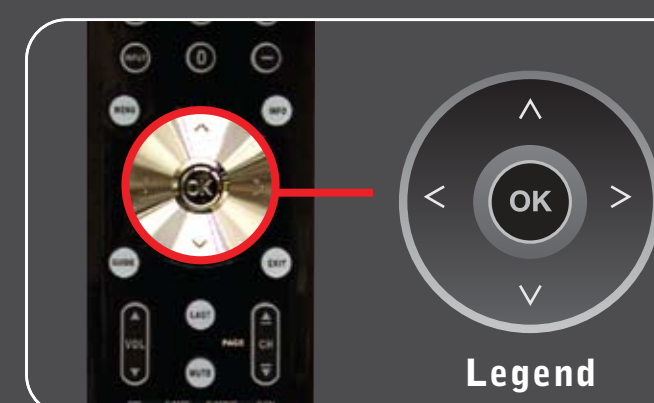

These small arrows correspond to the arrows shown in the above Steps. They surround the MENU key.

Legend

Optional Components



ENHANCE YOUR VIZIO EXPERIENCE

When it comes to components and accessories, don't settle for less than VIZIO. We offer a full line of products specifically designed to accentuate your VIZIO HDTV. To learn more about how you can enhance your VIZIO experience, call 888-849-4623 or visit www.VIZIO.com.



VIZIO HIGH-DEFINITION CERTIFIED CABLES

Our VIZIO Certified HD cables carry the same standards of excellence as all our VIZIO products. Available in: DVI, HDMI and Component in lengths of 2, 5, and 10 meters.



VIZIO CERTIFIED MOUNTS

FLUSH MOUNT- turn your HDTV into a work of art
TILT MOUNT- adjust your HDTV for the most comfortable viewing position
ARTICULATING ARM- position your HDTV exactly where you want it

The mounts shown here are among a wide array of mounting solutions. Visit www.VIZIO.com to view the entire line.