

VIZIO

ULTRA SLIM TILT MOUNT

UNIVERSAL FOR 37" - 60" TVS UP TO 120 LBS

XMT1200 - QUICK INSTALL GUIDE

IMPORTANT SAFETY INFORMATION



Read the Important Safety Information on this page before installing or using this mounting system.



Always follow the instructions in this Quick Install Guide. VIZIO is not liable for damage or injury caused by incorrect mounting, assembly, or use.



This mount fits most screens from 37" to 60".



This mounting system supports a maximum weight of 120 lbs and a maximum screen size of 60". Attaching a screen that is larger or heavier than specified above may result in personal injury or damage to your TV.



If you have any doubts about the ability of the wall to support the mounting system or your TV, do not install the mounting system. Contact a qualified contractor.



Only attach this mount system to vertical walls as instructed in this Quick Install Guide.



This mounting system is for indoor use only.



Keep all contents of this box away from small children. This product contains small items that could be a choking hazard if swallowed.

STEP 1 - BEFORE YOU BEGIN

Before you begin the installation, ensure you have all of the items listed on this page. Do not begin the installation unless you have **all** of the following items.



Mounting a TV requires power tools. If you are unfamiliar with safe power tool use, consult a professional installer.



Mounting a TV requires lifting. To make the installation easier and safer, have someone help you. Always lift properly.

TWO-PERSON JOB



YOU WILL NEED



Power Drill



1/2" (12.5mm) Concrete Drill Bit



7/32" (5.5mm) Drill Bit



Level



Pencil



Phillips-head Screwdriver



Electronic Stud Finder



Assorted Wrenches

Not Included

STEP 2 - REVIEW THE PACKAGE CONTENTS



Before you begin, ensure all parts are included and undamaged. To prevent loss, do not unpack the small parts until they are required. If any parts are missing or damaged, contact VIZIO Customer Service (877) 698-4946.




Quick Install Guide &
Wall-Mount Template



x 1



x 2

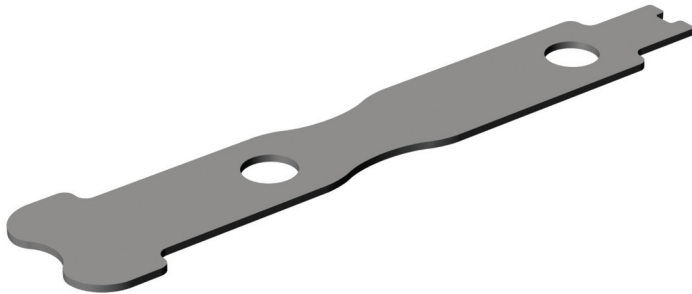

x 1








x 1



x 1

Sec T5

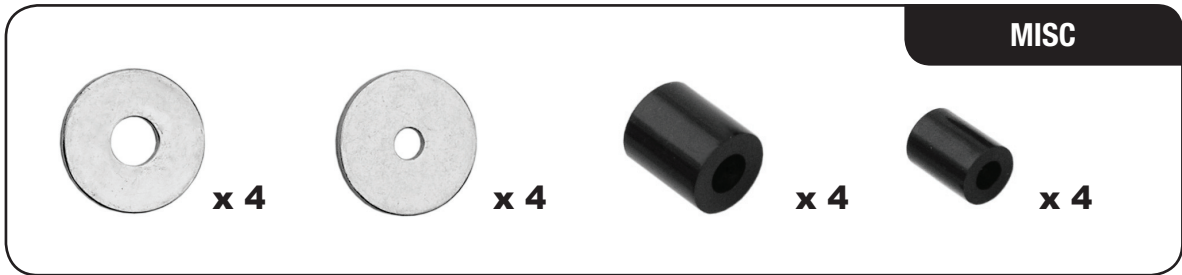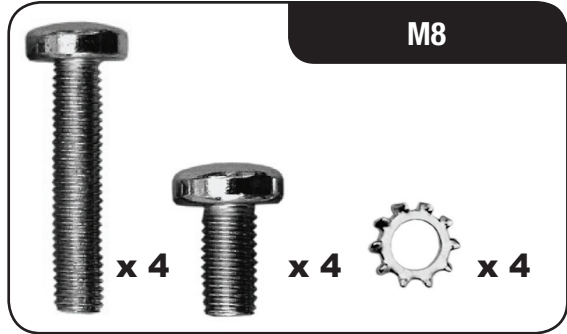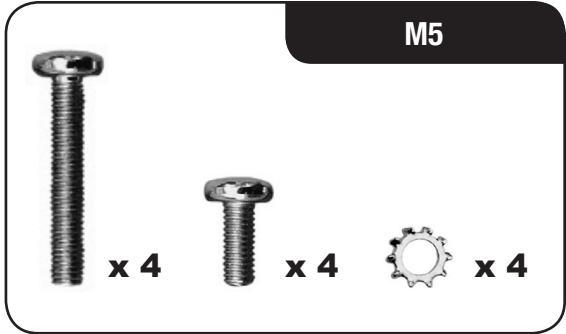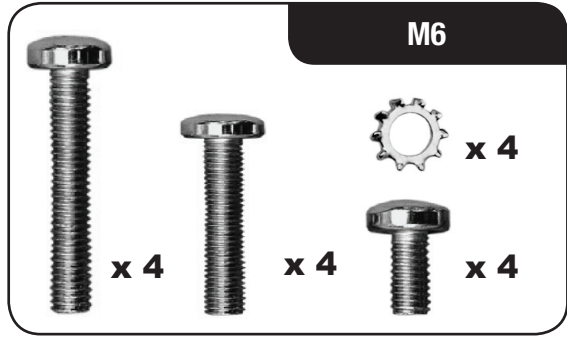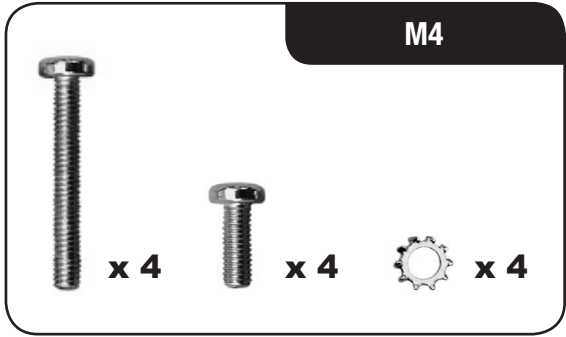


STEP 3A - MOUNTING TO A WALL WITH WOOD STUDS

The mount can be attached to walls with wood studs. The wall covering (drywall, lath, plaster, etc.) may not be thicker than 1/2".

If you are mounting on a concrete wall, go to Step 3B on page 6.

1. Use the electronic stud finder to locate two studs in the wall. The studs should be approximately 16" apart. Use the pencil to mark the areas of the wall where the studs are located.

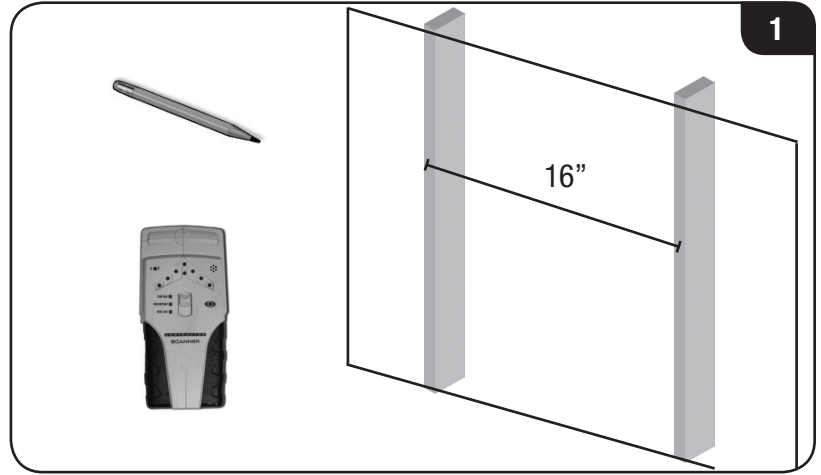

2. Hold the mount against the wall, using the pencil marks as a guide. Ensure the slots in the mount line up with the studs.


Use the built-in level to level the mount.

When the mount is level, hold it in place and use the pencil to mark the areas inside the slots where bolt holes will be drilled.

Ensure the marks you make are over the studs.




Instead of holding the mount against the wall, you can use the included template. Please note: To level the template, you will need a level (not included).

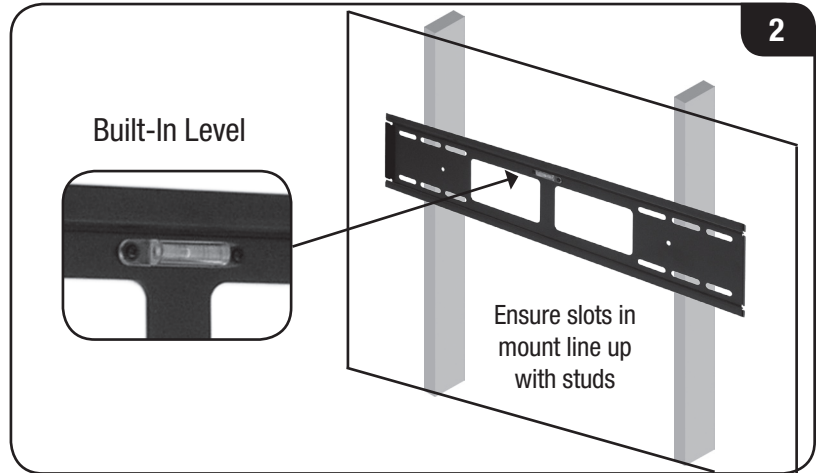

3. Place the mount on the floor.

Using the power drill and the 7/32" drill bit, drill into the pencil marks as shown. **Ensure you are drilling into the studs.** Drill each hole about 2" into the stud.

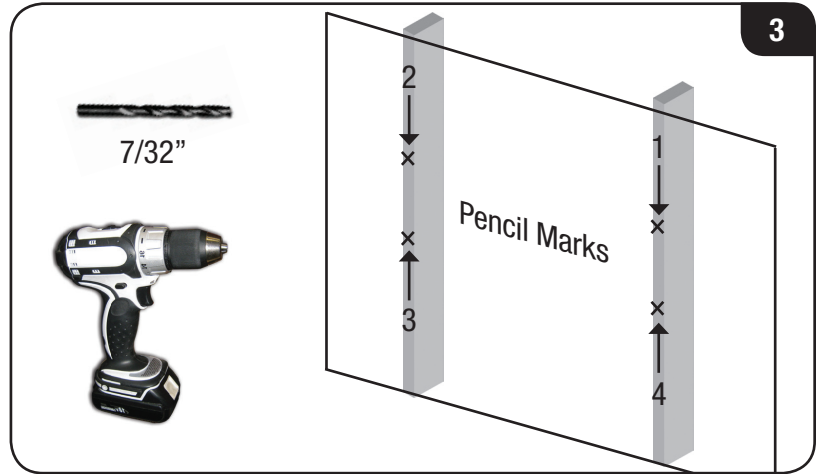


4. Remove **4 lag bolts** and **4 large washers** from the pouch labeled **LAG**.

Place the mount against the wall, and use a wrench to insert the lag bolts and washers into the holes you just drilled. You can make small adjustments before inserting the lag bolts completely.

The mount is attached to the wall.

Go to Step 4 on page 8.

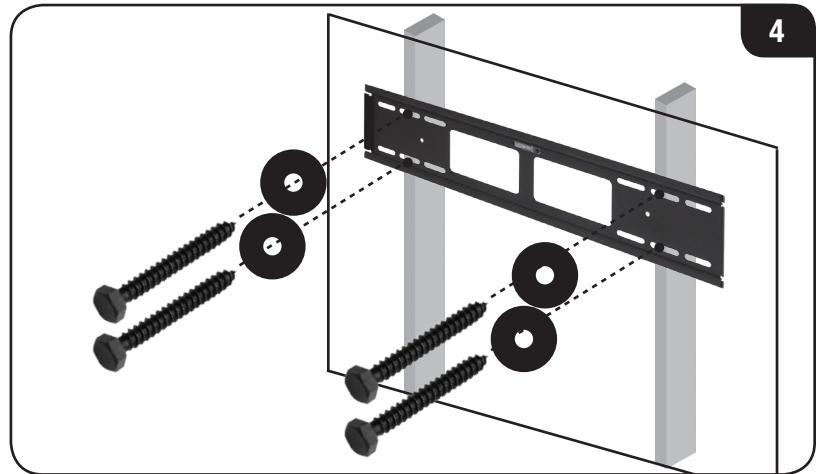

STEP 3B - MOUNTING TO A CONCRETE WALL


1. Hold the mount against the wall

Use the built-in level to level the mount.

When the mount is level, hold it in place and use the pencil to mark the areas inside the slots where bolt holes will be drilled.




Instead of holding the mount against the wall, you can use the included template. Please note: To level the template, you will need a level (not included).

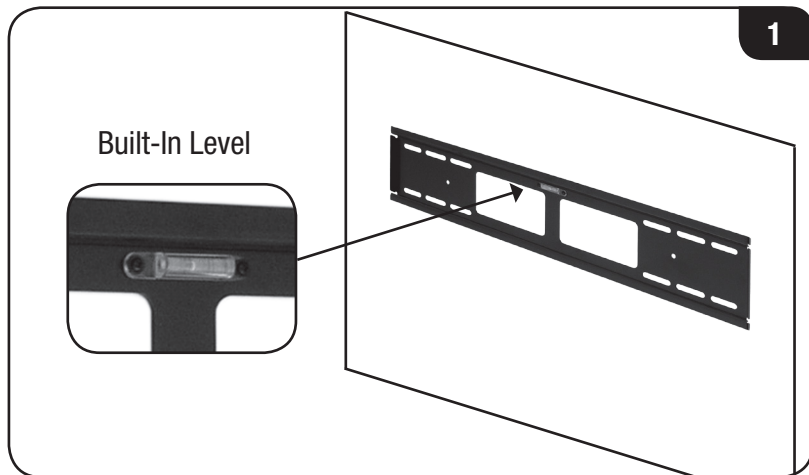


2. Place the mount on the floor.

Using the power drill and the 1/2" drill bit, drill into the pencil marks as shown. Drill about 2 1/2" deep.

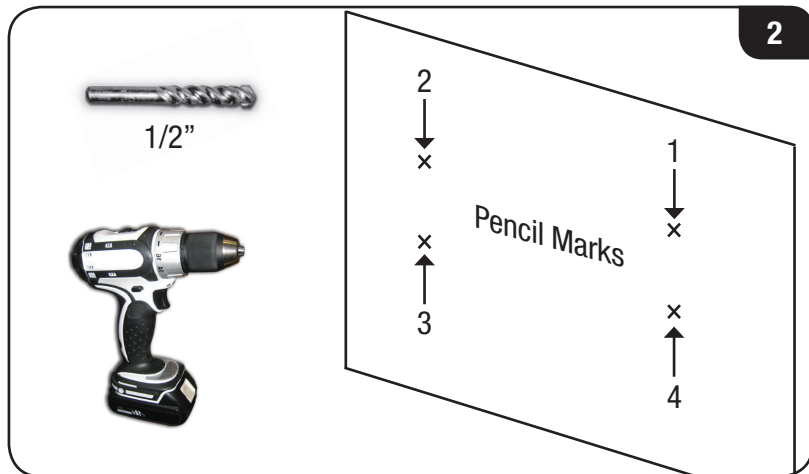

3. Remove **4 anchors** from the pouch labeled **ANCHOR**.

Push the anchors into the holes you just drilled. Ensure the anchors are completely inserted and flush with the wall.

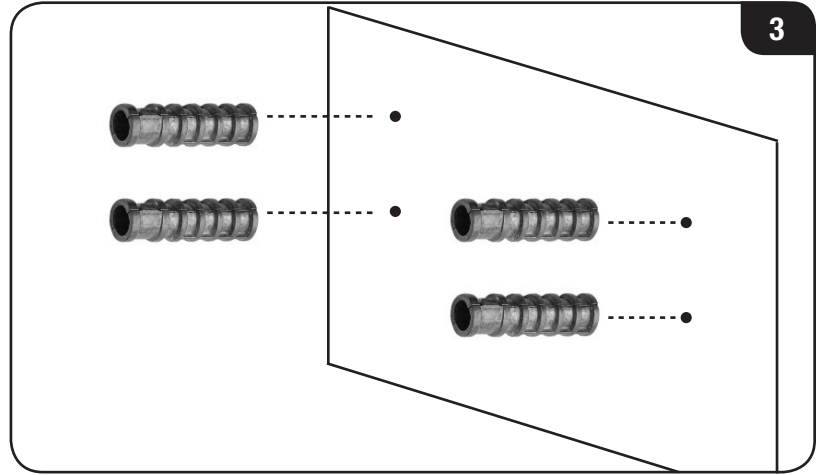


4. Remove **4 lag bolts** and **4 washers** from the pouch labeled **LAG**.

Place the mount against the wall, and use a wrench to insert the lag bolts and washers into the holes you just drilled. You can make small adjustments before inserting the lag bolts completely.

The mount is attached to the wall.

Go to Step 4 on page 8.

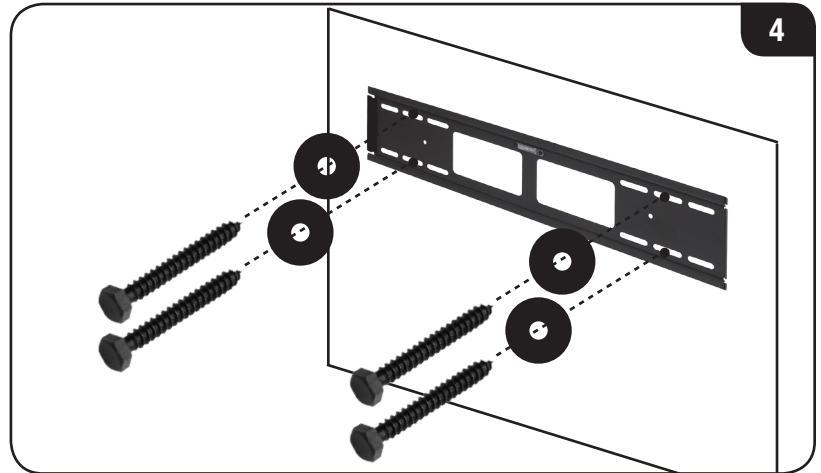


STEP 4 - ATTACHING THE TV BRACKETS

1. Gently place the TV on the floor screen-down. You may want to place a rug or blanket beneath the screen to prevent scratches.


In your TV's User Guide, find the size of your TV's mounting holes. These will be listed as **M4**, **M5**, **M6**, or **M8**.

Open the pouch labeled with the size that matches your TV's mounting holes. If you do not have the User Guide, or the size is not listed, you may have to try several sizes until you find one that fits.

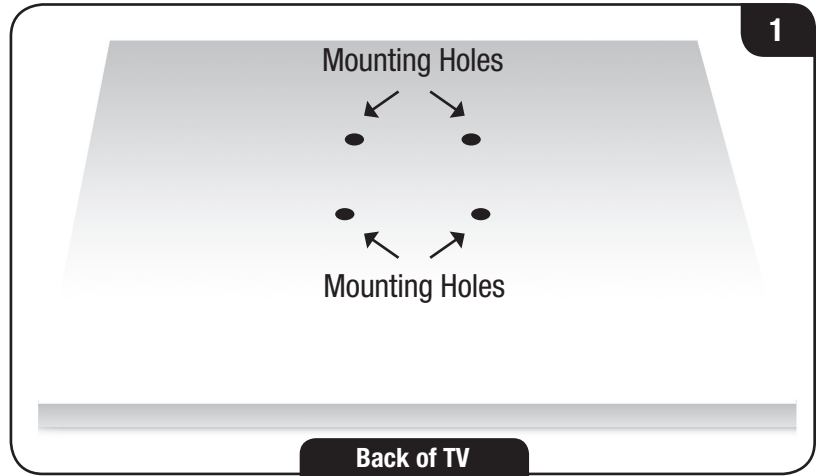

2. Place the brackets against the mounting holes as shown.

Use the **CENTER** mark on the bracket to align the center of the bracket with the horizontal center of your TV,

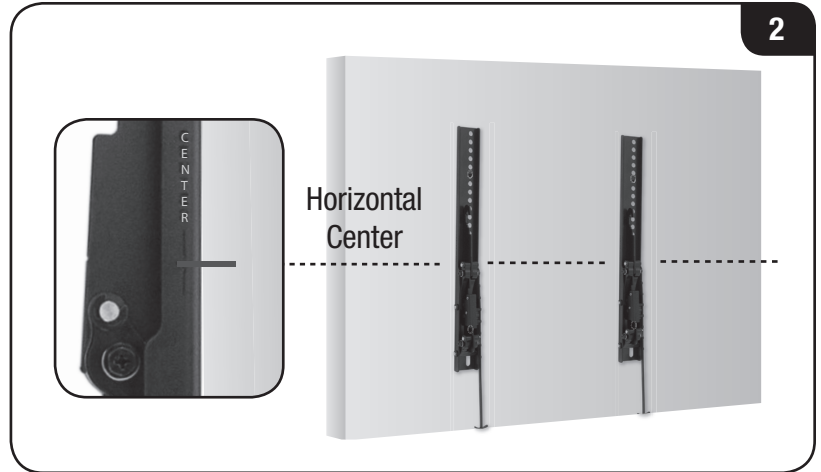

- Using the screwdriver, insert the screws, star washers, and washers as shown.


Because each TV is different, your VIZIO TV mount includes screws of different lengths. Use screws that can be inserted completely.

Do not use a short screw if a longer screw can be inserted completely.




If your TV has a curved back, or if your TV has protruding components, place spacers between the brackets and the mounting holes. The spacers are in the pouch labelled MISC.

3

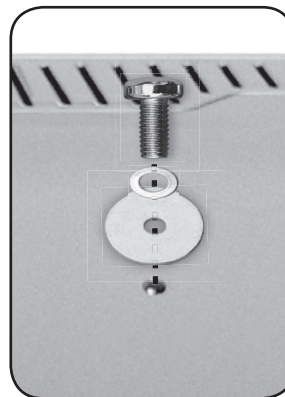


Without Spacer

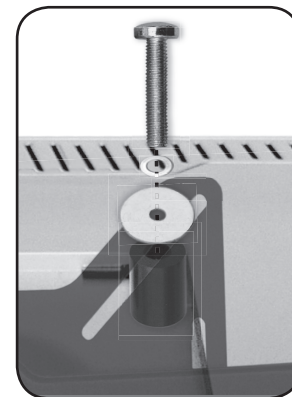

With Spacer

4. To keep the pull-down handles accessible, they should hang near the bottom edge of the TV.

To adjust the pull-down handles, use a screwdriver to remove the 2 philips-head screws from the bracket as shown.

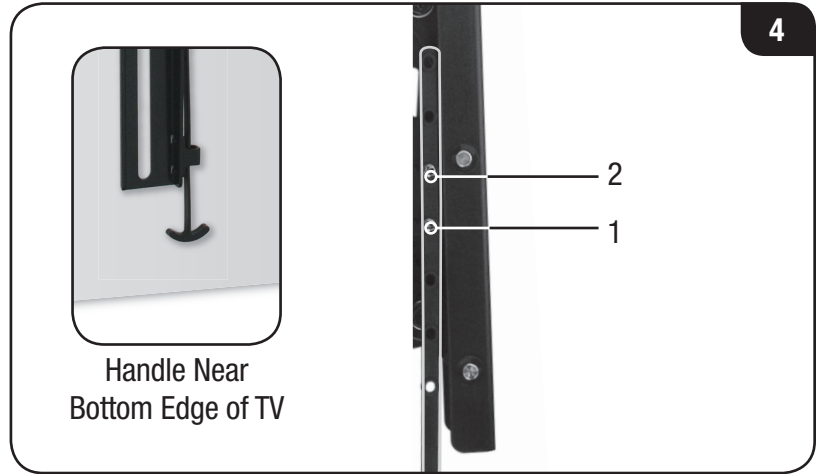


Handle Near
Bottom Edge of TV

5. Reattach the pull-down handles so that they hang near the edge of the TV.

The TV brackets are mounted.

Go to Step 5 on page 11.

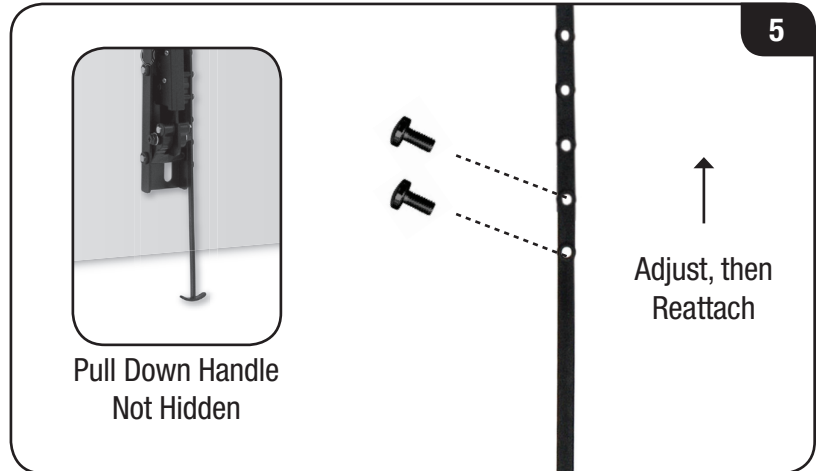

Pull Down Handle
Not Hidden


Adjust, then
Reattach

STEP 5 - HANGING THE TV ON THE MOUNT



This step requires lifting the TV. To prevent injury to yourself or damage to your TV, perform this step with the help of another person.


1. Pull the hooks away from the brackets as shown.

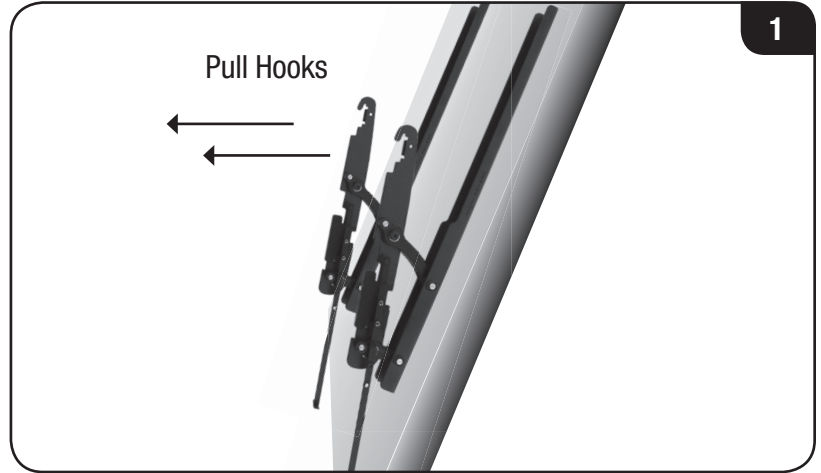

2. **With the help of another person**, lift the TV and hang the brackets on the mount as shown.

The hooks on the brackets hang on the top of the mount.


Allow the back of the TV to rest against the mount.

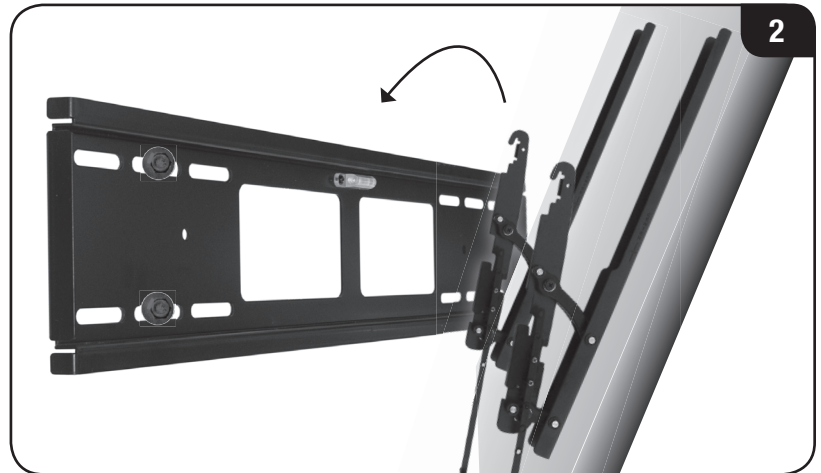

3. Pull down the handles on the brackets. The latches open and the TV rests fully against the mount.


Gently release the handles. The latches close. The bracket is now locked to the mount.

The mount setup is complete.

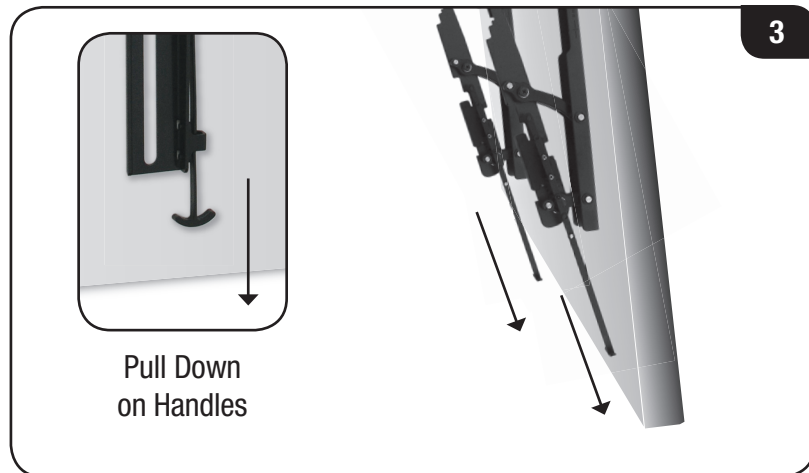

OPTIONAL: Your mount includes an anti-theft device. Attaching this device prevents the TV from being removed from the mount.

To attach the device, complete the setup with the brackets properly locked to the mount. Slide the device over one of the two bracket hooks as shown. Use the locking tool to tighten the security screw through both the device and the bracket.

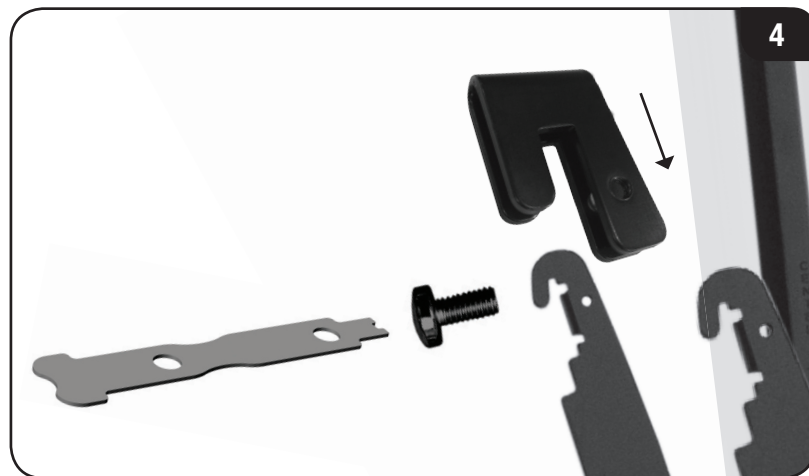

WARRANTY

ON PARTS AND LABOR

Covers units purchased as new in United States and Puerto Rico Only.

VIZIO provides a warranty to the original purchaser of a new Product against defects in materials and workmanship for a period of one year of non-commercial usage and ninety (90) days of commercial use. If a Product covered by this warranty is determined to be defective within the warranty period, VIZIO will either repair or replace the Product at its sole option and discretion.

To obtain warranty service, contact VIZIO Technical Support via e-mail: TechSupport@VIZIO.com or via phone at 877 MY VIZIO (877.698.4946) from 6:00AM to 9:00PM Monday through Friday and 8:00AM to 4:00PM Saturday and Sunday, Pacific Time, or visit www.VIZIO.com. PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO A VIZIO SERVICE CENTER. Proof of purchase in the form of a purchase receipt or copy thereof is required to show that a Product is within the warranty period.

Parts and Labor

There will be no charge for parts or labor during the warranty period. Replacement parts and Products may be new or recertified at VIZIO's option and sole discretion. Replacement parts and Products are warranted for the remaining portion of the original warranty or for ninety (90) days from warranty service or replacement, whichever is greater.

Type of Service

Defective Products must be sent to a VIZIO service center to obtain warranty service. VIZIO is not responsible for transportation costs to the service center, but VIZIO will cover return shipping to the customer. PRE-AUTHORIZATION IS REQUIRED BEFORE SENDING ANY PRODUCT TO A VIZIO SERVICE CENTER FOR WARRANTY SERVICE.

Product returns to VIZIO's service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection. VIZIO Technical Support will provide instructions for packing and shipping the covered Product to the VIZIO service center.

Limitations and Exclusions

VIZIO's one-year limited warranty only covers defects in materials and workmanship. This warranty does not cover, for example: cosmetic damage, normal wear and tear, improper operation, improper voltage supply or power surges, signal issues, damages from shipping, acts of God, any type of customer misuse, modifications or adjustments, as well as installation and set-up issues or any repairs attempted by anyone other than by a VIZIO authorized service center. Products with unreadable or removed serial numbers, or requiring routine maintenance are not covered. This one year limited warranty does not cover Products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. VIZIO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING VIZIO'S NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. VIZIO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, LOSS OF INFORMATION OR DATA, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE. CHECK WWW.VIZIO.COM FOR THE MOST CURRENT VERSION.

TECHNICAL SUPPORT

Products are often returned due to a technical problem rather than a defective product that may result in unnecessary shipping charges billed to you. Our trained support personnel can often resolve the problem over the phone. For more information on warranty service or repair, after the warranty period, please contact our Support Department at the number below.

Customer support and quality service are integral parts of VIZIO's commitment to service excellence. For technical assistance contact our VIZIO Technical Support Department via email or phone. Please have your VIZIO model number, serial number, and date of purchase available before your call.

Address: 39 Tesla
Irvine, CA 92618, USA
Phone: (877) 698-4946
Fax: (949) 585-9563
Email: techsupport@vizio.com
Web: www.vizio.com

Hours of operation:
Monday - Friday: 6 am to 9 pm (PST)
Saturday - Sunday: 8 am to 4pm (PST)

TRADEMARKS SHOWN ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. IMAGES USED ARE FOR ILLUSTRATION PURPOSES ONLY. VIZIO, THE V LOGO, WHERE VISION MEETS VALUE, AND OTHER VIZIO TRADEMARKS ARE THE INTELLECTUAL PROPERTY OF VIZIO INC. PRODUCT FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.
© 2010 VIZIO INC. ALL RIGHTS RESERVED.